


REMOVAL

1. REMOVE REAR SEAT CUSHION, SEATBACK HINGE AND SEATBACK
Torque: 18 N·m (180 kgf-cm, 13 ft-lbf)
2. REMOVE QUARTER TRIM BOARD
3. REMOVE ROOM PARTITION BOARD
4. REMOVE PACKAGE TRAY TRIM AND SIDE COVER
5. REMOVE HIGH MOUNTED STOP LIGHT
6. REMOVE REAR WHEEL
Torque: 103 N·m (1,050 kgf-cm, 76 ft-lbf)
7. REMOVE SHOCK ABSORBER WITH COIL SPRING

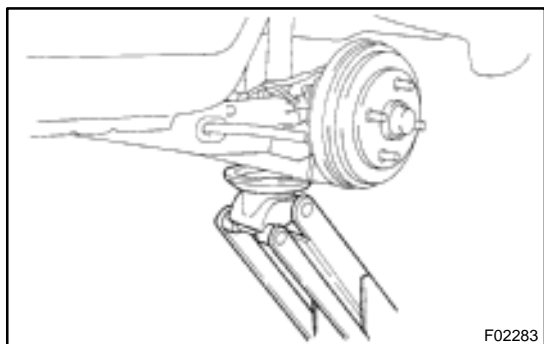

- (a) Support the axle beam with a jack.
- (b) Remove the nut and bolt on lower side of the shock absorber.

Torque: 68 N·m (690 kgf-cm, 50 ft-lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

- (c) Remove the 2 nuts on upper side of the shock absorber.
Torque: 39 N·m (400 kgf-cm, 29 ft-lbf)
- (d) Remove the shock absorber with coil spring.