


REAR WHEEL HUB BOLT REPLACEMENT


SA11V-01

1. **REMOVE BRAKE DRUM WITH AXLE HUB** (See page [SA-42](#))

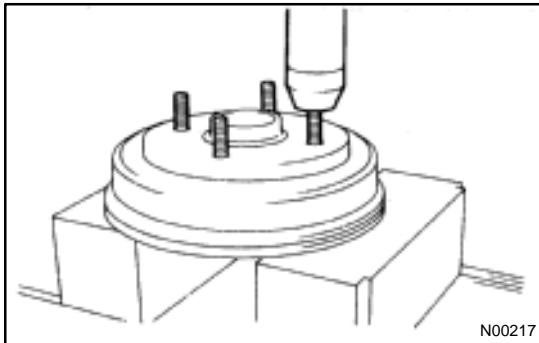

2. **REMOVE HUB BOLT**

Using a press, remove the hub bolt.

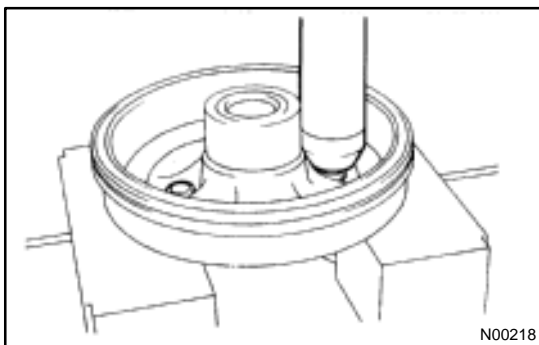

3. **INSTALL HUB BOLT**

Using a press, install a new hub bolt to the axle hub.

4. **INSTALL BRAKE DRUM WITH AXLE HUB** (See page [SA-45](#))