



## INSPECTION

1. DRAIN ENGINE COOLANT
2. REMOVE ECT SENSOR
3. INSPECT ECT SENSOR

Using an ohmmeter, measure the resistance THW and E2 between the terminals.

**Resistance:**

**Refer to the graph**

If the resistance is not as specified, replace the ECT sensor.

4. REINSTALL ECT SENSOR
5. REFILL WITH ENGINE COOLANT