



FUEL CUT RPM INSPECTION

SF0WH-01

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL

- (a) Remove the fuse cover on the instrument panel.
- (b) Connect the TOYOTA hand-held tester or OBDII scan tool to the DLC3.
- (c) Please refer to the TOYOTA hand-held tester or OBDII scan tool operator's manual for further details.

3. INSPECT FUEL CUT OFF PRM

- (a) Increase the engine speed to at least 2,500 rpm.
- (b) Use a sound scope to check for injector operating noise.
- (c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm: 900 rpm

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL