



## REMOVAL

1. **REMOVE FUEL SUCTION TUBE**  
(See page [SF-8](#))
2. **REMOVE FUEL PRESSURE REGULATOR**
  - (a) Remove the clip from the fuel filter.
  - (b) Disconnect the fuel hose from the pressure regulator.
  - (c) Remove the screw, and pull out the pressure regulator.  
**Torque: 2.0 N·m (20 kgf·cm, 17 in.-lbf)**
  - (d) Remove the O-ring from the pressure regulator.

### HINT:

Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.

