



## DISASSEMBLY

1. **DISCONNECT FUEL PUMP CONNECTOR**
2. **REMOVE FUEL PUMP FROM FUEL PUMP BRACKET**
  - (a) Disconnect the ground strap from the fuel pump clamp.
  - (b) Pull off the lower side of the fuel pump from the pump bracket.
  - (c) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.
  - (d) Remove the rubber cushion from the fuel pump.
3. **REMOVE FUEL PUMP CLAMP**
4. **REMOVE FUEL PUMP FILTER FROM FUEL PUMP**
  - (a) Using a small screwdriver, remove the clip.
  - (b) Pull out the pump filter.

### HINT:

Install the pump filter with a new clip.