


REMOVAL

CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE REAR SEAT CUSHION
2. REMOVE FLOOR SERVICE HOLE COVER
3. DISCONNECT FUEL PUMP & SENDER GAUGE CONNECTOR

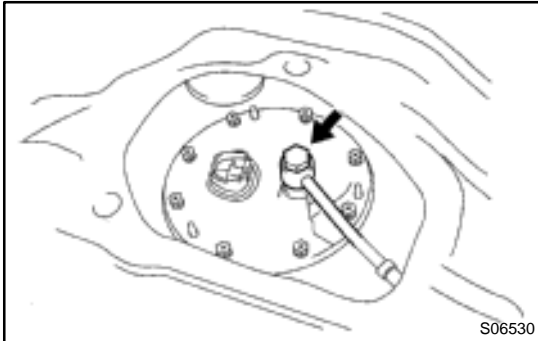

4. DISCONNECT FUEL OUTLET PIPE FROM FUEL SUCTION TUBE

CAUTION:

Remove the fuel filler cap to prevent the fuel from flowing out.

Remove the union bolt and 2 gaskets, and disconnect the outlet pipe from the suction tube.

HINT:


Install the outlet pipe with 2 new gaskets and union bolt.

Torque: 29.5 N·m (300 kgf·cm, 22 ft·lbf)

5. REMOVE FUEL SUCTION w/ PUMP & GAUGE TUBE ASSEMBLY

- (a) Remove the 8 bolts.

Torque: 3.5 N·m (35 kgf·cm, 31 in.-lbf)

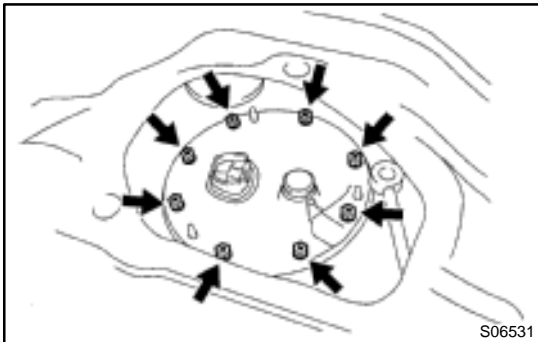

- (b) Pull out the suction w/ pump & gauge tube assembly.

NOTICE:

Do not damage the fuel pump filter. Be careful that the arm of the sender gauge should not bent.

- (c) Remove the gasket from the set plate.

HINT:

Install a new gasket to the set plate.