



## INSPECTION

1. **INSPECT OPERATION OF OXYGEN SENSOR**  
(See page [DI-48](#))
2. **INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR (BANK 1 SENSOR 2)**
  - (a) Remove the passenger's seat.
  - (b) Take out the console box side of the floor carpet.
  - (c) Disconnect the oxygen sensor connector.
  - (d) Using an ohmmeter, measure the resistance between the terminals +B and HT.

**Resistance: 11 – 16  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the sensor.

**Torque: 44 N·m (440 kgf·cm, 32 ft·lbf)**

- (e) Reconnect the oxygen sensor connector.
- (f) Reinstall the floor carpet.
- (g) Reinstall the passenger's seat.