

INSTALLATION

Installation is in reverse order of removal (See page [SF-33](#)).

HINT:

Install the IAC valve with a new gasket.