



REMOVAL

1. REMOVAL THROTTLE BODY

(See page [SF-27](#))

2. REMOVE IAC VALVE

Remove the 4 screws, IAC valve and gasket.

HINT:

Use a new gasket.