



## INSPECTION

### 1. REMOVE IAT SENSOR

### 2. INSPECT IAT SENSOR

Using an ohmmeter, measure the resistance TAW and E2 between the terminals.

**Resistance:**

**Refer to the graph**

If the resistance is not as specified, replace the sensor.

### 3. REINSTALL IAT SENSOR