


REMOVAL


1. DISCONNECT FUEL INLET HOSE FROM DELIVERY PIPE

- Disconnect the engine wire clamp from the No.2 engine hanger.
- Remove the union bolt, 2 gaskets and inlet hose.

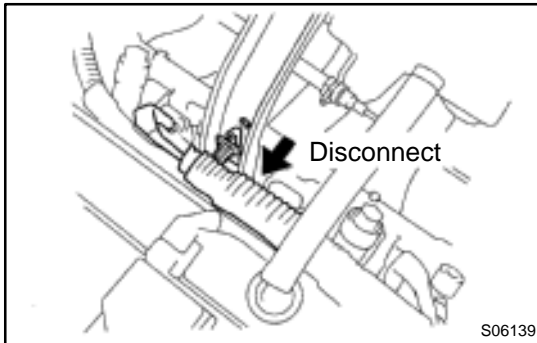

2. DISCONNECT ENGINE WIRE

- Disconnect the engine wire from the air intake chamber stay.
- Disconnect the 4 injector connectors.

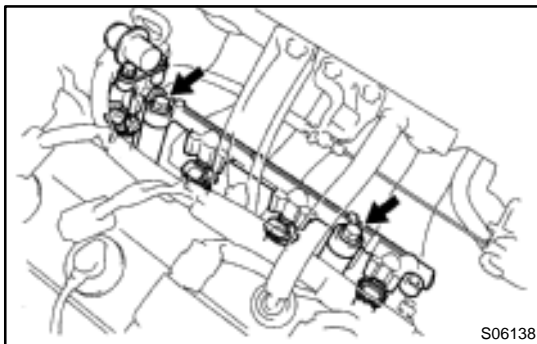

3. REMOVE DELIVERY PIPE WITH INJECTORS

- Remove the 2 bolts and delivery pipe together with the 4 injectors.

NOTICE:

Be careful not to drop the injectors when removing the delivery pipe.

- Pull out the 4 injectors from the delivery pipe.
- Remove the 2 spacers and 4 insulators from the cylinder head.
- Remove the O-ring and grommet from each injector.