


## INSPECTION

### 1. REMOVE KNOCK SENSOR

- (a) Disconnect the knock sensor connector.
  - (b) Using SST, remove the knock sensor.
- SST 09816-30010

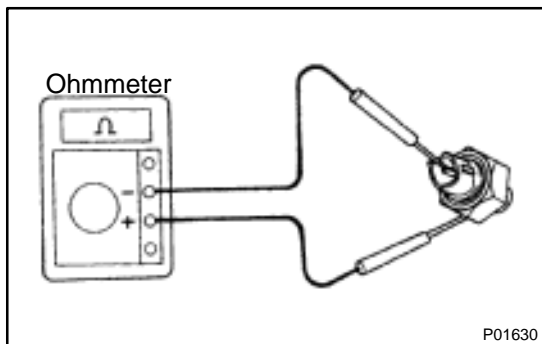

### 2. INSPECT KNOCK SENSOR

Using an ohmmeter, check that there is no continuity between the terminal and body.

If there is continuity, replace the sensor.

### 3. REINSTALL KNOCK SENSOR

**Torque: 45 N·m (450 kgf·cm, 33 ft·lbf)**