



AIR CONTROL VALVE INSPECTION

SR0L9-01

- 1. TURN AIR CONDITIONING SWITCH OFF**
- 2. CHECK IDLE-UP**
 - (a) Start the engine and run it at idle.
 - (b) Fully turn the steering wheel.
 - (c) Check that the engine rpm decreases when the vacuum hose is pinched.
 - (d) Check that the engine rpm increases when the hose is released.