


STARTER RELAY INSPECTION

ST088-01

1. REMOVE RELAY BOX COVER
2. REMOVE STARTER RELAY (Marking: "ST")

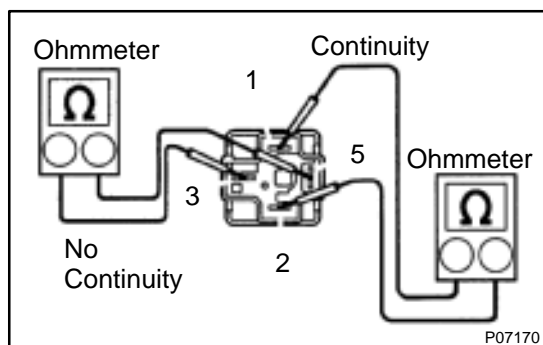


3. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

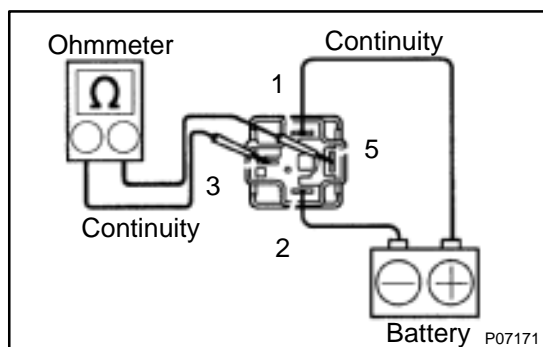

4. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. REINSTALL STARTER RELAY

6. REINSTALL RELAY BOX COVER