


## REMOVAL

### 1. REMOVE AIR CLEANER HOSE

### 2. REMOVE INTAKE MANIFOLD STAY

- (a) Disconnect the engine wire clamps from intake manifold stay.
- (b) Remove the bolt, nut and intake manifold stay.

**Torque: 17.5 N·m (175 kgf·cm, 13 ft·lbf)**

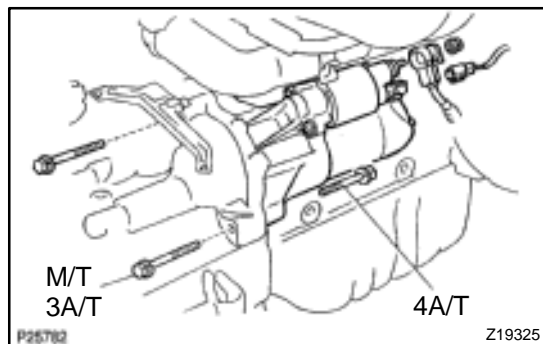

### 3. REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.

**Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)**

- (c) Remove the 2 bolts, wire clamp and starter.

**Torque: 37 N·m (370 kgf·cm, 27 ft·lbf)**