



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

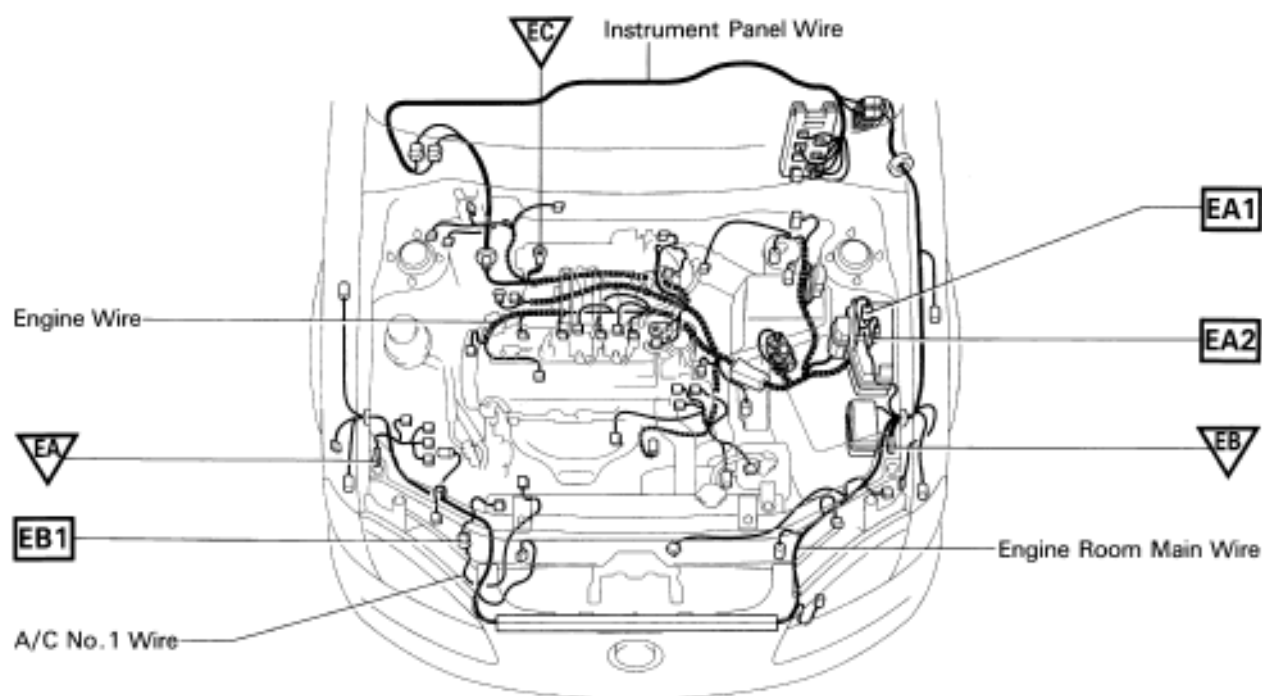

○ : Location of Splice Points

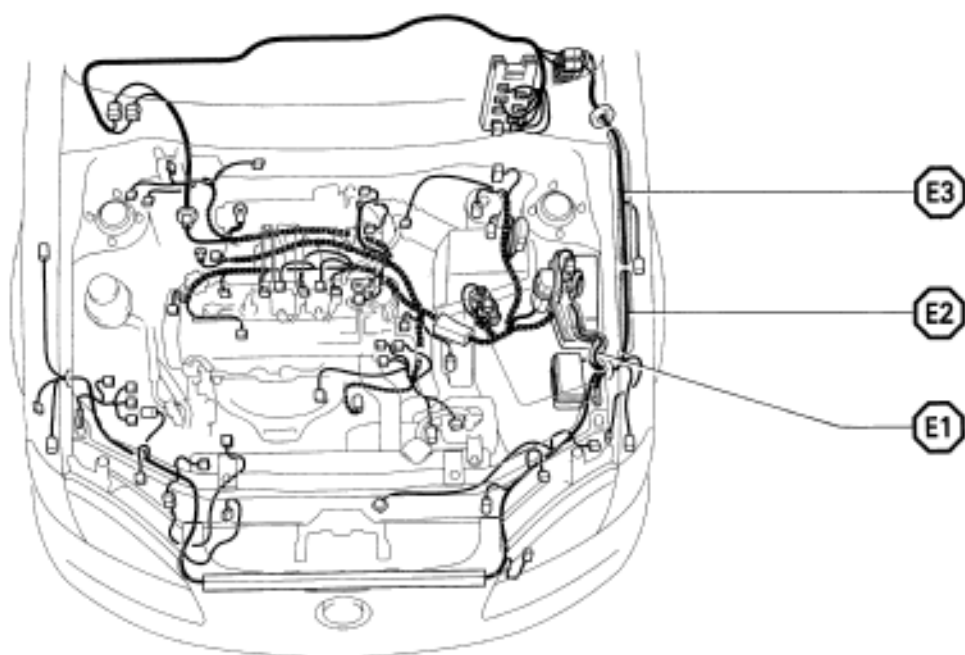


Connector Joining Wire Harness and Wire Harness

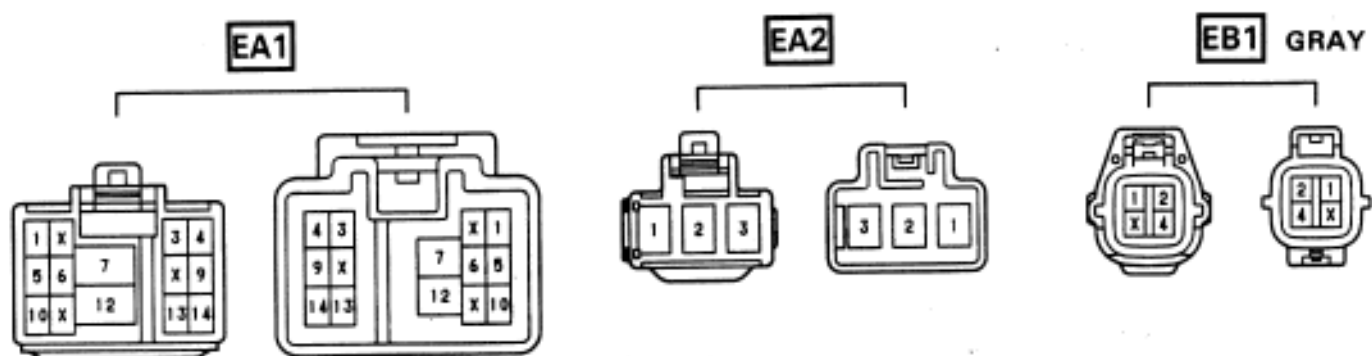


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM MAIN WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
EA2	
EB1	A/C NO.1 WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE RADIATOR SUPPORT RH)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

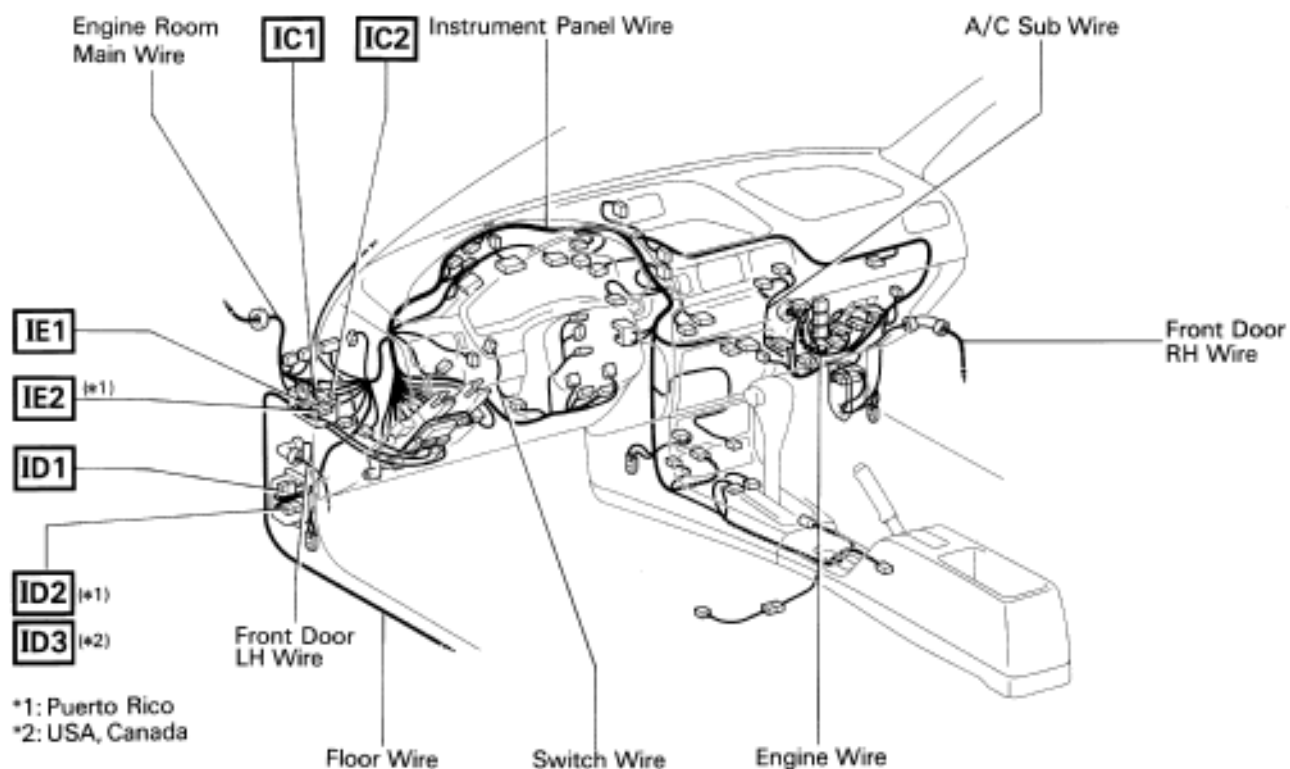

▽ : Location of Ground Points

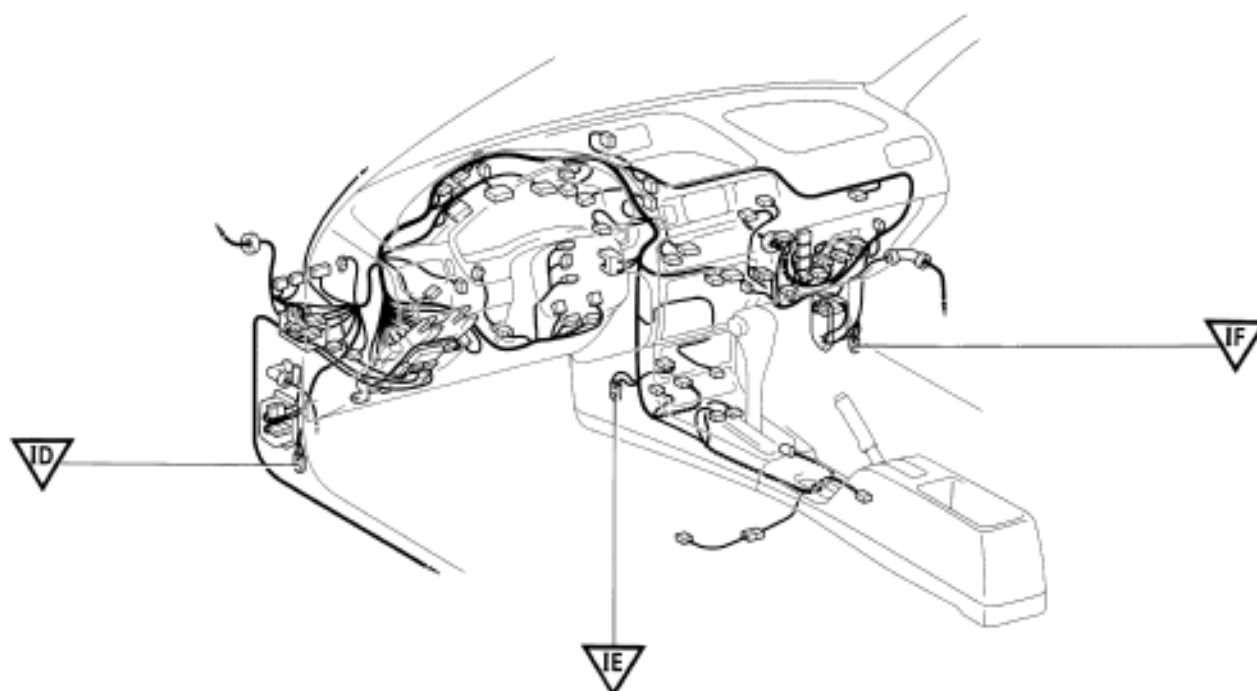


Connector Joining Wire Harness and Wire Harness

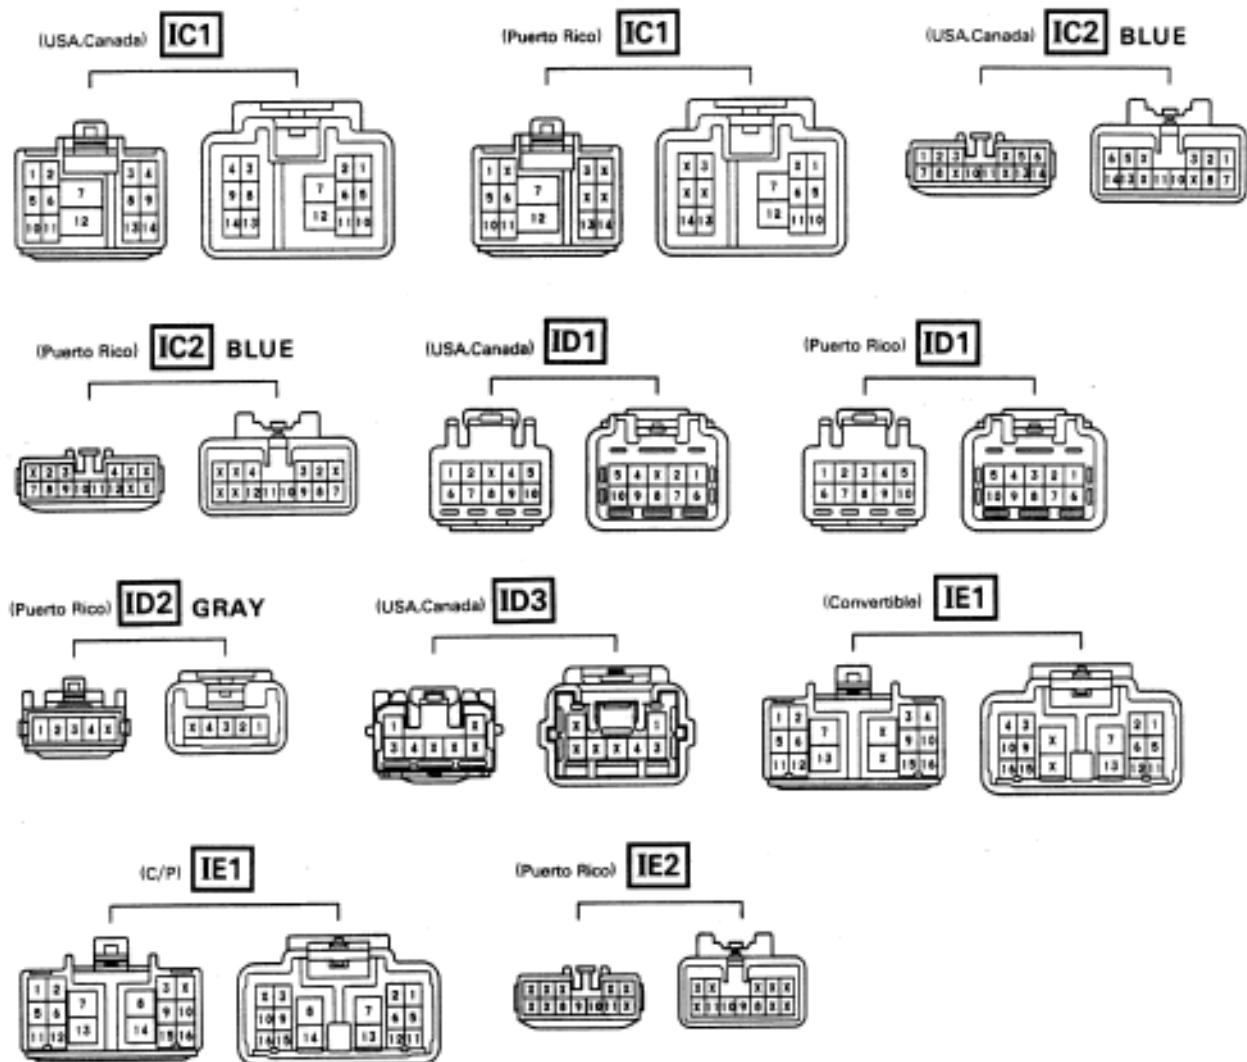


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)
IC2	
ID1	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
ID2	
ID3	
IE1	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

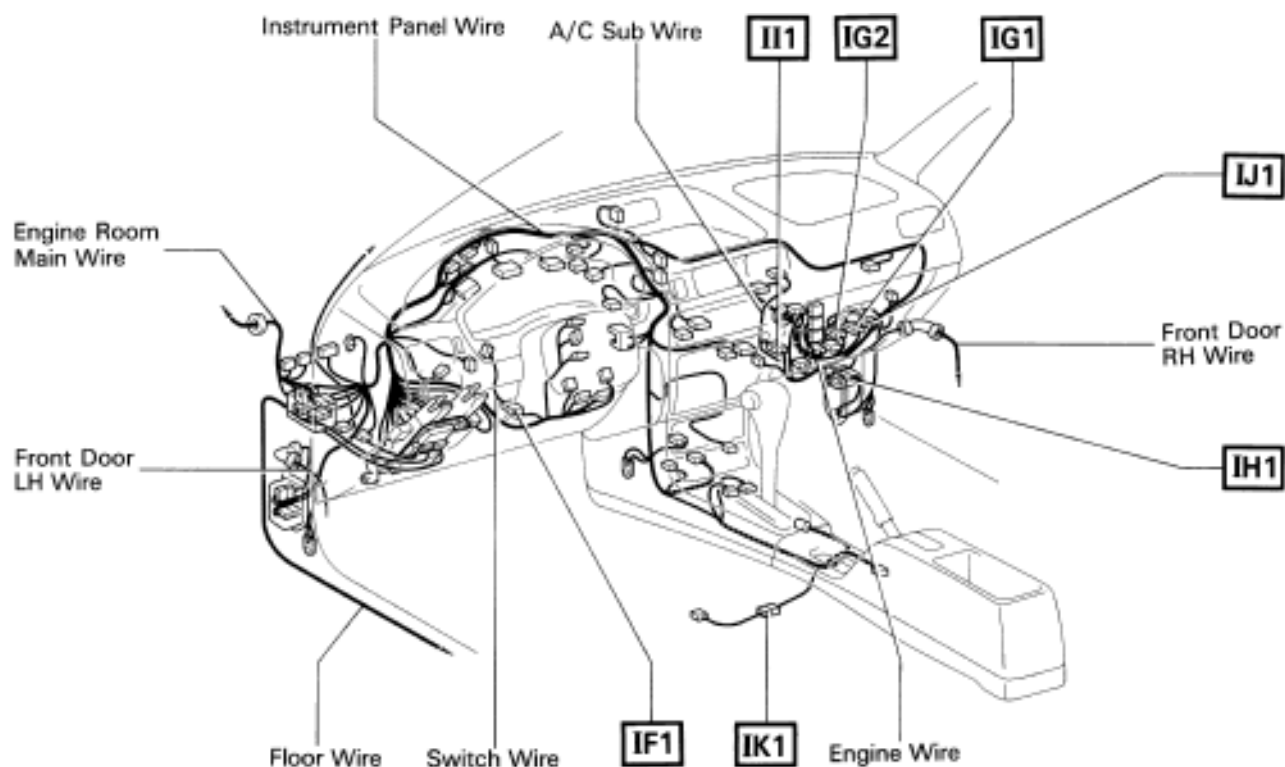

○ : Location of Splice Points

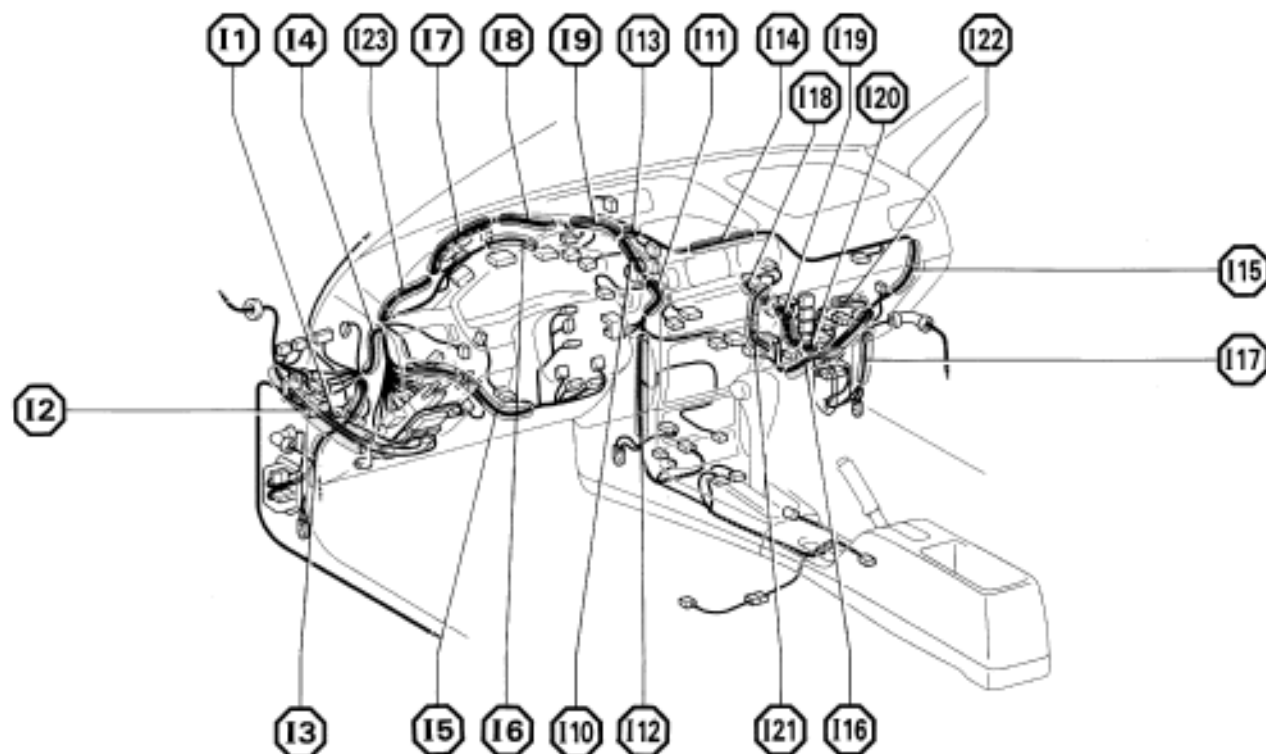

Connector Joining Wire Harness and Wire Harness

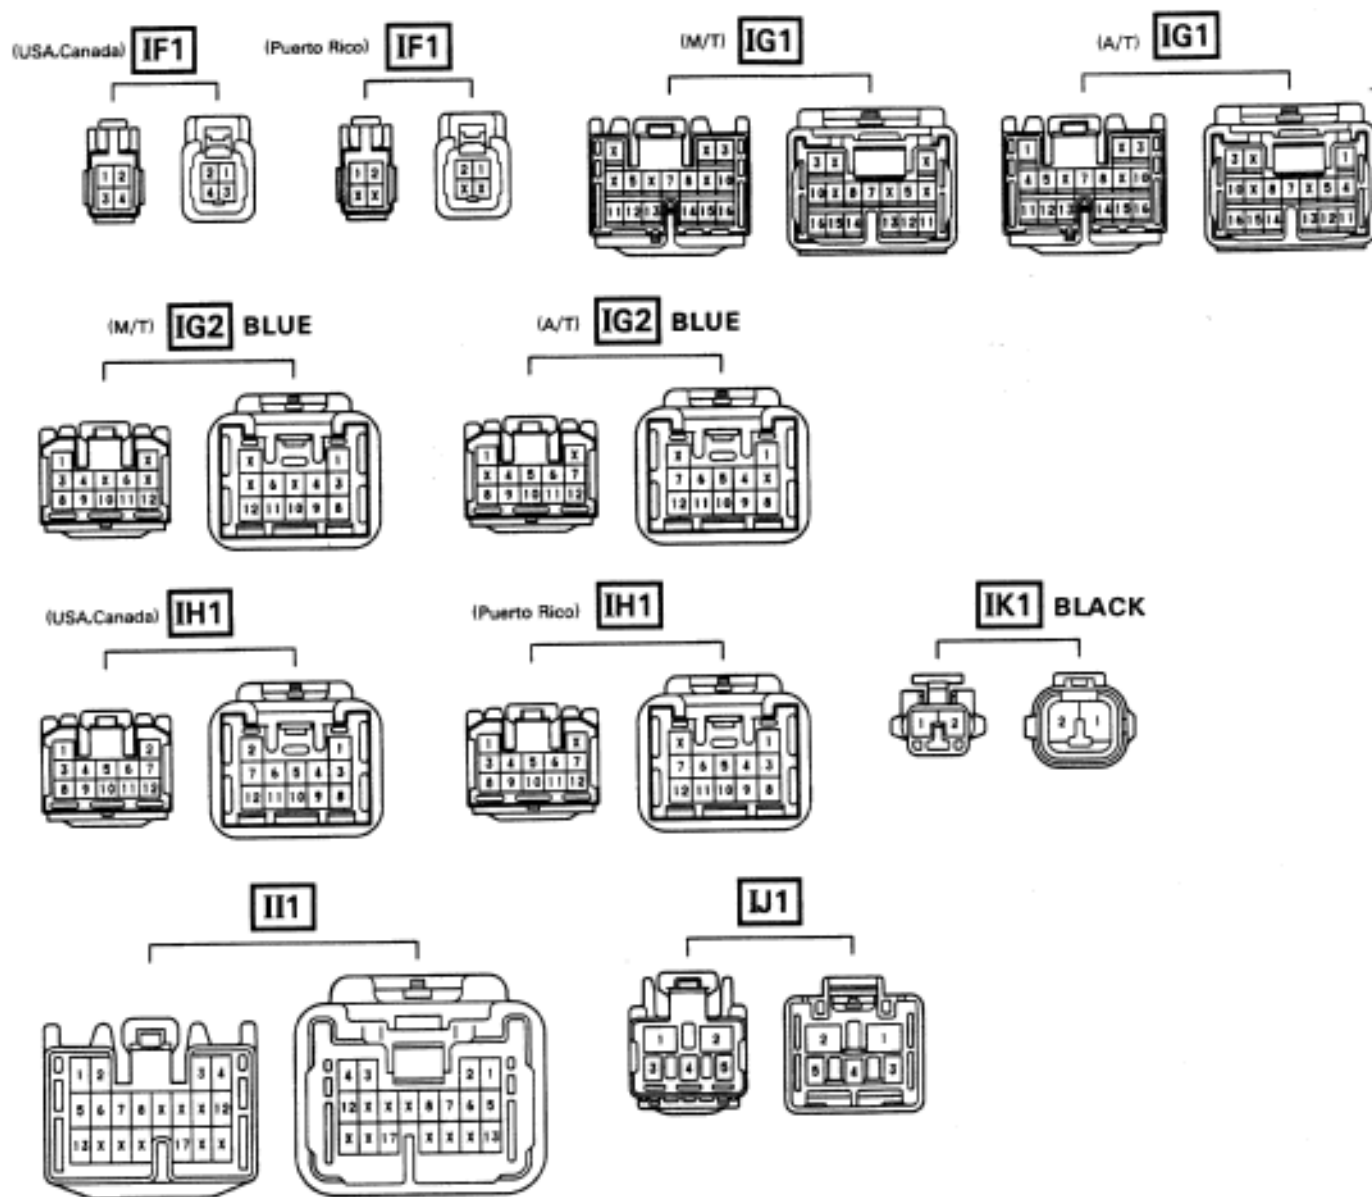


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	INSTRUMENT PANEL WIRE AND SWITCH WIRE (NEAR THE STEERING COLUMN)
IG1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)
IG2	
IH1	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
II1	INSTRUMENT PANEL WIRE AND A/C SUB WIRE (NEAR THE BLOWER UNIT)
IJ1	INSTRUMENT PANEL NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK1	FLOOR NO.3 WIRE AND INSTRUMENT PANEL WIRE (UNDER THE DRIVER'S SEAT)


G ELECTRICAL WIRING ROUTING

▽ : Location of Ground Points


[C/P]

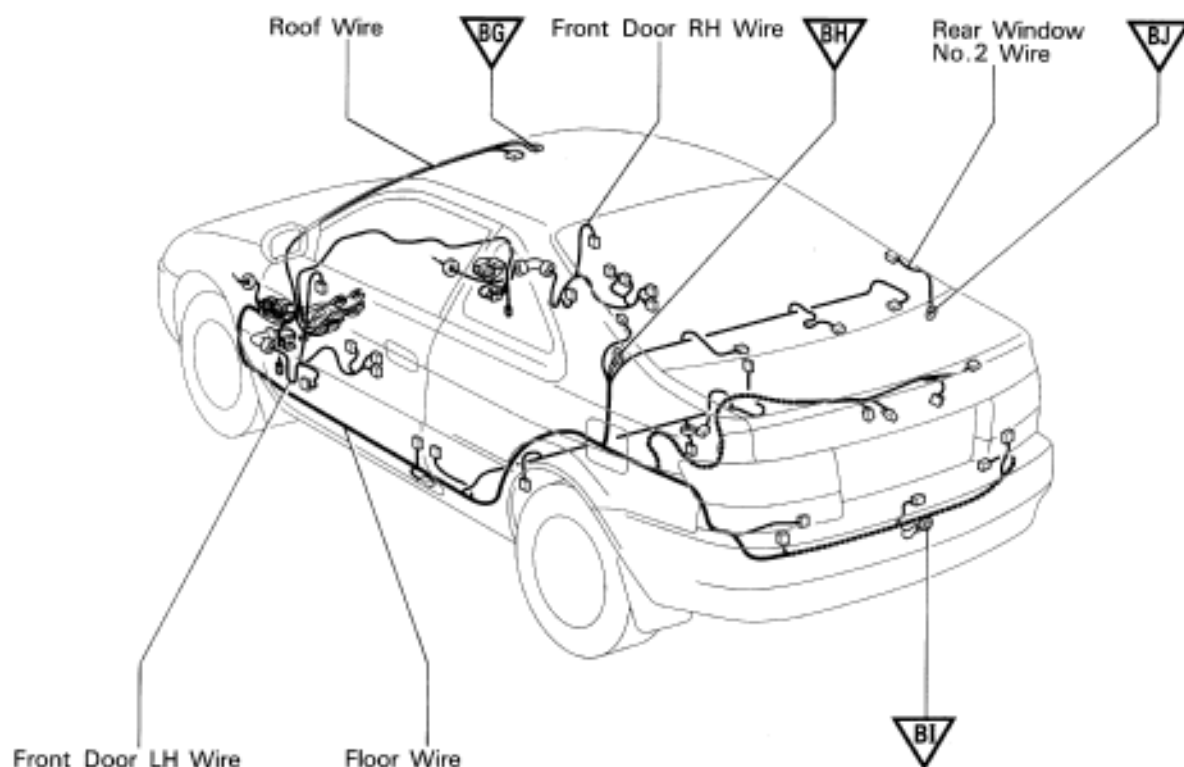

○ : Location of Splice Points

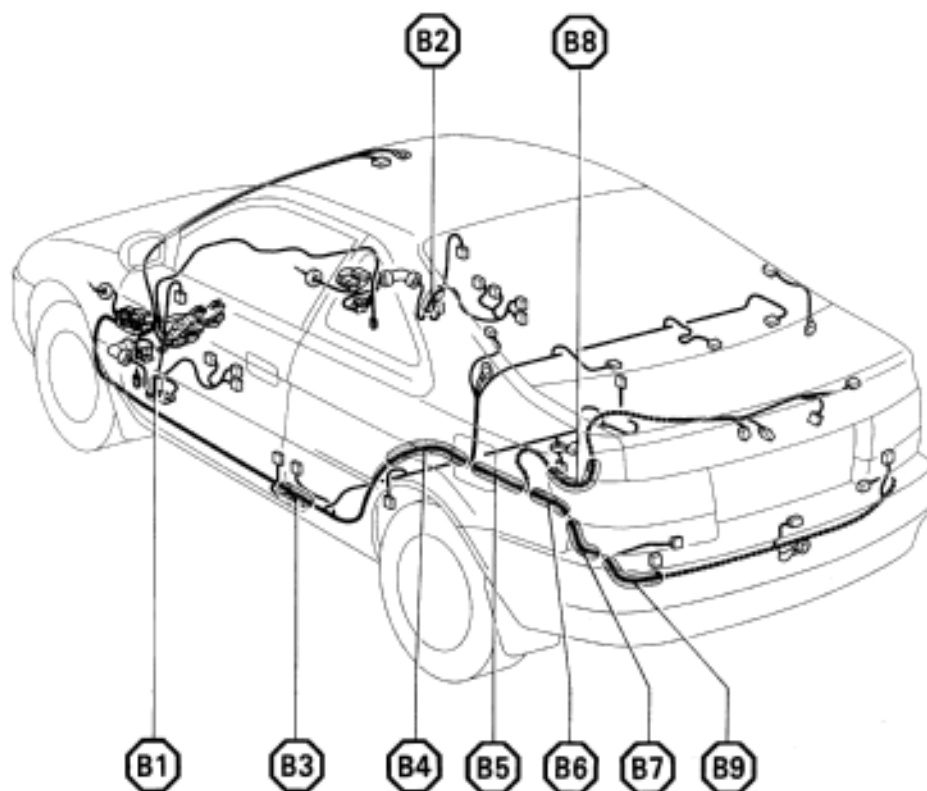

▽ : Location of Ground Points

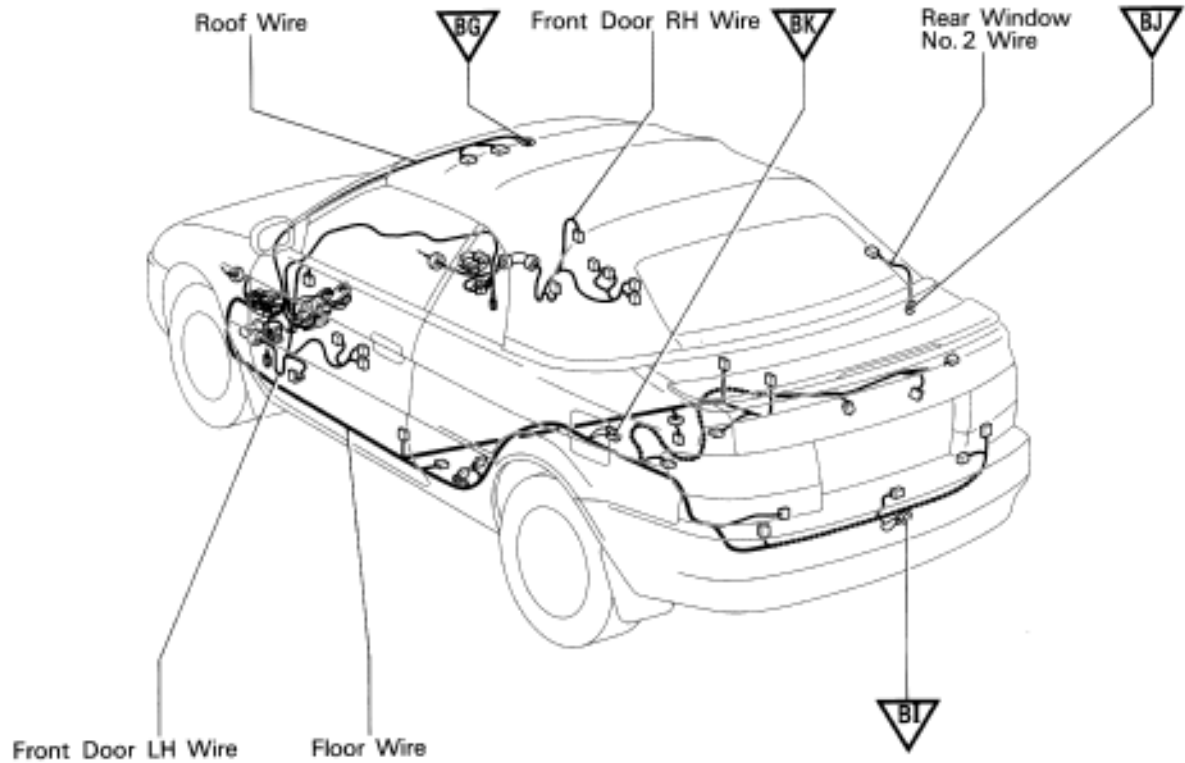

○ : Location of Splice Points

