


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

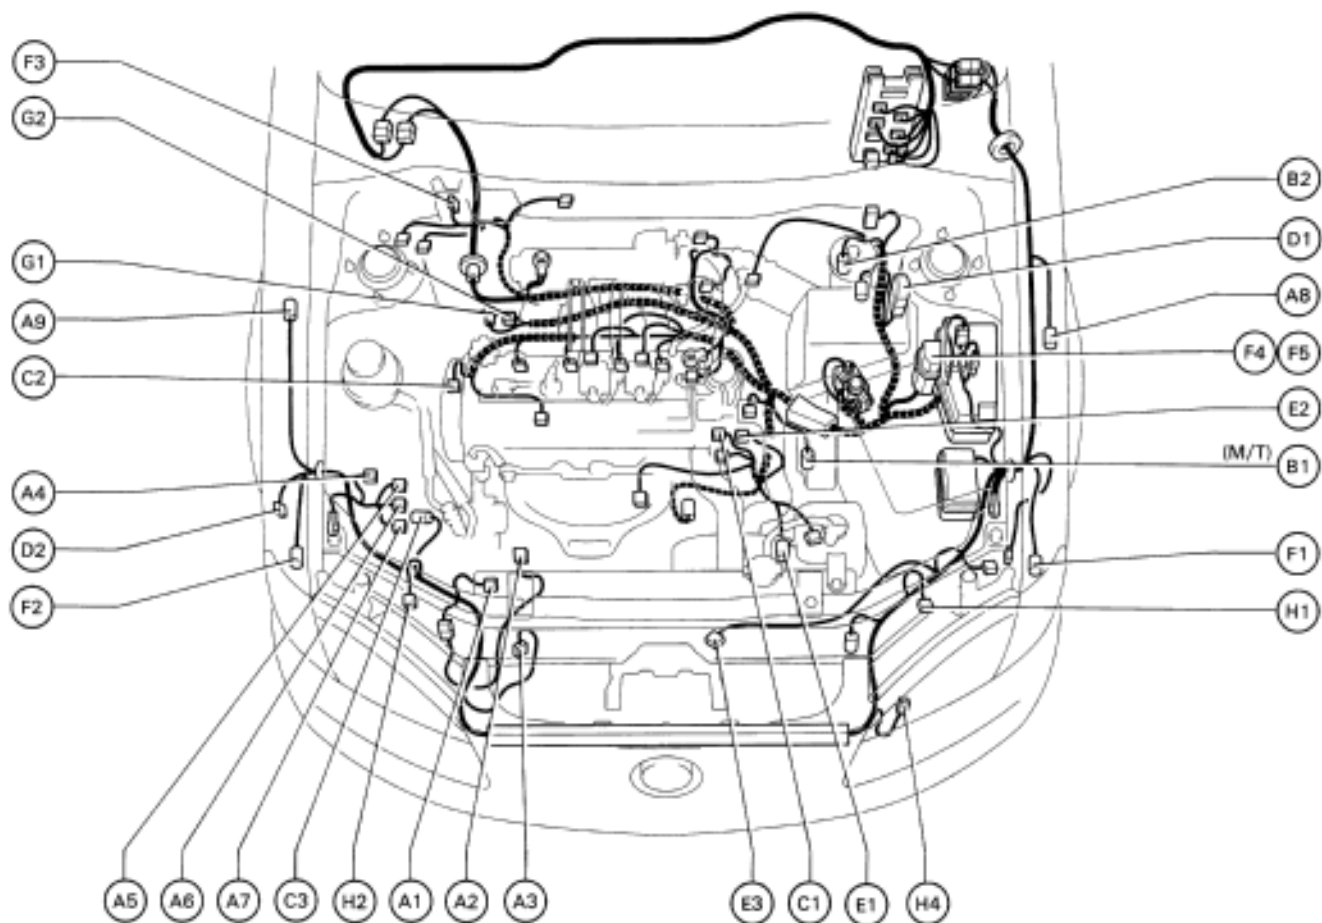

- A 1 A/C Condenser Fan Motor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Triple Pressure SW(A/C Dual and Single Pressure SW)
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Relay
- A 7 ABS Relay
- A 8 ABS Speed Sensor Front LH
- A 9 ABS Speed Sensor Front RH

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Crankshaft Position Sensor
- C 3 Cruise Control Actuator

- D 1 Data Link Connector 1
- D 2 Daytime Running Light Resistor


- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW

- F 1 Front Turn Signal Light and Parking Light LH
- F 2 Front Turn Signal Light and Parking Light RH
- F 3 Front Wiper Motor
- F 4 Fusible Link Block
- F 5 Fusible Link Block

- G 1 Generator
- G 2 Generator

- H 1 Headlight LH
- H 2 Headlight RH
- H 4 Horn

Position of Parts in Engine Compartment

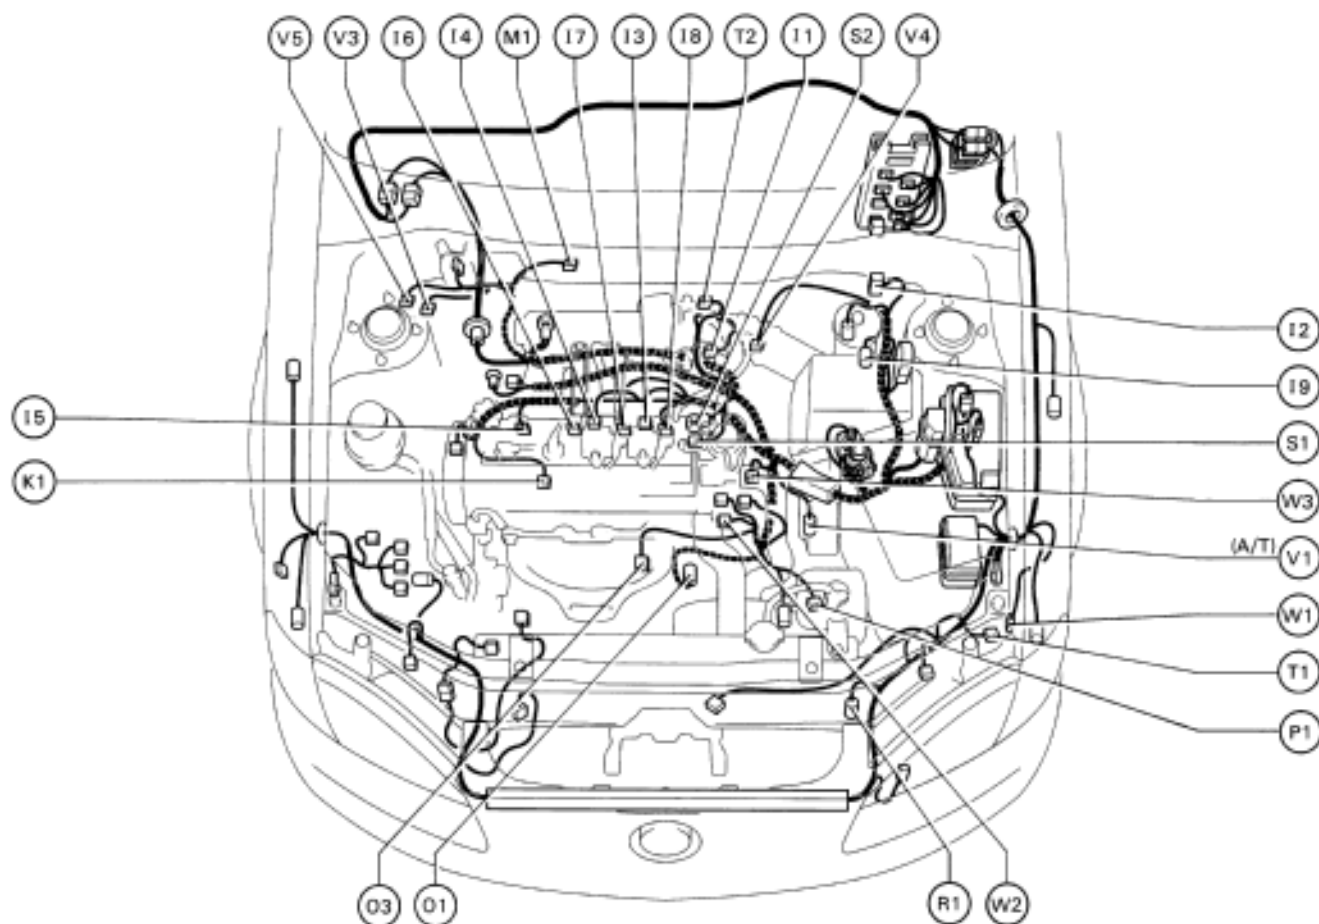

- I 1 Idle Air Control Valve
- I 2 Igniter
- I 3 Ignition Coil No.1
- I 4 Ignition Coil No.2
- I 5 Injector No.1
- I 6 Injector No.2
- I 7 Injector No.3
- I 8 Injector No.4
- I 9 Intake Air Temp. Sensor

- K 1 Knock Sensor

- M 1 Manifold Absolute Pressure Sensor

- O 1 Oil Pressure SW
- O 3 Oxygen Sensor(Bank 1 Sensor 1)

- P 1 Park/Neutral Position SW,A/T Position SW and Back-Up Light SW(A/T)

- R 1 Radiator Fan Motor

- S 1 Starter
- S 2 Starter

- T 1 Theft Deterrent Horn
- T 2 Throttle Position Sensor


- V 1 Vehicle Speed Sensor(Electronically Controlled Transmission)

- V 3 Vapor Pressure Sensor
- V 4 VSV(EVAP)
- V 5 VSV(Vapor Pressure Sensor)

- W 1 Washer Motor
- W 2 Water Temp. Sender
- W 3 Water Temp. SW(Radiator Fan)

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

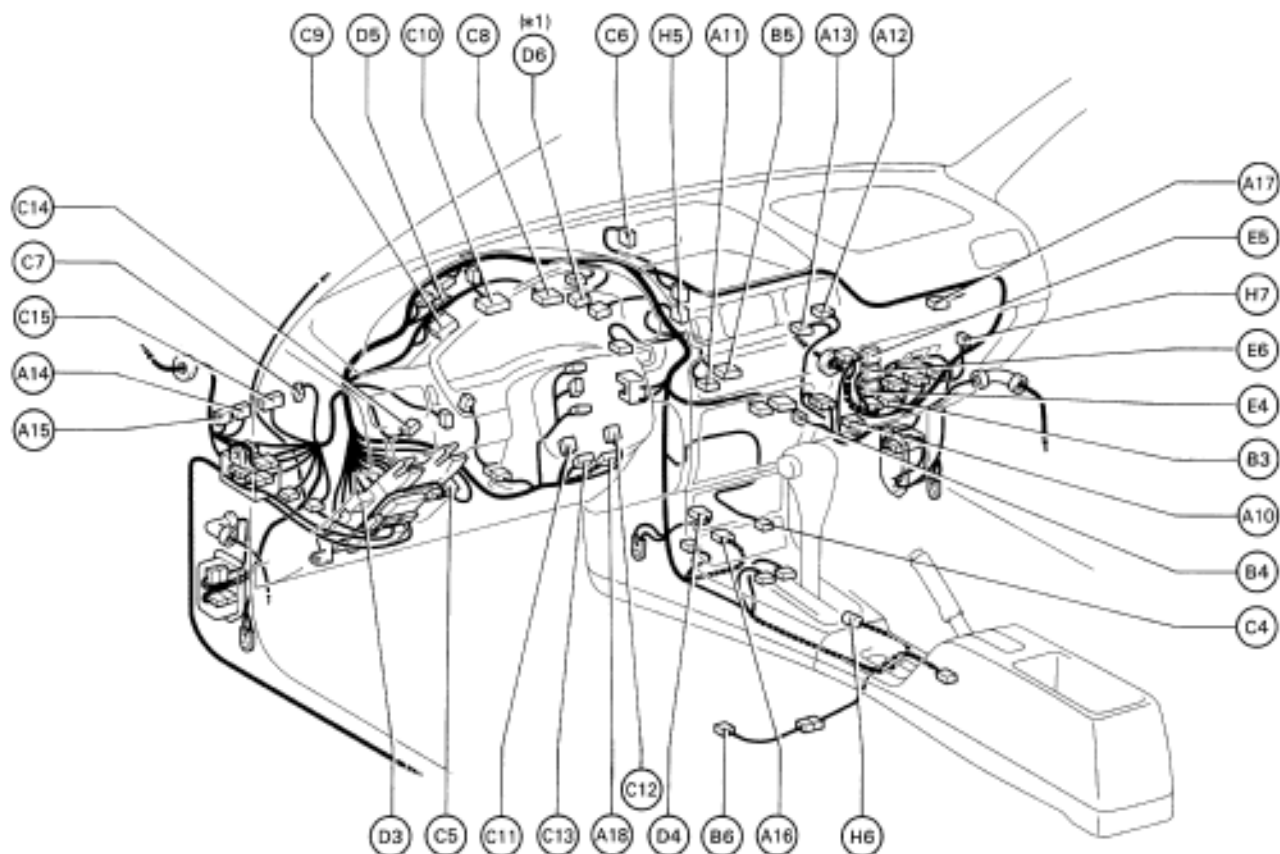

*1: w/o Theft Deterrent System, w/ Door Lock Control

- | | |
|--|---|
| A 10 A/C Amplifier | C 4 Cigarette Lighter |
| A 11 A/C SW | C 5 Circuit Opening Relay |
| A 12 A/C Magnetic Clutch Relay | C 6 Clock |
| A 13 A/C Thermistor | C 7 Clutch Start SW |
| A 14 ABS ECU | C 8 Combination Meter |
| A 15 ABS ECU | C 9 Combination Meter |
| A 16 Airbag Sensor Assembly | C 10 Combination Meter |
| A 17 Airbag Squib(Front Passenger's Airbag Assembly) | C 11 Combination SW |
| A 18 Airbag Squib(Steering Wheel Pad) | C 12 Combination SW |
| | C 13 Combination SW |
| B 3 Blower Motor | C 14 Cruise Control Clutch SW |
| B 4 Blower Resistor | C 15 Cruise Control ECU |
| B 5 Blower SW | |
| B 6 Buckle SW LH | |
| | D 3 Data Link Connector 3 |
| | D 4 Daytime Running Light Relay(Main) |
| | D 5 Diode(Daytime Running Light System) |
| | D 6 Door Lock Control Relay |
| | |
| | E 4 Engine Control Module |
| | E 5 Engine Control Module |
| | E 6 Engine Control Module |
| | |
| | H 5 Hazard SW |
| | H 6 Heated Oxygen Sensor(Bank 1 Sensor 2) |
| | H 7 Heater Relay |

Position of Parts in Instrument Panel

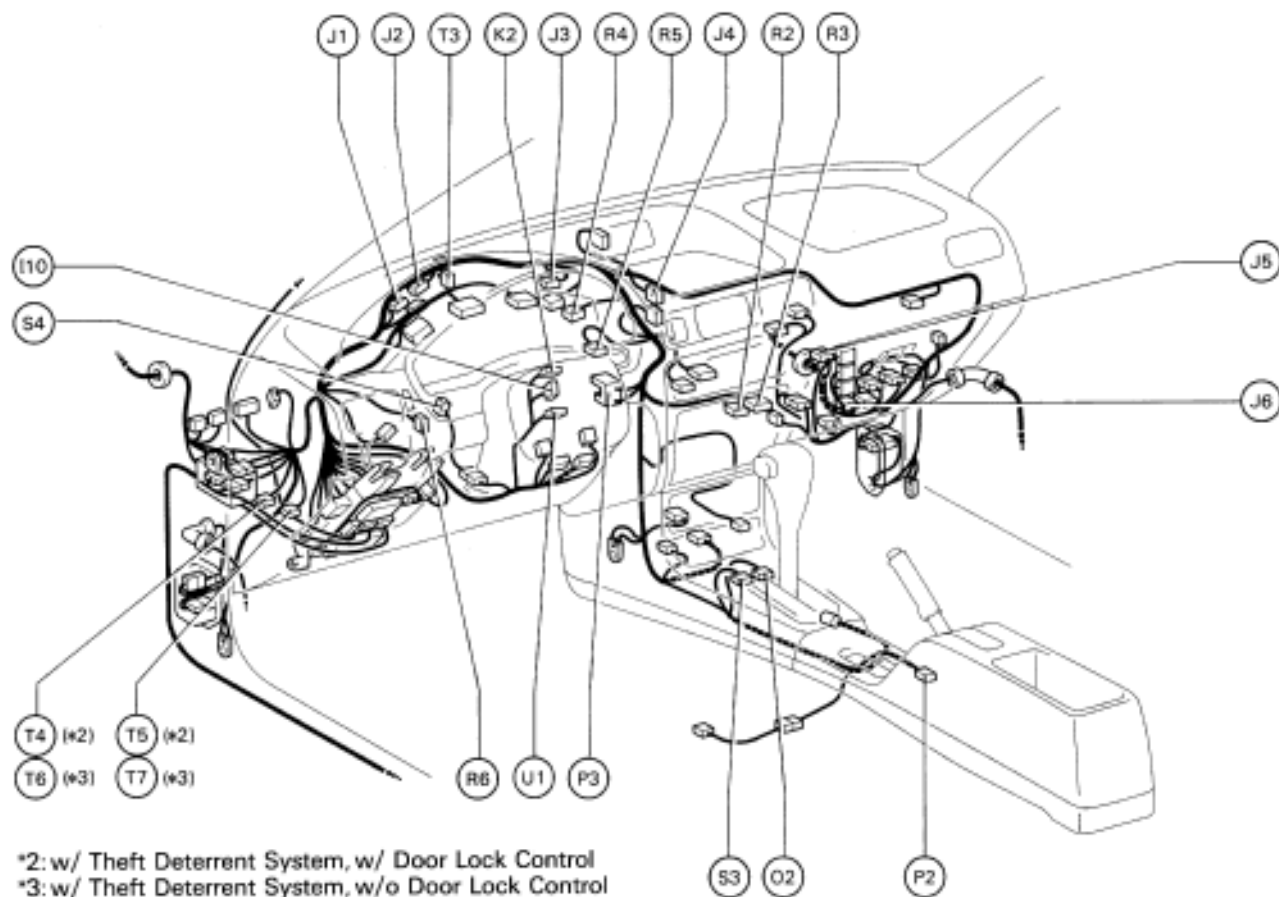

I 10 Ignition SW

J 1 Junction Connector
 J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector

K 2 Key Interlock Solenoid

O 2 O/D Main SW and A/T Shift Lever Illumination

P 2 Parking Brake SW
 P 3 Power Main Relay and Power Fuse

R 2 Radio and Player
 R 3 Radio and Player
 R 4 Rear Window Defogger Relay
 R 5 Rear Window Defogger SW
 R 6 Rheostat

S 3 Shift Lock ECU
 S 4 Stop Light SW


T 3 Turn Signal Flasher
 T 4 Theft Deterrent and Door Lock Control ECU
 T 5 Theft Deterrent and Door Lock Control ECU
 T 6 Theft Deterrent ECU
 T 7 Theft Deterrent ECU

U 1 Unlock Warning SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[C/P]

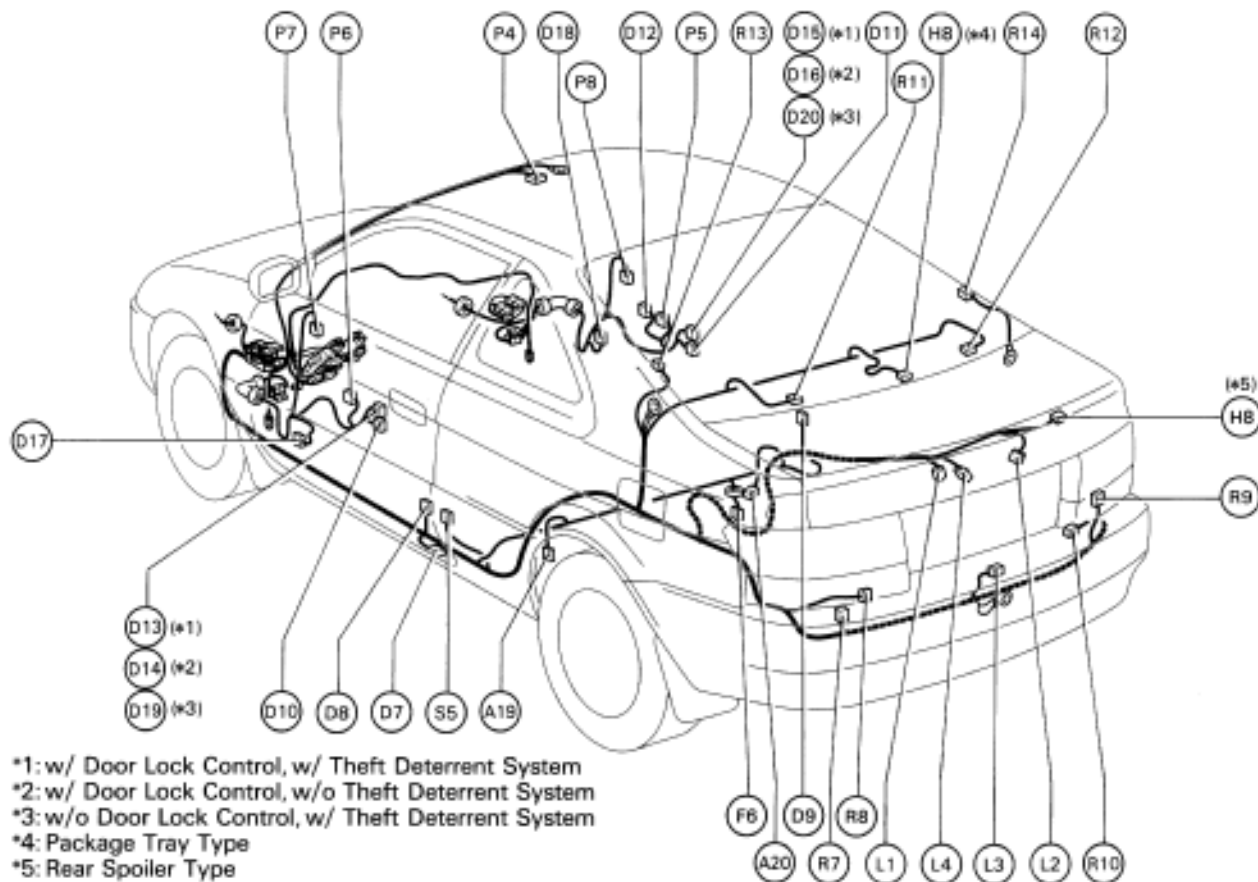

A 19 ABS Speed Sensor Sensor Rear LH
 A 20 ABS Speed Sensor Rear RH

D 7 Diode(Theft Deterrent System)
 D 8 Door Courtesy SW LH
 D 9 Door Courtesy SW RH
 D 10 Door Key Lock and Unlock SW LH
 D 11 Door Key Lock and Unlock SW RH
 D 12 Door Lock Control SW RH
 D 13 Door Lock Motor and Door Unlock Detection SW LH
 D 14 Door Lock Motor and Door Key Lock and Unlock SW LH
 D 15 Door Lock Motor and Door Unlock Detection SW RH
 D 16 Door Lock Motor and Door Key Lock and Unlock SW RH
 D 17 Door Speaker LH
 D 18 Door Speaker RH
 D 19 Door Unlock Detection SW LH
 D 20 Door Unlock Detection SW RH

F 6 Fuel Sender and Pump

H 8 High Mounted Stop Light

L 1 License Plate Light LH
 L 2 License Plate Light RH
 L 3 Luggage Compartment Courtesy SW
 L 4 Luggage Compartment Key Unlock SW

P 4 Personal Light
 P 5 Power Window Control SW RH
 P 6 Power Window Master SW and Door Lock Control SW LH
 P 7 Power Window Motor LH
 P 8 Power Window Motor RH


R 7 Rear Combination Light LH
 R 8 Rear Combination Light LH
 R 9 Rear Combination Light RH
 R 10 Rear Combination Light RH
 R 11 Rear Speaker LH
 R 12 Rear Speaker RH
 R 13 Rear Window Defogger(+)
 R 14 Rear Window Defogger(-)

S 5 Seat Belt Retractor SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[Convertible]

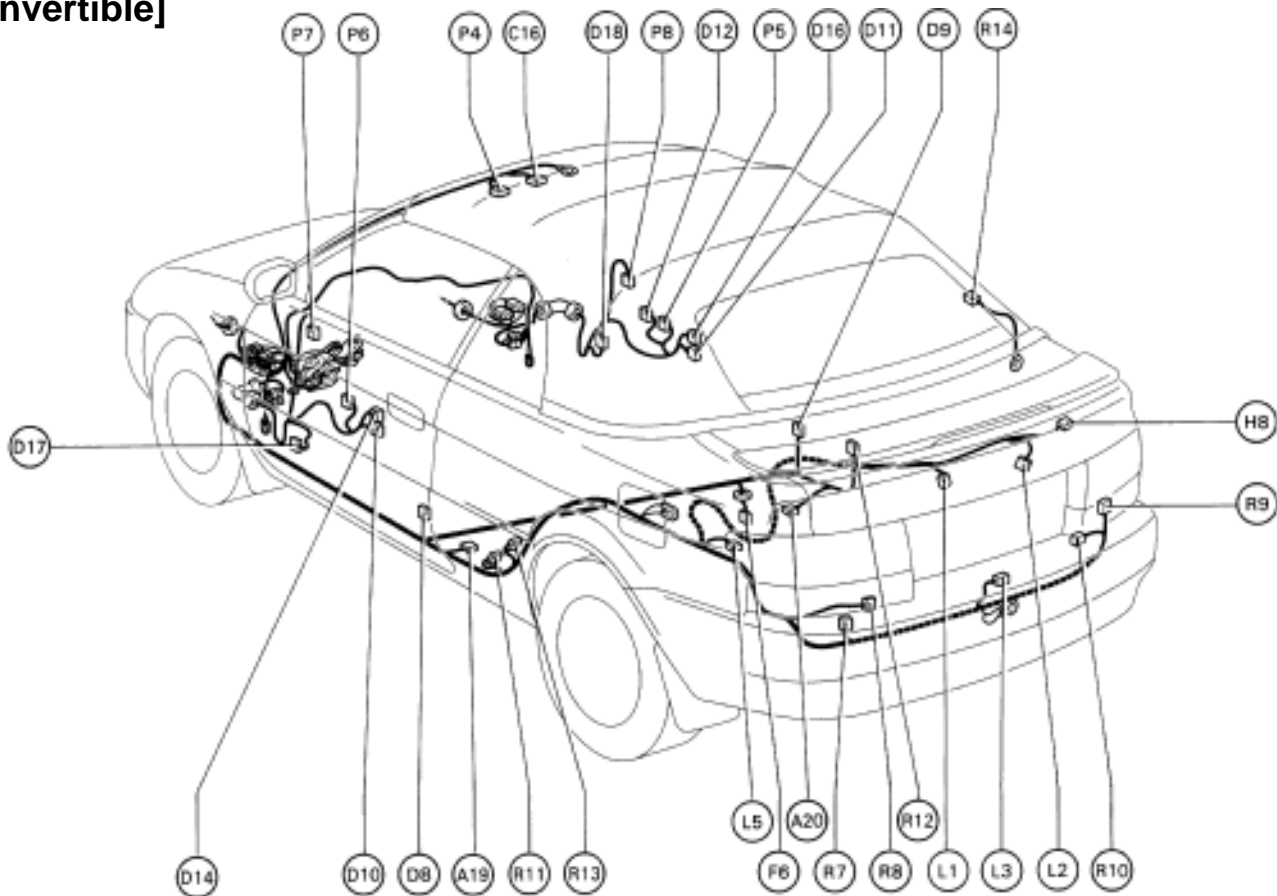

A 19 ABS Speed Sensor Rear LH
A 20 ABS Speed Sensor Rear RH

C 16 Courtesy Light

D 8 Door Courteay SW LH
D 9 Door Courtesy SW RH
D 10 Door Key Lock and Unlock SW LH
D 11 Door Key Lock and Unlock SW RH
D 12 Door Lock Control SW RH
D 14 Door Lock Motor and Door Key Lock and Unlock SW LH
D 16 Door Lock Motor and Door Key Lock and Unlock SW RH
D 17 Door Speaker LH
D 18 Door Speaker RH

F 6 Fuel Sender and Pump

H 8 High Mounted Stop Light

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compation Courtesy SW
L 5 Luggage Compartment Light

P 4 Personal Light
P 5 Power Window Control SW RH
P 6 Power Window Master SW and Door Lock Control SW LH
P 7 Power Window Motor LH
P 8 Power WIndow Motor RH

R 7 Rear Combination Light LH
R 8 Rear Combination Light LH
R 9 Rear Combination Light RH
R 10 Rear Combination Light RH
R 11 Rear Speaker LH
R 12 Rear Speaker RH
R 13 Rear Window Defogger(+)
R 14 Rear Window Defogger(-)