


H POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

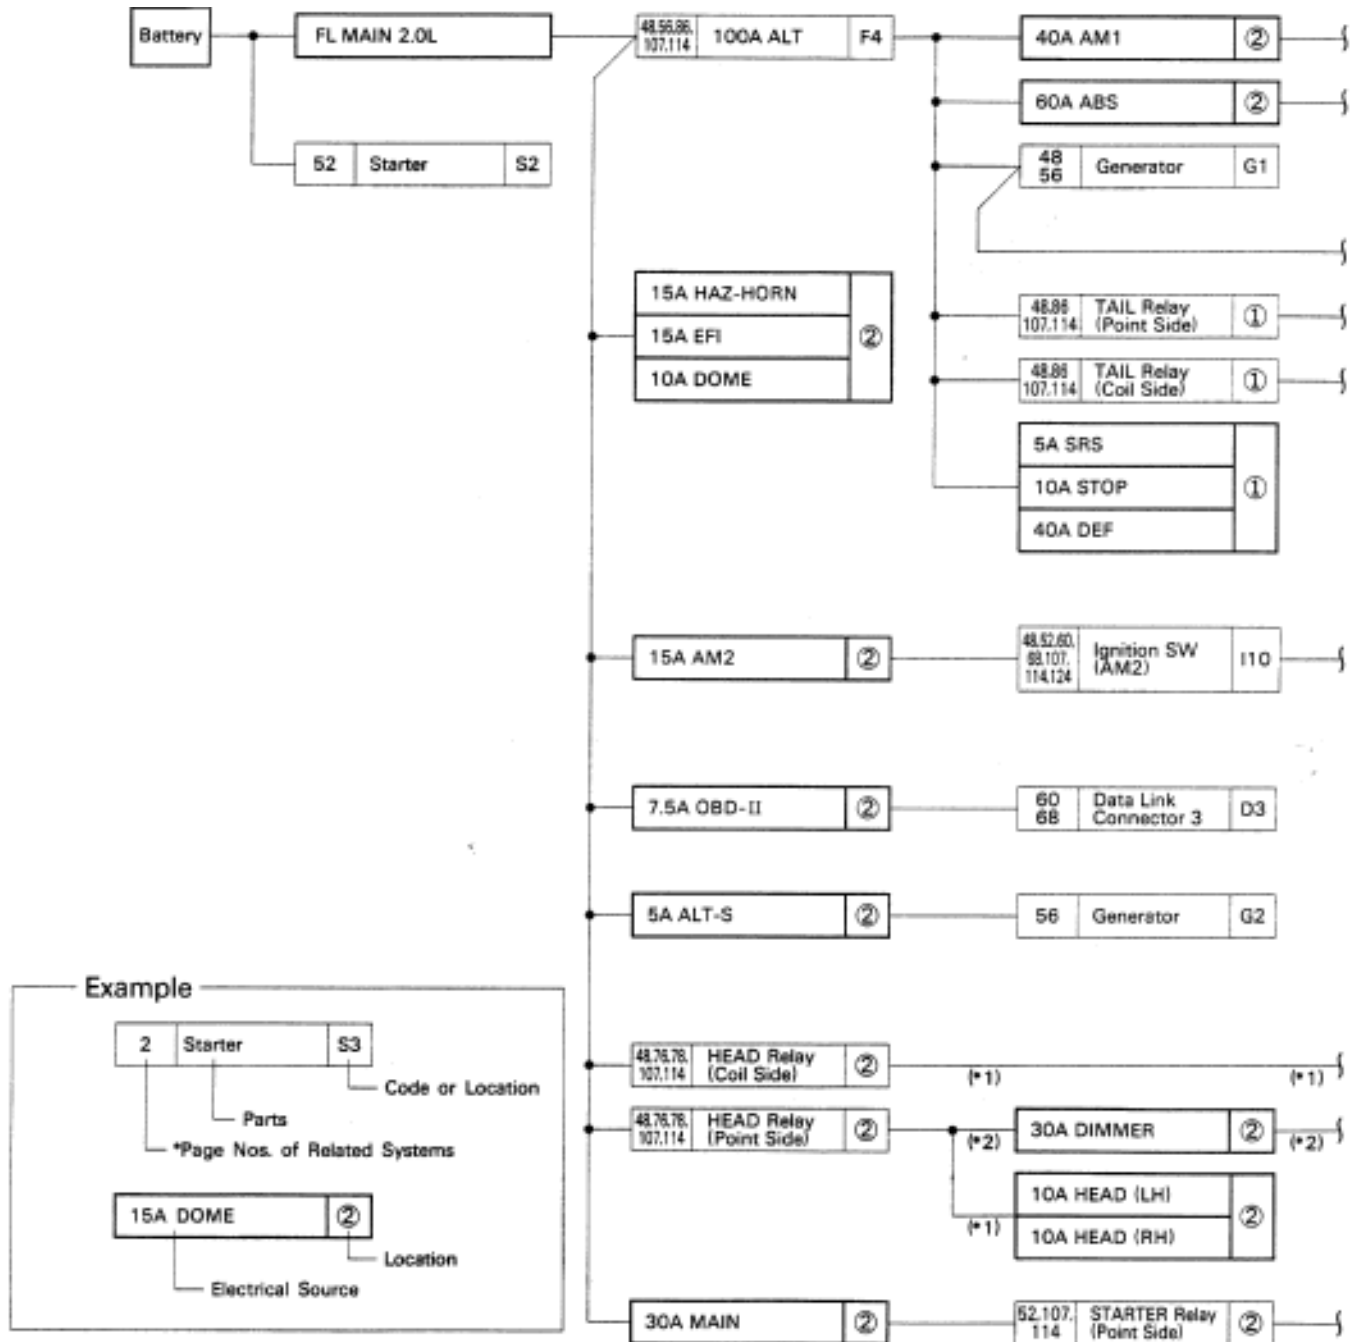

* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: Driver's Side J/B (See Page 20) ②: Engine Room J/B (See Page 22)
 ③: Engine Room R/B No.5 (See Page 23) ④: Power Fuse (P3 See Page 27)

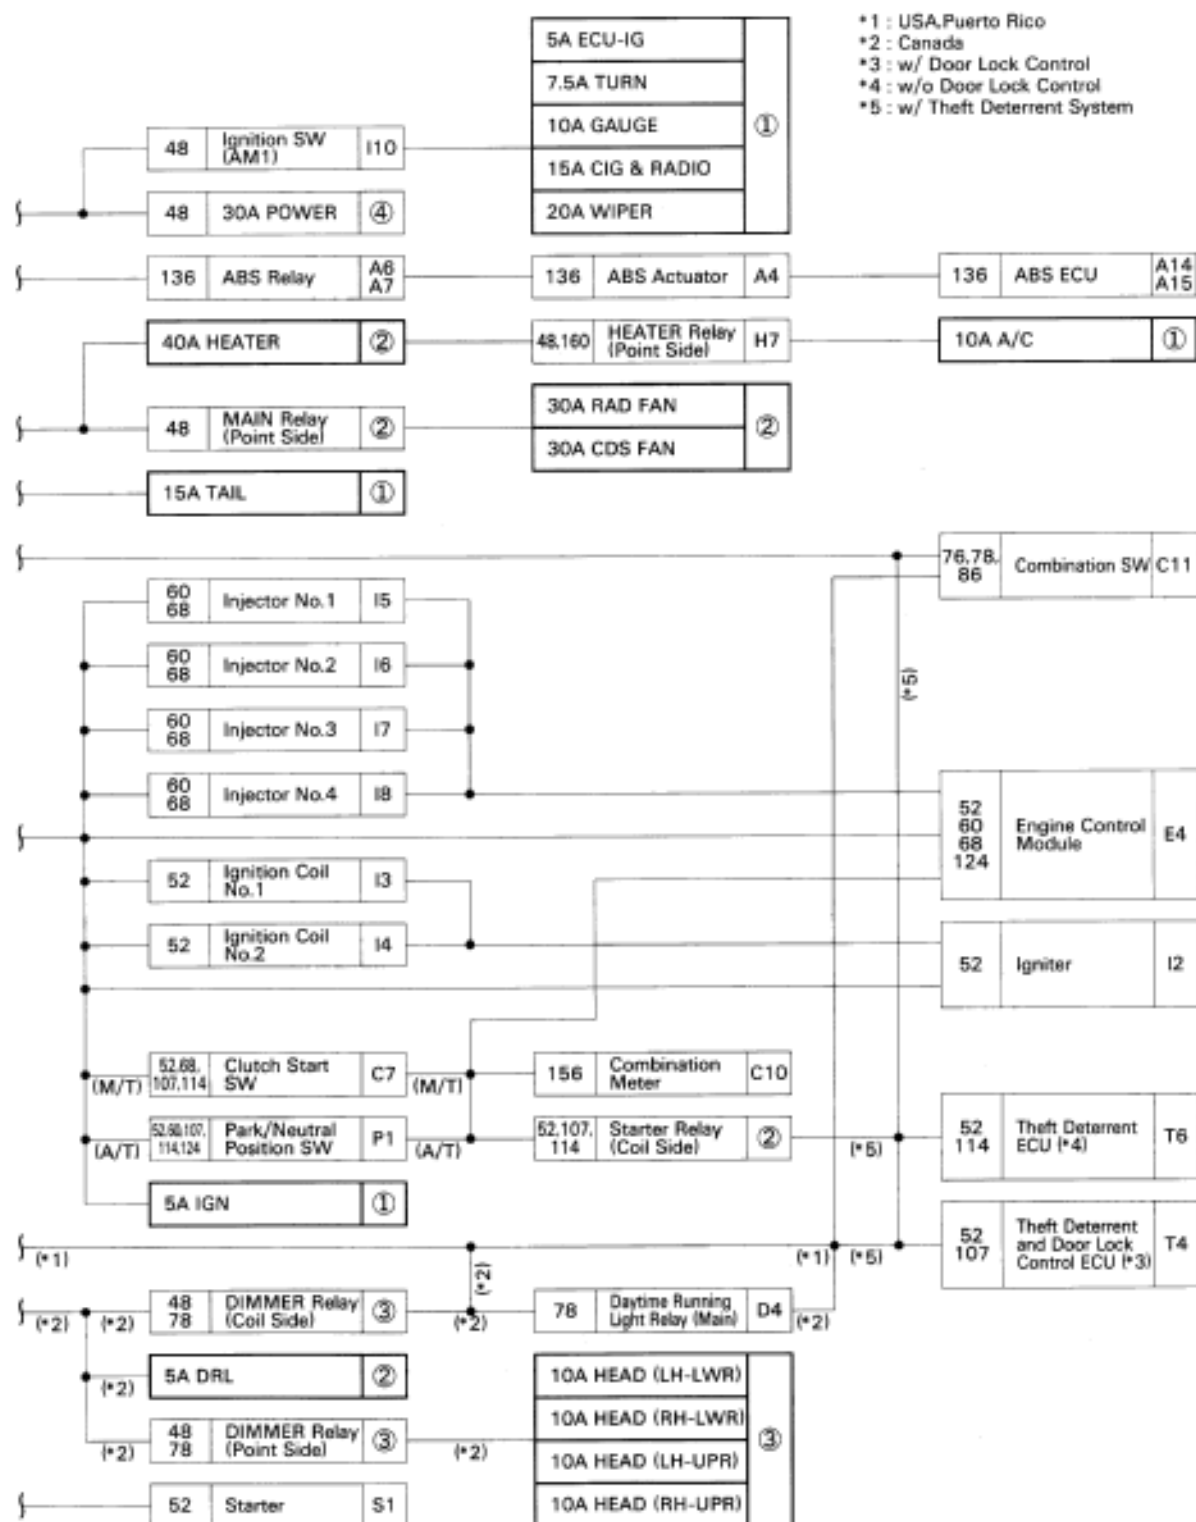

H POWER SOURCE (Current Flow Chart)

*1: US/Australia/EU
*2: Canada

*Page Nos. of Related Systems			160	160	160	136	136	160	86 160	160	136	136	140	140	140	94	156	160	160	86 160	98	60 88	98
Parts			A/C Condenser Fan Motor	A/C Magnetic Clutch and Lock Sensor	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	ABS Actuator	ABS Relay	A/C Amplifier	A/C SW	A/C Magnetic Clutch Relay	ABS ECU	ABS ECU	Airbag Sensor Assembly	Airbag Squib (Front Passenger's Airbag Assembly)	Airbag Squib (Steering Wheel Pad)	Back-Up Light SW (M/T)	Brake Fluid Level Warning SW	Blower Motor	Blower Resistor	Blower SW	Cigarette Lighter	Circuit Opening Relay	Clock
Code or Location			A1	A2	A3	A4	A6	A10	A11	A12	A14	A15	A16	A17	A18	B1	B2	B3	B4	B5	C4	C5	C6
CB or Fuse																							
①	5A	ECU-IG			●							●											
	5A	IGN											●	●	●								
	5A	SRS											●										
	7.5A	TURN																					
	10A	A/C		●	●			●	●	●													
	10A	GAUGE				●	●				●	●				●	●		●				
	10A	STOP										●											
	15A	CIG & RADIO											●	●	●						●		●
	15A	TAIL							●										●				●
	20A	WIPER																					
②	40A	DEF																					
	10A	DOME																					●
	15A	EFI																				●	
	15A	HAZ-HORN																					
	10A	HEAD(LH)(*1)																					
	10A	HEAD(RH)(*1)																					
	30A	CDS FAN	●																				
③	30A	RAD FAN																					
	40A	HEATER						●										●	●	●			
	5A	DRL																					
	10A	HEAD(LH-LWR)(*2)																					
	10A	HEAD(RH-LWR)(*2)																					
④	10A	HEAD(LH-UPR)(*2)																					
	10A	HEAD(RH-UPR)(*2)																					
④	30A	POWER																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: Driver's Side J/B (See Page 20) ②: Engine Room J/B (See Page 22)
③: Engine Room R/B No.5 (See Page 23) ④: Power Fuse (P3 See Page 27)

Pin	Signal	Color	Wiring	Notes
136	ABS Warning Light [Comb. Meter]			
56	Charge Warning Light [Comb. Meter]			
60 68 124 130 156	Combination Meter			
86	Combination Meter Illumination [Comb. Meter]			
90	Open Door Warning Light [Comb. Meter]			
147	Seat Belt Warning Light [Comb. Meter]			
140	SRS Warning Light [Comb. Meter]			
76	High Beam Indicator Light [Comb. Meter]			
84	Turn Signal Indicator Light [Comb. Meter]			
76 78	Combination SW			
84	Turn Signal SW [Comb. SW]			
100	Horn SW [Comb. SW]			
101	Wiper and Washer SW [Comb. SW]			
100	Horn SW [Comb. SW]			
130	Cruise Control Clutch SW			
130	Cruise Control ECU			
90	Courtesy Light			
60 68 94 124 136 140	Data Link Connector 1			
78	Daytime Running Light Resistor			
78	Daytime Running Light Relay (Main)			
78	Diode [Daytime Running Light System]			
120	Door Lock Control Relay			
90	Diode (Theft Deterrent System)			
90 98	Door Courtesy SW LH			
90	Door Courtesy SW RH			
120	Door Lock Motor and Door Key Lock and Unlock SW LH			

H POWER SOURCE (Current Flow Chart)

*1: US/Mexico/Flux
*2: Canada

Location			* Page Nos. of Related Systems	120	60 68 124	60 68 124	84 86	84 86	101	60 68 156	56 156	76 78	76 78	100	84 86	60 68	160	160	92	60 68	156	86	86	90	
			Parts	Door Lock Motor and Door Key Lock and Unlock SW RH	Engine Control Module	Engine Control Module	Front Turn Signal Light and Parking Light LH	Front Turn Signal Light and Parking Light RH	Front Wiper Motor	Fuel Sender and Pump	Generator	Headlight LH	Headlight RH	Horn	Hazard SW	Heated Oxygen Sensor (Bank 1 Sensor 2)	Heater Relay (Point Side)	Heater Relay (Coil Side)	High Mounted Stop Light	Idle Air Control Valve	Igniter	License Plate Light LH	License Plate Light RH	Luggage Compartment Courtesy SW	
																									Code or Location
																									CB or Fuse
			D16	E5	E6	F1	F2	F3	F6	G2	H1	H2	H4	H5	H6	H7	H8	I1	I2	L1	L2	L3			
①	5A	ECU-IG																							
	5A	IGN																							
	5A	SRS																							
	7.5A	TURN																							
	10A	A/C																							
	10A	GAUGE																							
	10A	STOP																							
	15A	CIG & RADIO																							
	15A	TAIL																							
	20A	WIPER																							
40A	DEF																								
②	10A	DOME																							
	15A	EFI																							
	15A	HAZ-HORN																							
	10A	HEAD(LH)(*1)																							
	10A	HEAD(RH)(*1)																							
	30A	CDS FAN																							
	30A	RAD FAN																							
	40A	HEATER																							
③	5A	DRL																							
	10A	HEAD(LH-LWR)(*2)																							
	10A	HEAD(RH-LWR)(*2)																							
	10A	HEAD(LH-UPR)(*2)																							
	10A	HEAD(RH-UPR)(*2)																							
④	30A	POWER																							

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: Driver's Side J/B (See Page 20) ②: Engine Room J/B (See Page 22)
③: Engine Room R/B No.5 (See Page 23) ④: Power Fuse (P3 See Page 27)

90	Luggage Compartment Light	90
156	Oil Pressure SW	156
86 124	O/D Main SW and A/T Shift Lever Illumination	86 124
94 124 130	Park/Neutral Position SW, A/T Position SW and Back-Up Light SW (A/T)	94 124 130
156	Parking Brake SW	156
104	Power Main Relay and Power Fuse	104
90	Personal Light	90
104	Power Window Control SW RH	104
104	Power Window Master SW and Door Lock Control SW LH	104
104	Power Window Motor LH	104
104	Power Window Motor RH	104
160	Radiator Fan Motor	160
86 154	Radio and Player	86 154
152	Rear Window Defogger Relay (Coil Side)	152
152	Rear Window Defogger Relay (Point Side)	152
86 152	Rear Window Defogger SW	86 152
86	Rheostat	86
84	Rear Turn Signal Light LH [Rear Comb. Light LH]	84
92	Stop Light LH [Rear Comb. Light LH]	92
86	Tailight LH [Rear Comb. Light LH]	86
94	Back-Up Light LH [Rear Comb. Light LH]	94
86	Tailight LH [Rear Comb. Light LH]	86
84	Rear Turn Signal Light RH [Rear Comb. Light RH]	84
92	Stop Light RH [Rear Comb. Light RH]	92
86	Tailight RH [Rear Comb. Light RH]	86
94	Back-Up Light RH [Rear Comb. Light RH]	94
86	Tailight RH [Rear Comb. Light RH]	86

- 1 : Usual version
- 2 : Cereals

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

44

[illegible]

