



SERVICE HINTS

G2 (A) GENERATOR

- (A) 1-GROUND : **13.9–15.1** VOLTS WITH ENGINE RUNNING AT **2000** RPM AND **25°C(77°F)**
13.5–14.3 VOLTS WITH ENGINE RUNNING AT **2000** RPM AND **115°C(239°F)**
 (A) 2-GROUND : **0–4** VOLTS WITH THE IGNITION SW AT **ON** POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C8	26	F5	B 24	G2	A 24
F4	A 24	G1	B 24	J5	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
EA2		
IG1	34	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)
IG2		


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I14	34	INSTRUMENT PANEL WIRE			


C 8 BROWN

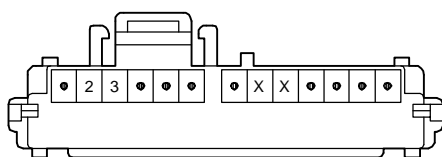


F 4 (A), F 5 (B)

 


G 1 (B)

 

G 2 (A) BLACK

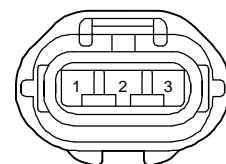

J 5 GRAY

 

(HINT : SEE PAGE 7)