







COMBINATION METER

SERVICE HINTS

B 2 BRAKE FLUID LEVEL WARNING SW

1-2 : CLOSED WITH THE FLOAT DOWN

C 8 (A), C 9 (B), C10 (C) COMBINATION METER

(A) 1-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

(A) 13-GROUND : APPROX. 12 VOLTS

(A) 11-GROUND : APPROX. 12 VOLTS WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

(B) 8, (C) 2, (C) 7-GROUND : ALWAYS CONTINUITY

F 6 FUEL SENDER

2-3 : APPROX. 7 Ω WITH THE FUEL FULL

APPROX. 95 Ω WITH THE FUEL EMPTY

O 1 OIL PRESSURE SW

1-GROUND : CLOSED WITH THE OIL PRESSURE BELOW 19.61 KPA (0.2 KGF/CM², 2.84 PSI)

P 2 PARKING BRAKE SW

1-GROUND : CLOSED WITH THE PARKING BRAKE LEVER PULLED UP

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 2	24	F 6	28 (C/P), 29 (CONVERTIBLE)	O 1	25
C 8	A 26	G 2	24	P 2	27
C 9	B 26	I 2	25	W 2	25
C 10	C 26	J 5	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1 C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1 D		
1 E		
1 K	20	ENGINE ROOM MAIN AND DRIVER SIDE J/B (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
IC2	32	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)
IE1	32	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG1	34	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF THE LEFT FENDER
EC	30	RIGHT SIDE OF THE SURGE TANK
ID	32	LEFT KICK PANEL
IE	32	INSTRUMENT PANEL BRACE LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	34	INSTRUMENT PANEL WIRE			

