


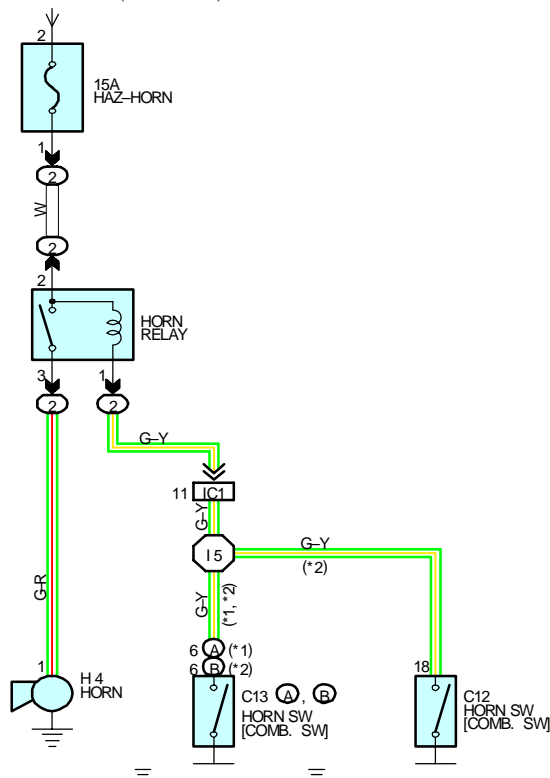

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

*1 : USA, PUERTO RICO AND CANADA W/ SRS
*2 : CANADA W/O SRS



SERVICE HINTS

HORN RELAY

(2) 2- (2) 3 : CLOSED WITH THE HORN SW (COMB. SW) ON



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12	26	C13	B	26	
C13	A	26		H 4	24



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	32	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)

