




# INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

- \*1 : W/O THEFT DETERRENT SYSTEM
- \*2 : W/ THEFT DETERRENT SYSTEM
- \*3 : C/P
- \*4 : CONVERTIBLE

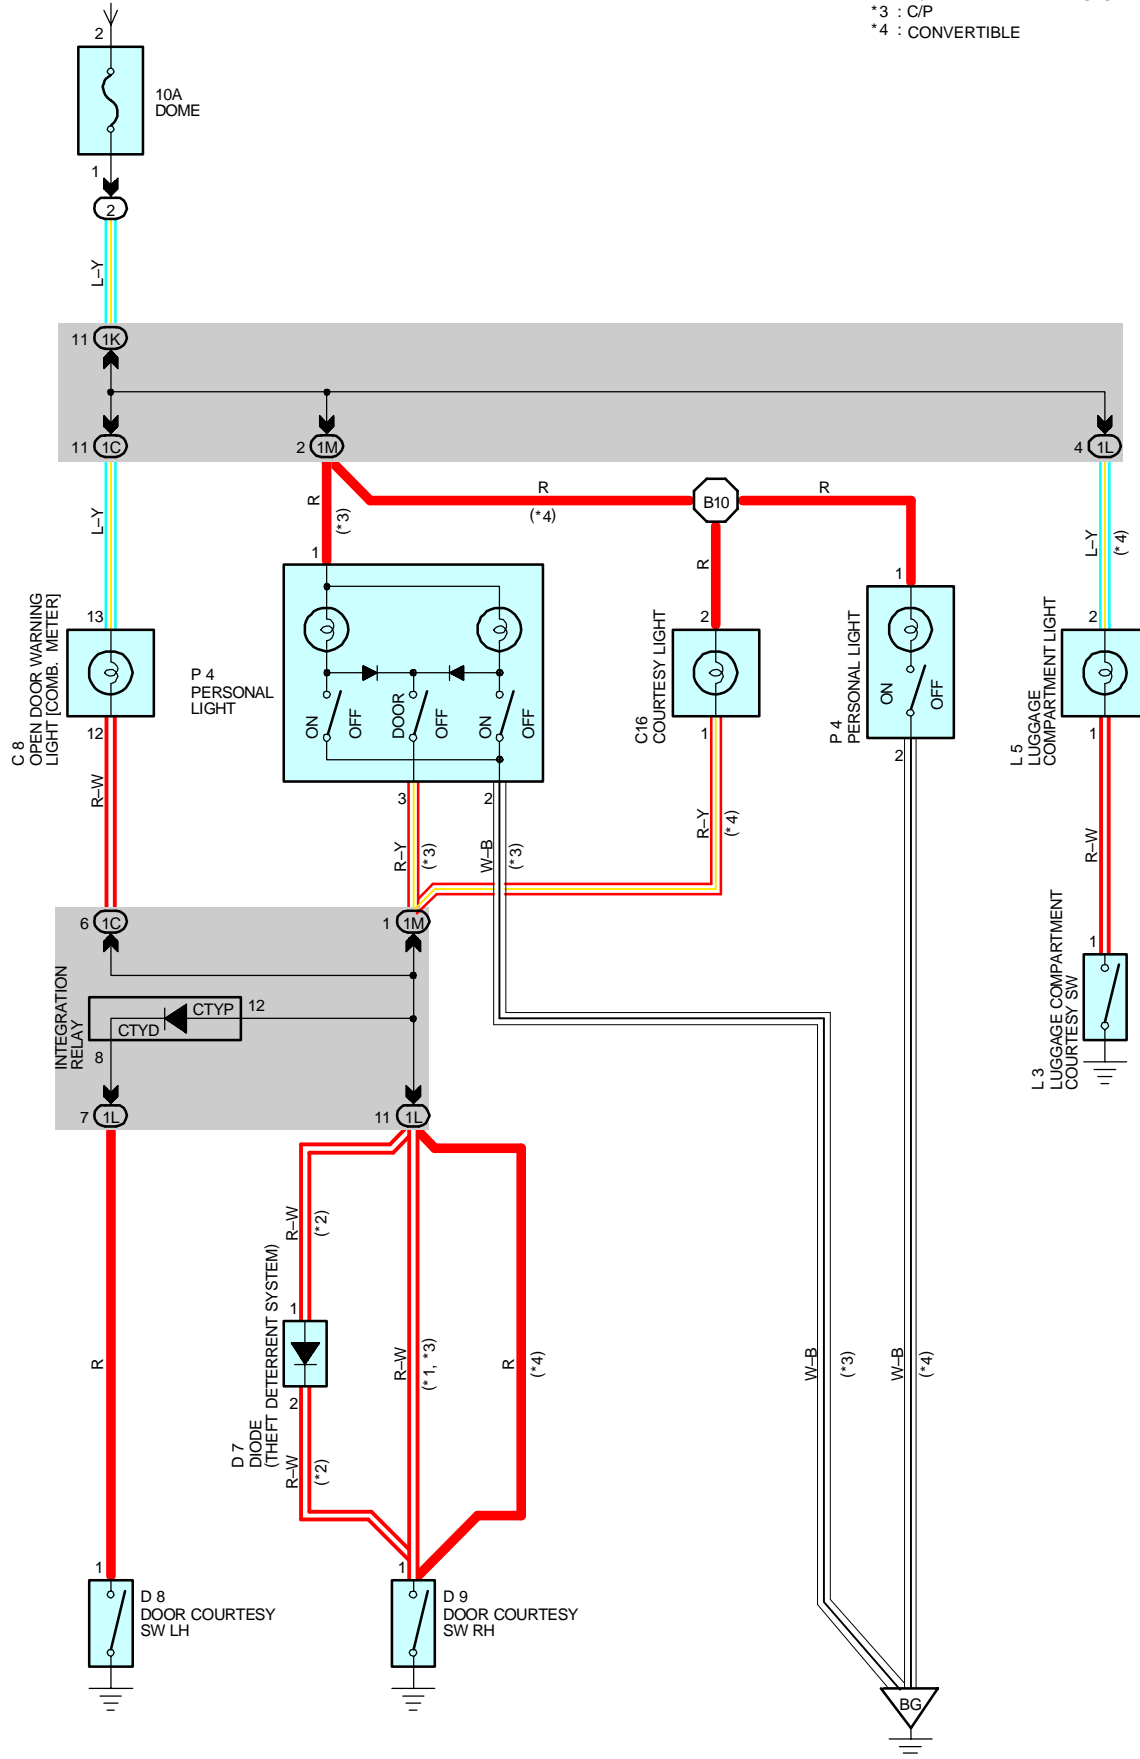

## SERVICE HINTS

### D 8, D 9 DOOR COURTESY SW LH, RH

1-GROUND : CLOSED WITH THE DOOR OPEN

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 8	26	D 8	28(C/P), 29(CONVERTIBLE)	L 5	28(C/P), 29(CONVERTIBLE)
C16	29(CONVERTIBLE)	D 9	28(C/P), 29(CONVERTIBLE)	P 4	28
D 7	28(C/P)	L 3	28(C/P), 29(CONVERTIBLE)		

## ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1K	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1L	20	FLOOR WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1M	20	ROOF WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	32(C/P)	RIGHT SIDE OF PERSONAL LIGHT
	37(CONVERTIBLE)	

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B10	36(CONVERTIBLE)	ROOF WIRE			

