


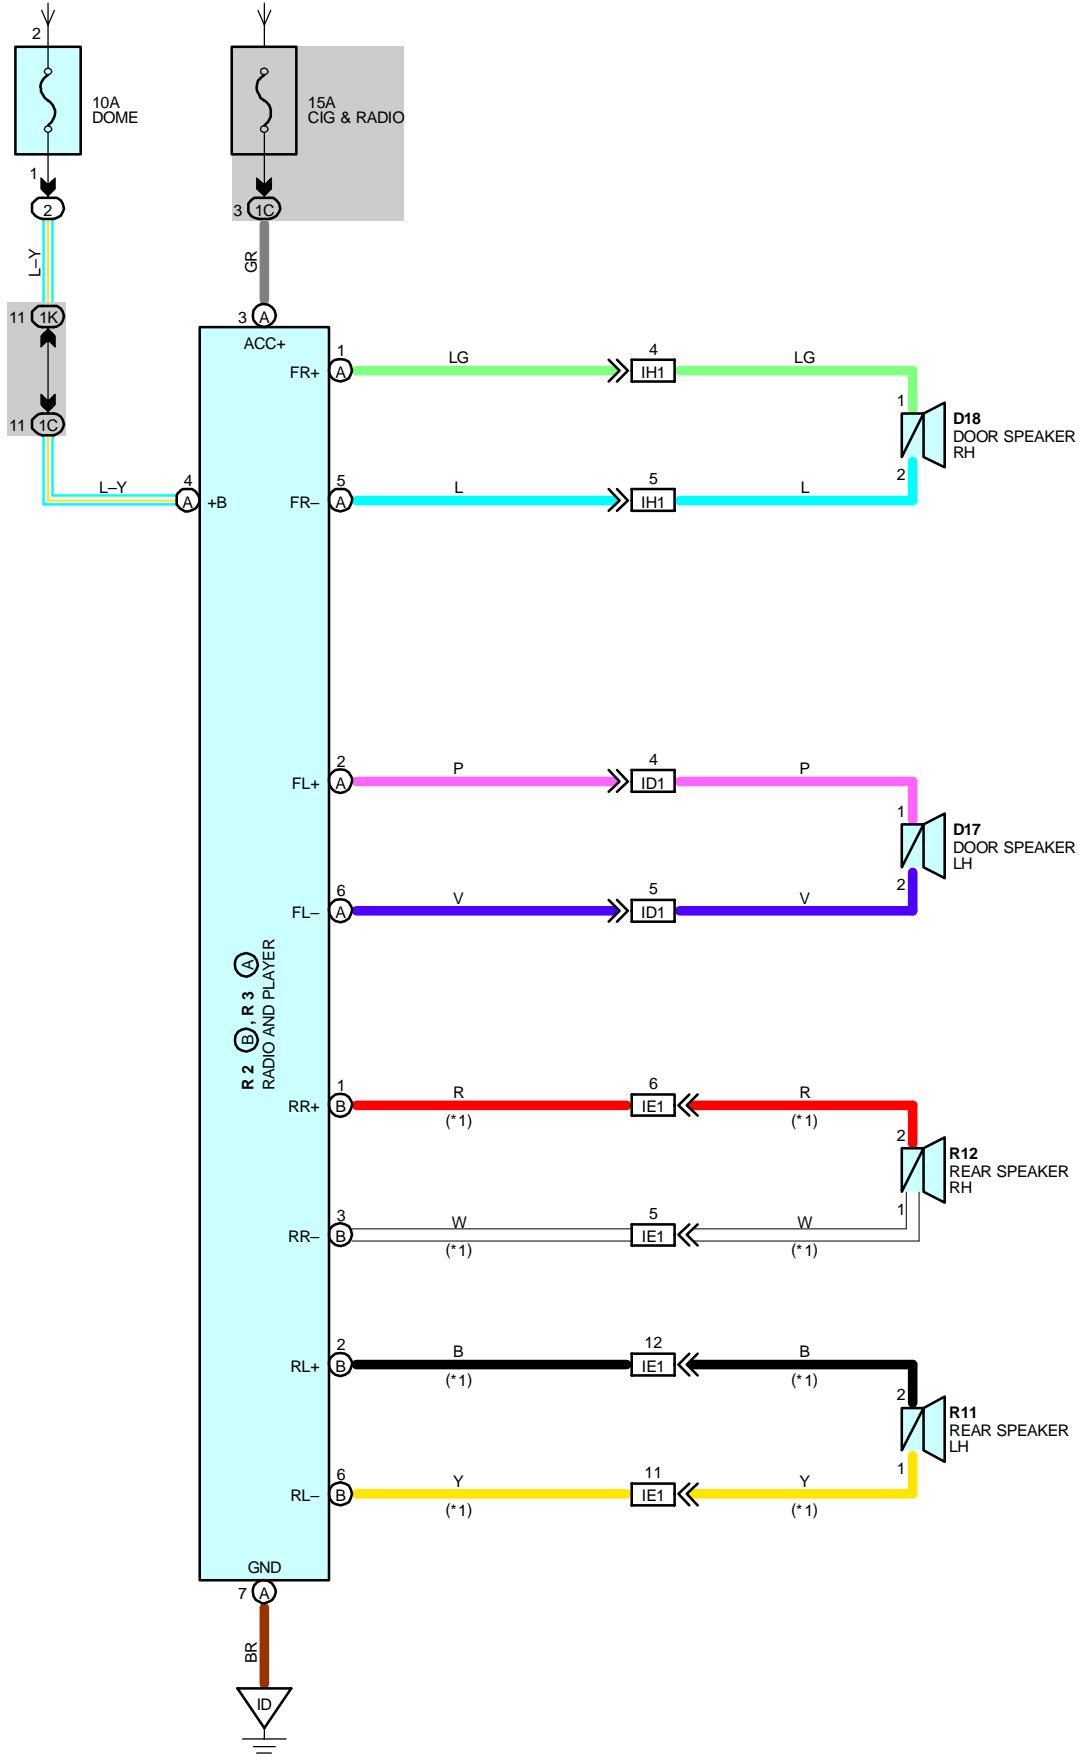

# RADIO AND PLAYER

\*1 : W/ REAR SPEAKER

FROM POWER SOURCE SYSTEM (SEE PAGE 48)





## SERVICE HINTS

### R 3(A) RADIO AND PLAYER

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(A) 7-GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D17	28 (C/P), 29 (CONVERTIBLE)	R 2	B 27	R11	28 (C/P), 29 (CONVERTIBLE)
D18	28 (C/P), 29 (CONVERTIBLE)	R 3	A 27	R12	28 (C/P), 29 (CONVERTIBLE)

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1K	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)


### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	32	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IE1	32	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IH1	34	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)


### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL


D17

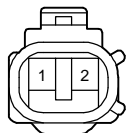


D18

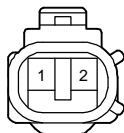


R 2 (B)

 

R 3 (A)

 

R11

 

R12

