




- * 1 : C/P
- * 2 : CONVERTIBLE
- * 3 : REAR SIDE MARKER

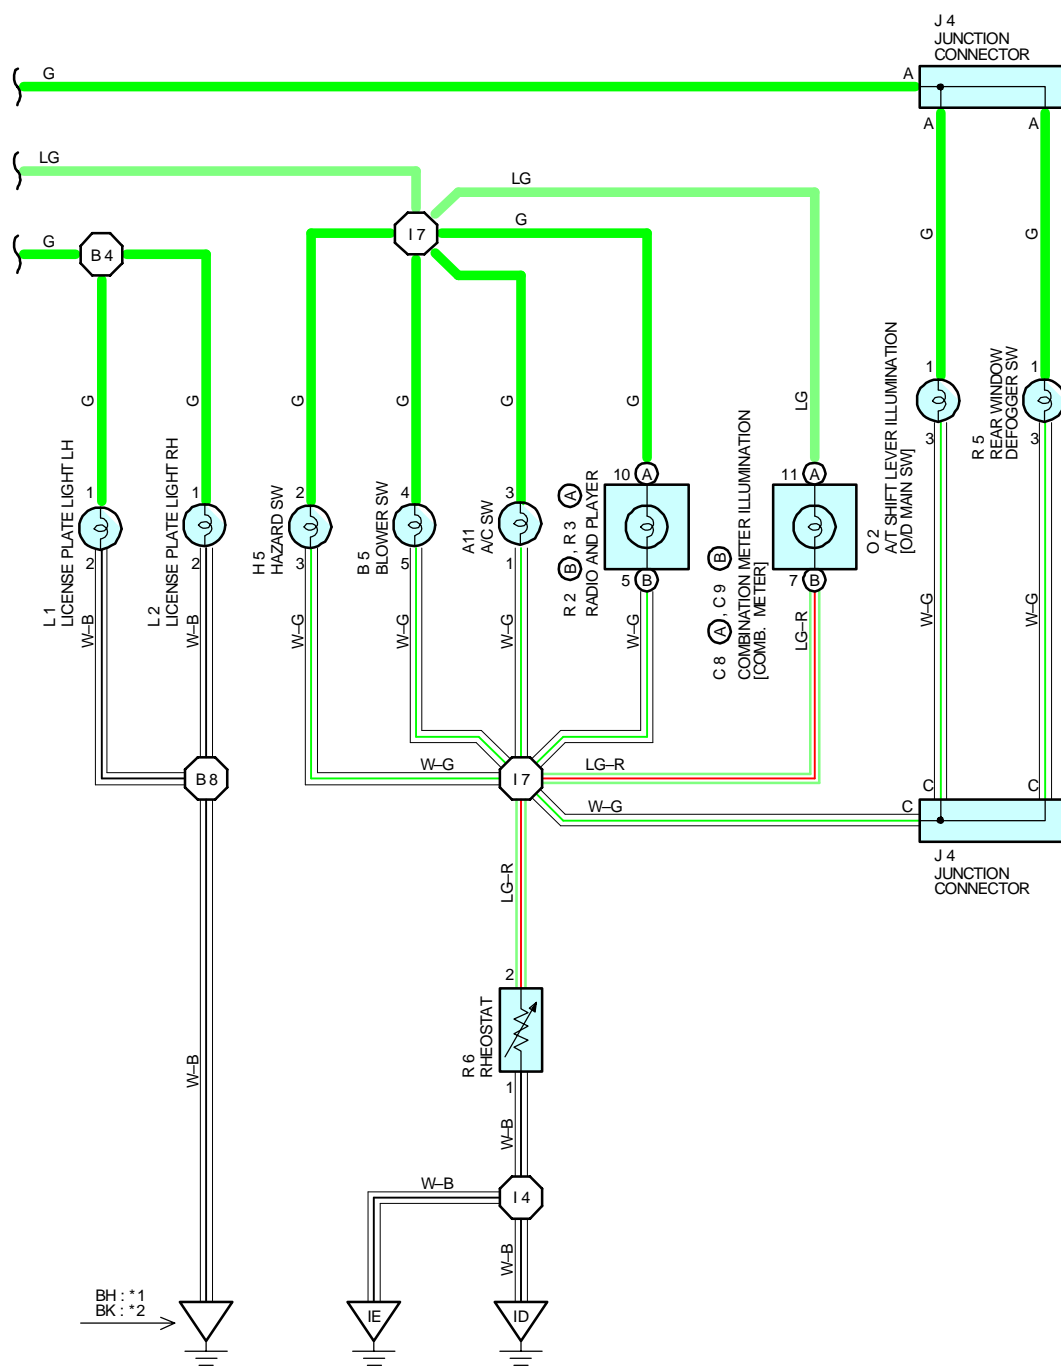



TAILLIGHT AND ILLUMINATION

SERVICE HINTS

C11 COMBINATION SW

14-16 : CLOSED WITH THE LIGHT CONTROL SW AT TAIL OR HEAD POSITION

TAIL RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT TAIL OR HEAD POSITION



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A11	26	F 5	B 24	R 5	27
B 5	26	H 5	26	R 6	27
C 8	A 26	J 4	27	R 7	A 28 (C/P) , 29 (CONVERTIBLE)
C 9	B 26	L 1	28 (C/P) , 29 (CONVERTIBLE)	R 8	B 28 (C/P) , 29 (CONVERTIBLE)
C11	26	L 2	28 (C/P) , 29 (CONVERTIBLE)	R 9	A 28 (C/P) , 29 (CONVERTIBLE)
F 1	24	O 2	27	R10	B 28 (C/P) , 29 (CONVERTIBLE)
F 2	24	R 2	B 27		
F 4	A 24	R 3	A 27		



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1D		
1E		
1J	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1K		
1L	20	FLOOR WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF THE LEFT FENDER
ID	32	LEFT KICK PANEL
IE	32	INSTRUMENT PANEL BRACE LH
BH	36 (C/P)	LEFT SIDE OF THE UPPER BACK PANEL
BI	36 (C/P)	LOWER BACK PANEL CENTER
	37 (CONVERTIBLE)	
BK	37 (CONVERTIBLE)	UPPER THE REAR WHEEL HOUSE LH



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	30	ENGINE ROOM MAIN WIRE	B 7	37 (CONVERTIBLE)	FLOOR WIRE
I 4	34	INSTRUMENT PANEL WIRE	B 8	36 (C/P)	
I 7			B 8	37 (CONVERTIBLE)	
B 4	36 (C/P)	FLOOR WIRE	B 9	36 (C/P)	
	37 (CONVERTIBLE)		B 9	37 (CONVERTIBLE)	
B 7	36 (C/P)				

