


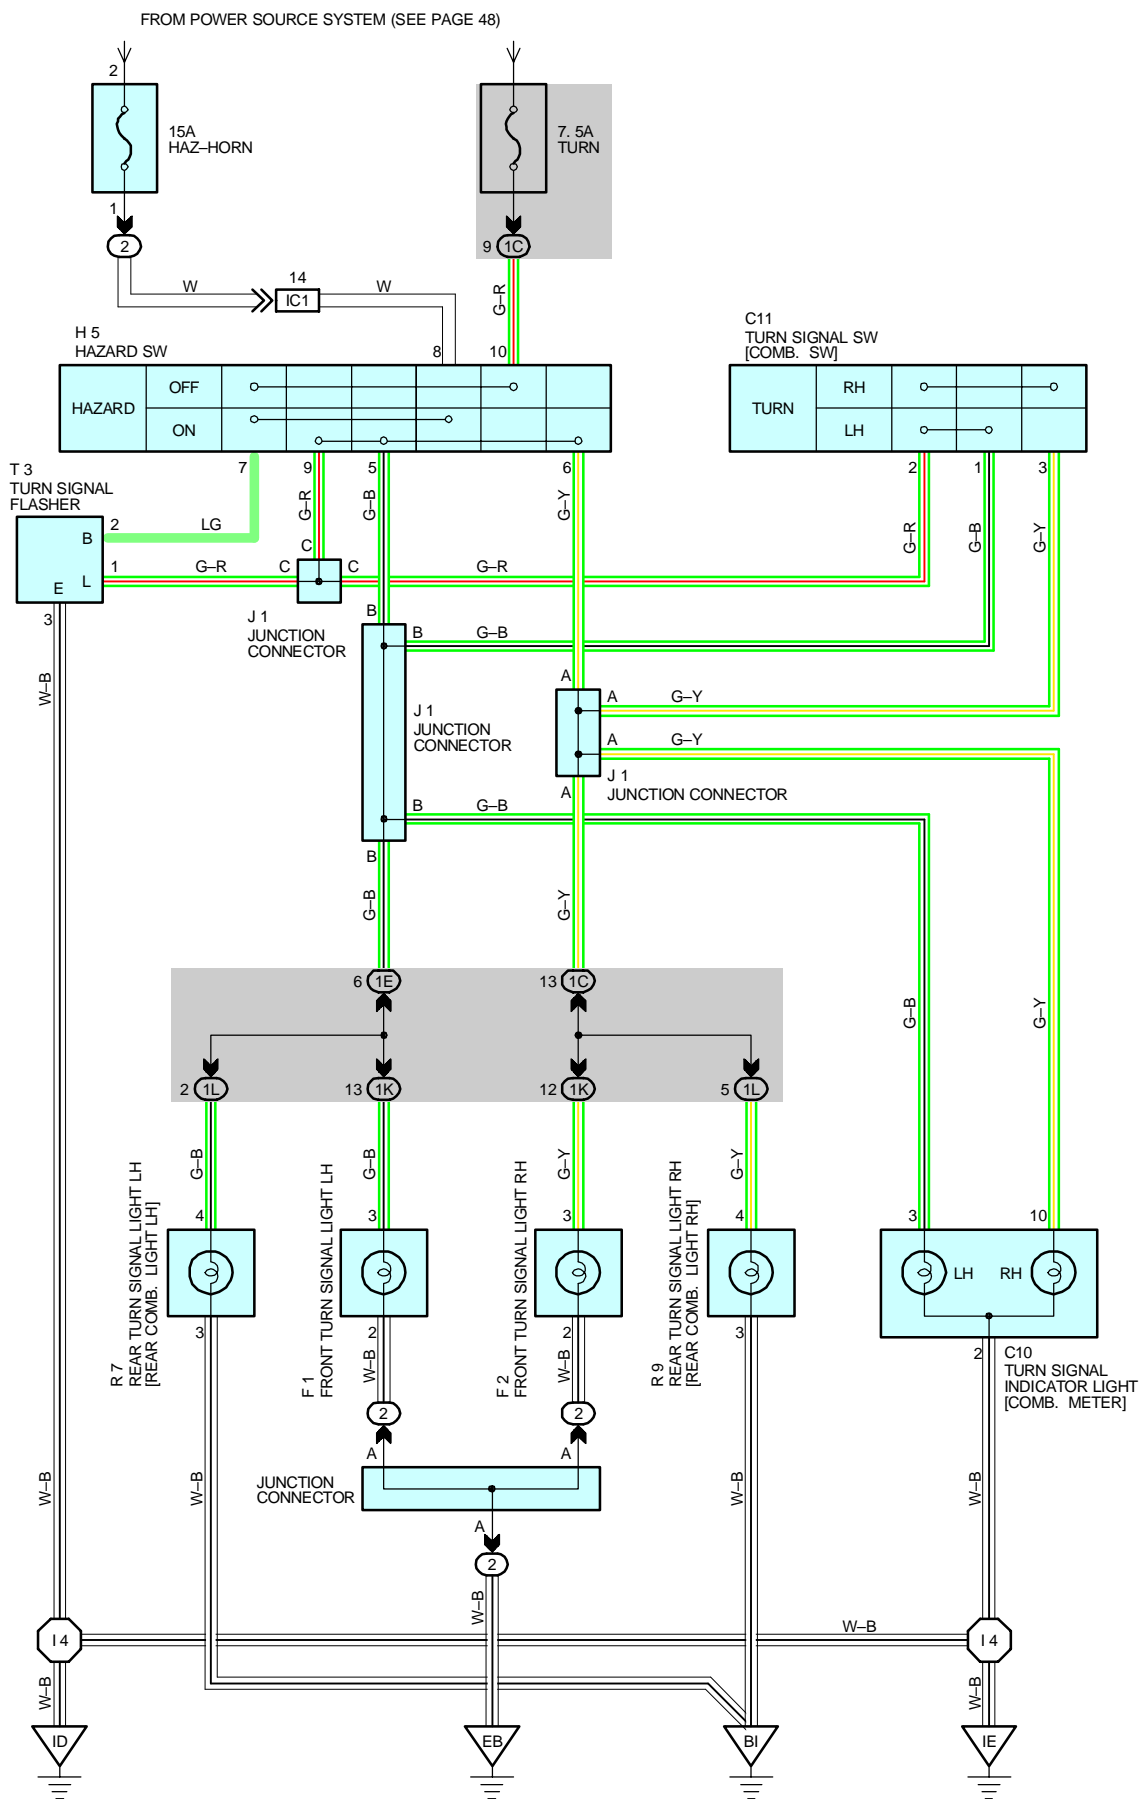

# TURN SIGNAL AND HAZARD WARNING LIGHT



## SERVICE HINTS

### T 3 TURN SIGNAL FLASHER

2-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW ON OR THE HAZARD SW ON

1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH THE IGNITION SW ON AND THE TURN SIGNAL SW (COMB. SW) LEFT OR RIGHT,OR WITH THE HAZARD SW ON

3-GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C10	26	F 2	24	R 7	28(C/P),29(CONVERTIBLE)
C11	26	H 5	26	R 9	28(C/P),29(CONVERTIBLE)
F 1	24	J 1	27	T 3	27

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1E		
1K	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1L	20	FLOOR WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	32	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)


### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF THE LEFT FENDER
ID	32	LEFT KICK PANEL
IE	32	INSTRUMENT PANEL BRACE LH
BI	36(C/P)	LOWER BACK PANEL CENTER
	37(CONVERTIBLE)	


### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	34	INSTRUMENT PANEL WIRE			


(USA,CANADA) C10 GRAY

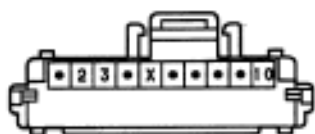


(PUERTO RICO) C10 GRAY

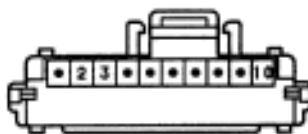

(USA,PUERTO RICO) C11

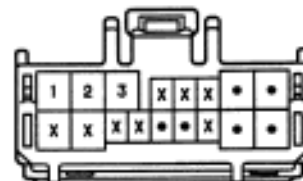

(CANADA) C11

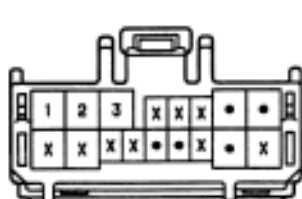


F 1 GRAY



F 2 GRAY



H 5 BLACK

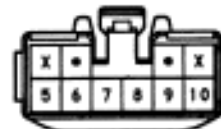


J 1 GRAY




(HINT:SEE PAGE 7)

 R 7



R 9

 

T 3

