



INSPECTION

INSPECT BLOWER RESISTOR RESISTANCE

Tester connection	Condition	Specified condition
1-4	Constant	2.2 ± 0.1 Ω
1-3	Constant	1.2 ± 0.2 Ω
1-2	Constant	1.8 ± 0.2 Ω

If resistance is not as specified, replace the blower resistor.