

INSTALLATION


Installation is in the reverse order of removal

(See page [BR-43](#)).

NOTICE:

Apply lithium soap base glycol grease and high temperature grease to the parts indicated by the arrows

(See page [BR-42](#)).

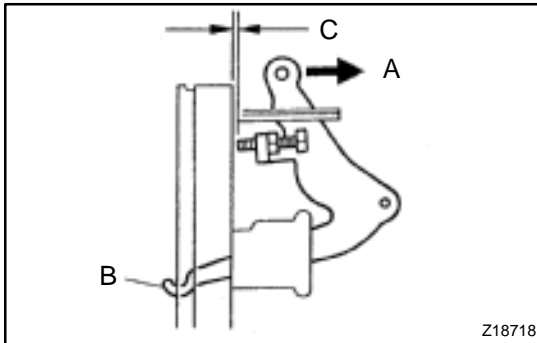

1. ADJUST BELLCRANK

- (a) Lightly pull the bellcrank in direction A until there is no slack at part B.
- (b) In this condition, turn the adjusting bolt so that dimension C will be 0.4 – 0.8 mm (0.016 – 0.031 in.).
- (c) Lock the adjusting bolt with the lock nut.
- (d) Connect the parking brake cable to the parking brake bellcrank and install the clip.
- (e) Install the tension spring.

2. CHECK OPERATION OF AUTOMATIC ADJUSTING MECHANISM (See step 1. on page [BR-41](#))

3. CHECK CLEARANCE BETWEEN BRAKE SHOES AND DRUM (See step 2. on page [BR-41](#))

Shoe clearance: 0.6 mm (0.024 in.)

4. FILL BRAKE RESERVOIR WITH BRAKE FLUID

5. BLEED BRAKE SYSTEM (See page [BR-4](#))

6. CHECK FOR LEAKS