

<b>DTC</b>	<b>23</b>	<b>Vehicle Speed Signal Abnormal</b>
------------	-----------	--------------------------------------

## CIRCUIT DESCRIPTION

See page [DI-577](#).

DTC No.	Detection Item	Trouble Area
23	Vehicle speed sensor pulse is abnormal.	<ul style="list-style-type: none"><li>• Vehicle speed sensor</li><li>• Cruise control ECU</li></ul>

## WIRING DIAGRAM

See page [DI-577](#).

## INSPECTION PROCEDURE

<b>1</b>	<b>Check vehicle speed sensor (See page <a href="#">BE-2</a>).</b>
----------	--------------------------------------------------------------------

**NG**

**Replace vehicle speed sensor.**

**OK**

**Check and replace cruise control ECU (See page [IN-28](#)).**