



CYLINDER HEAD COMPONENTS

EM16C-01

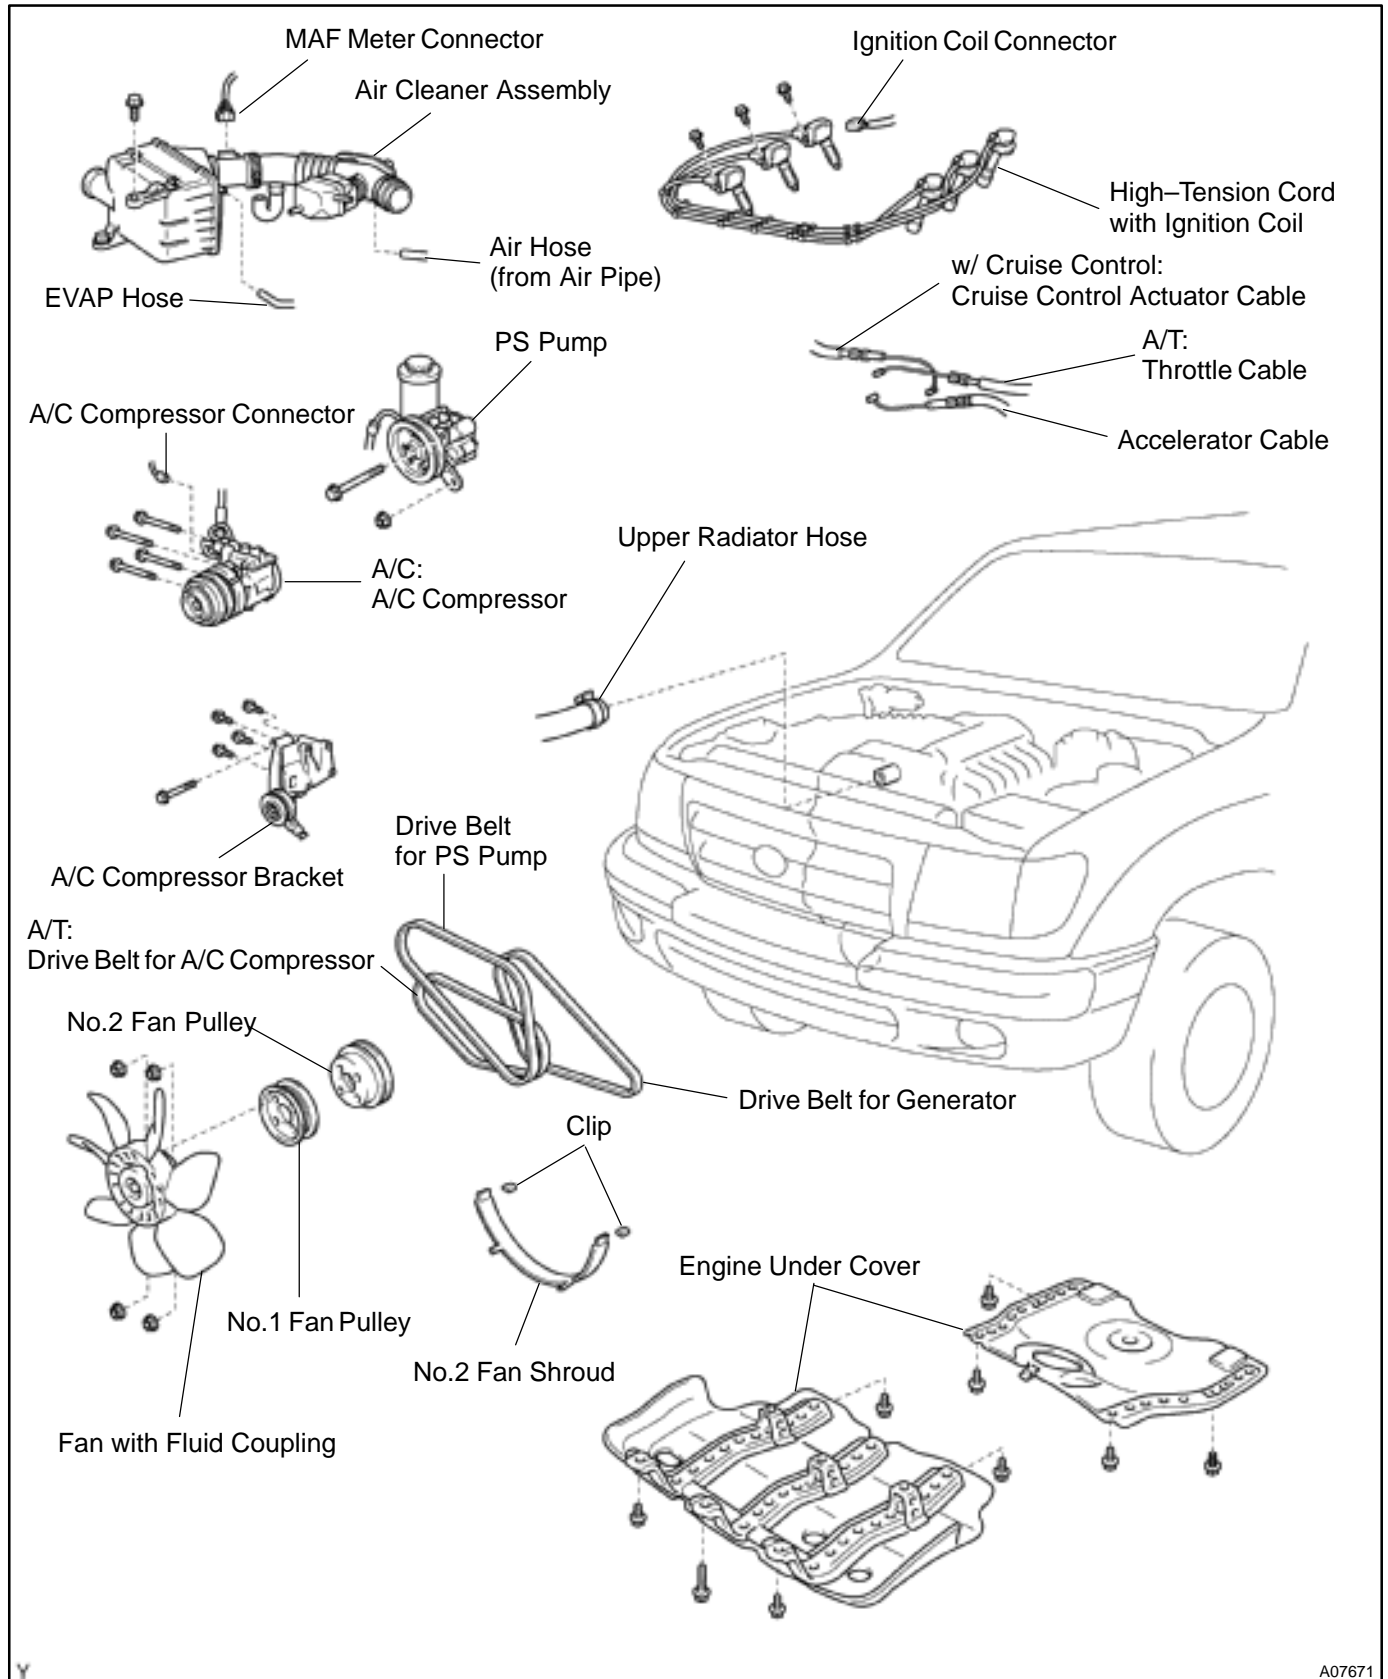

Y


A07671

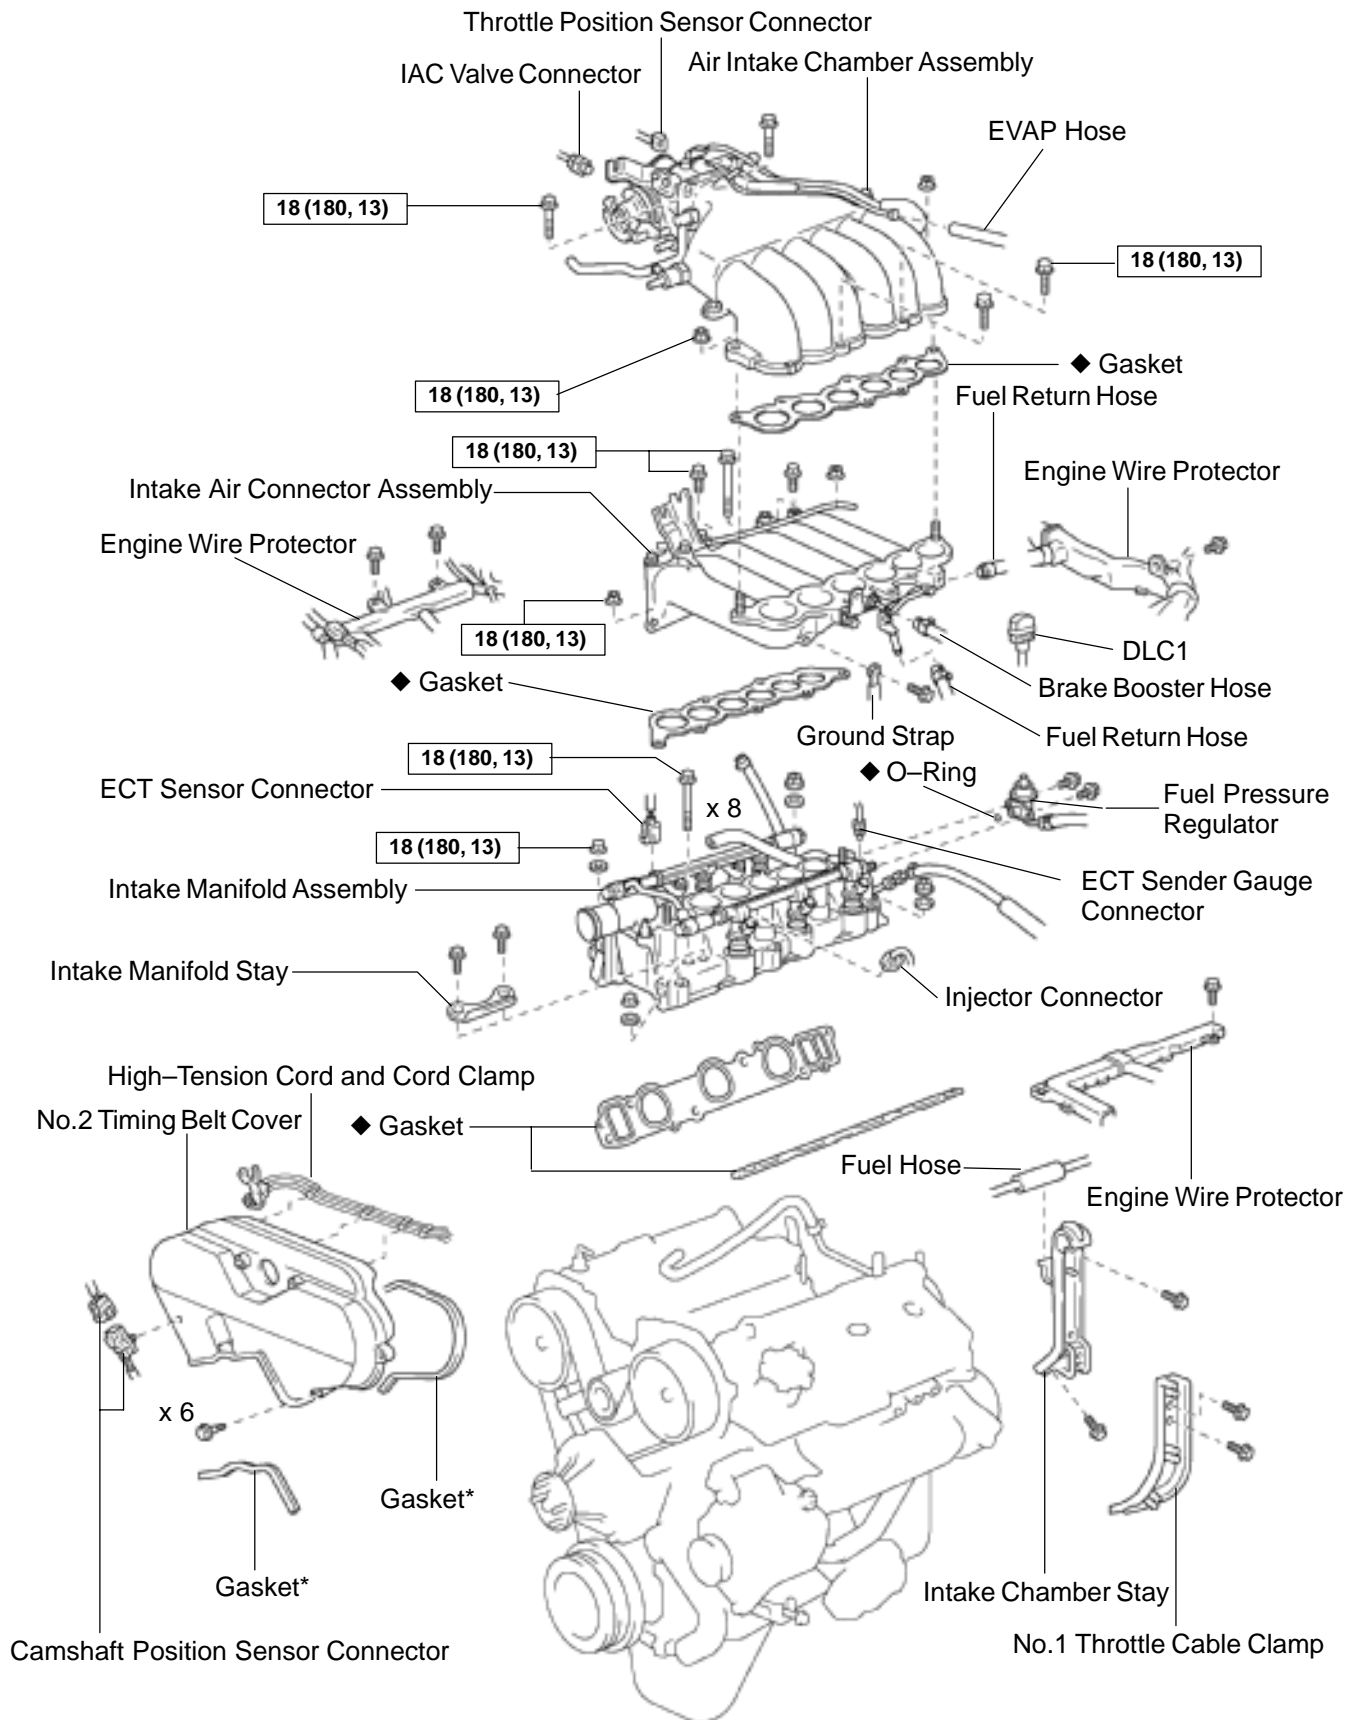

N·m (kgf·cm, ft·lbf) : Specified torque


- ◆ Non-reusable part

* Replace only if damaged

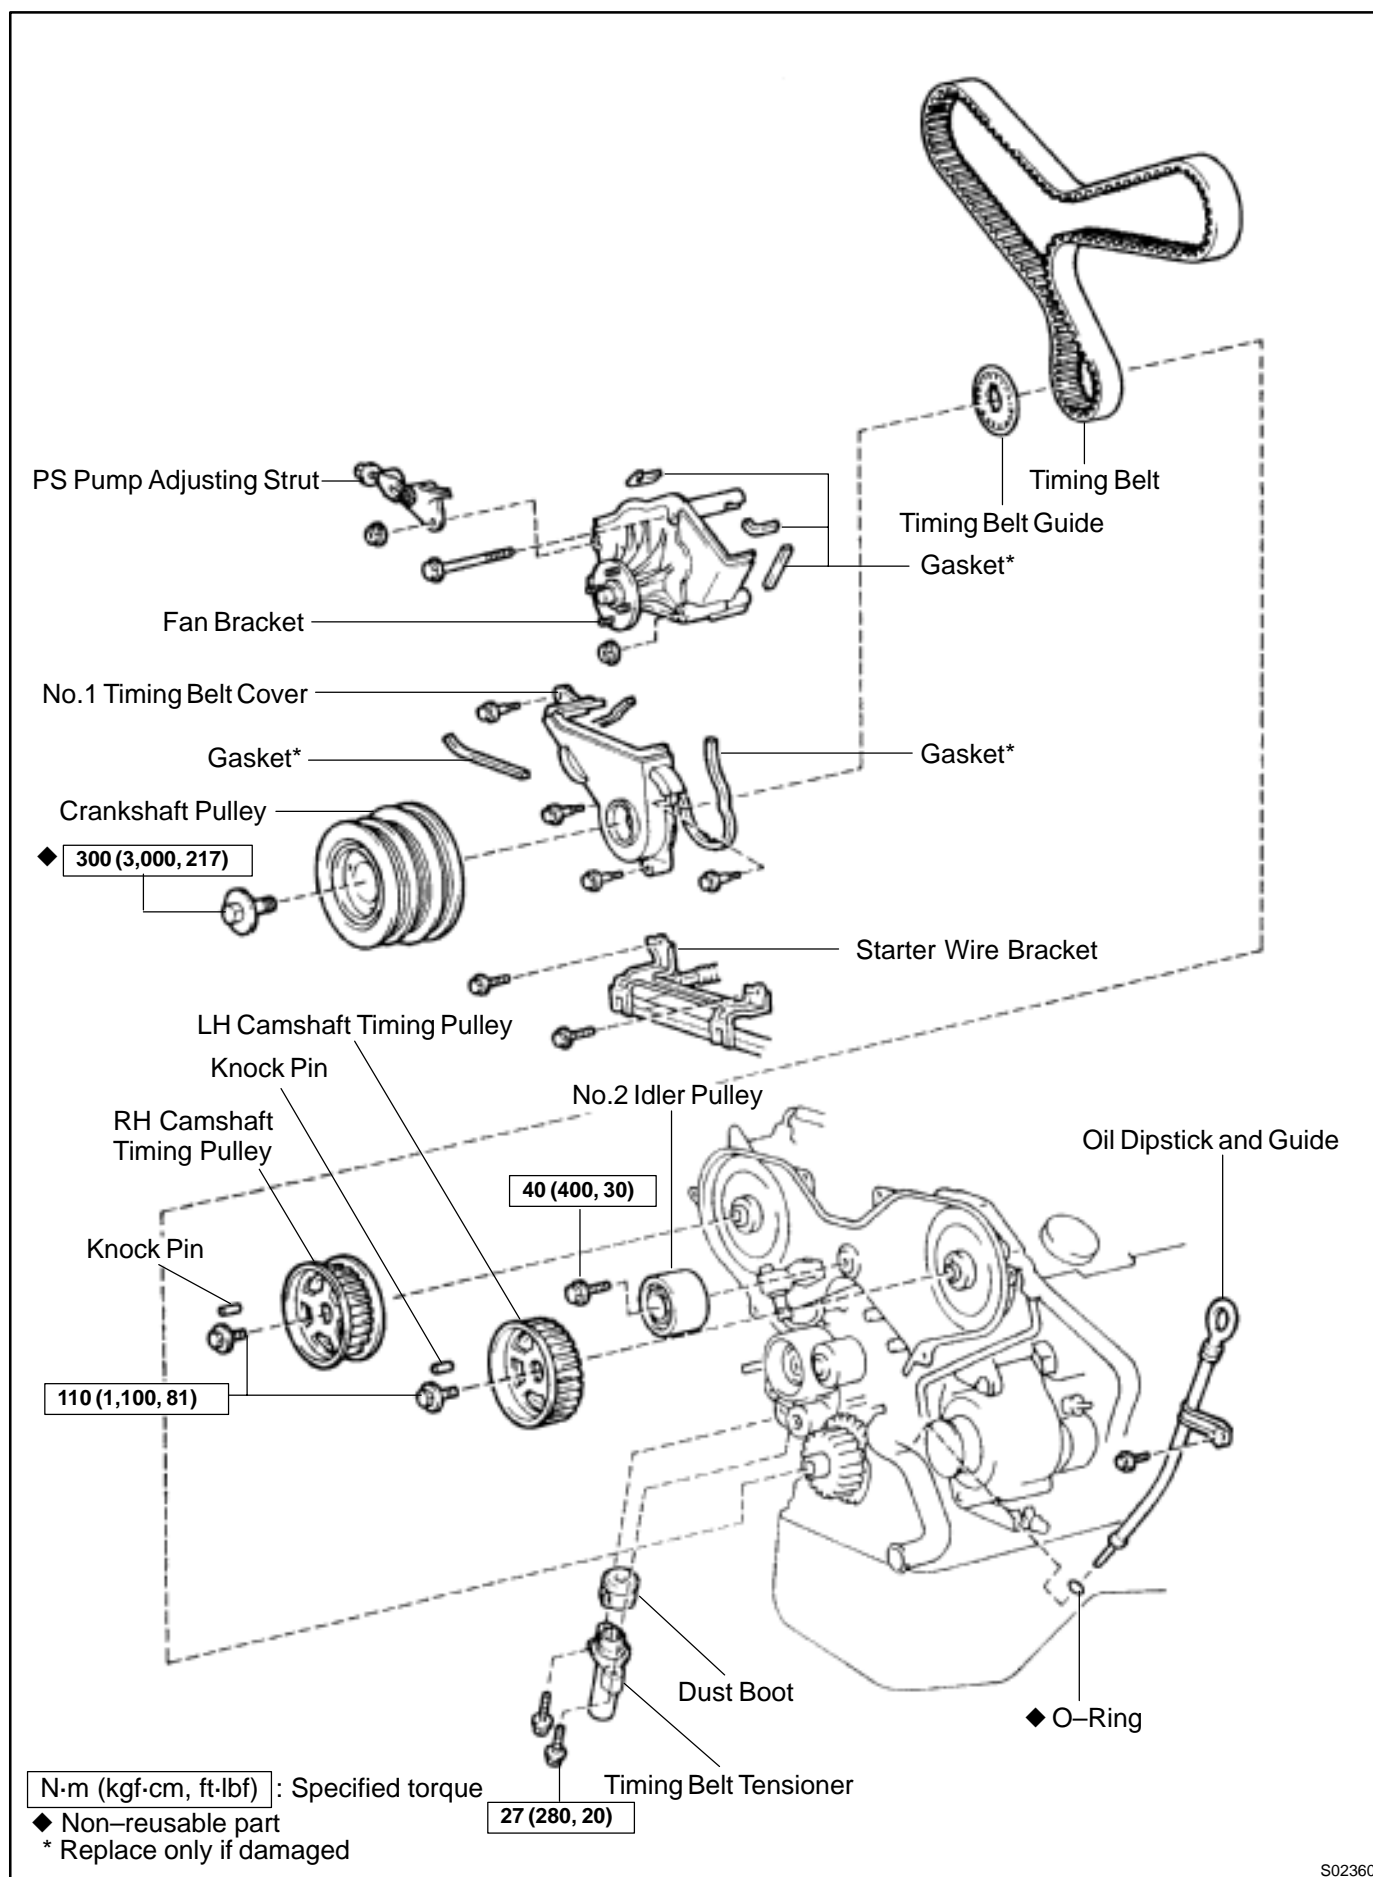

S02360

4WD (Except California Spec.)

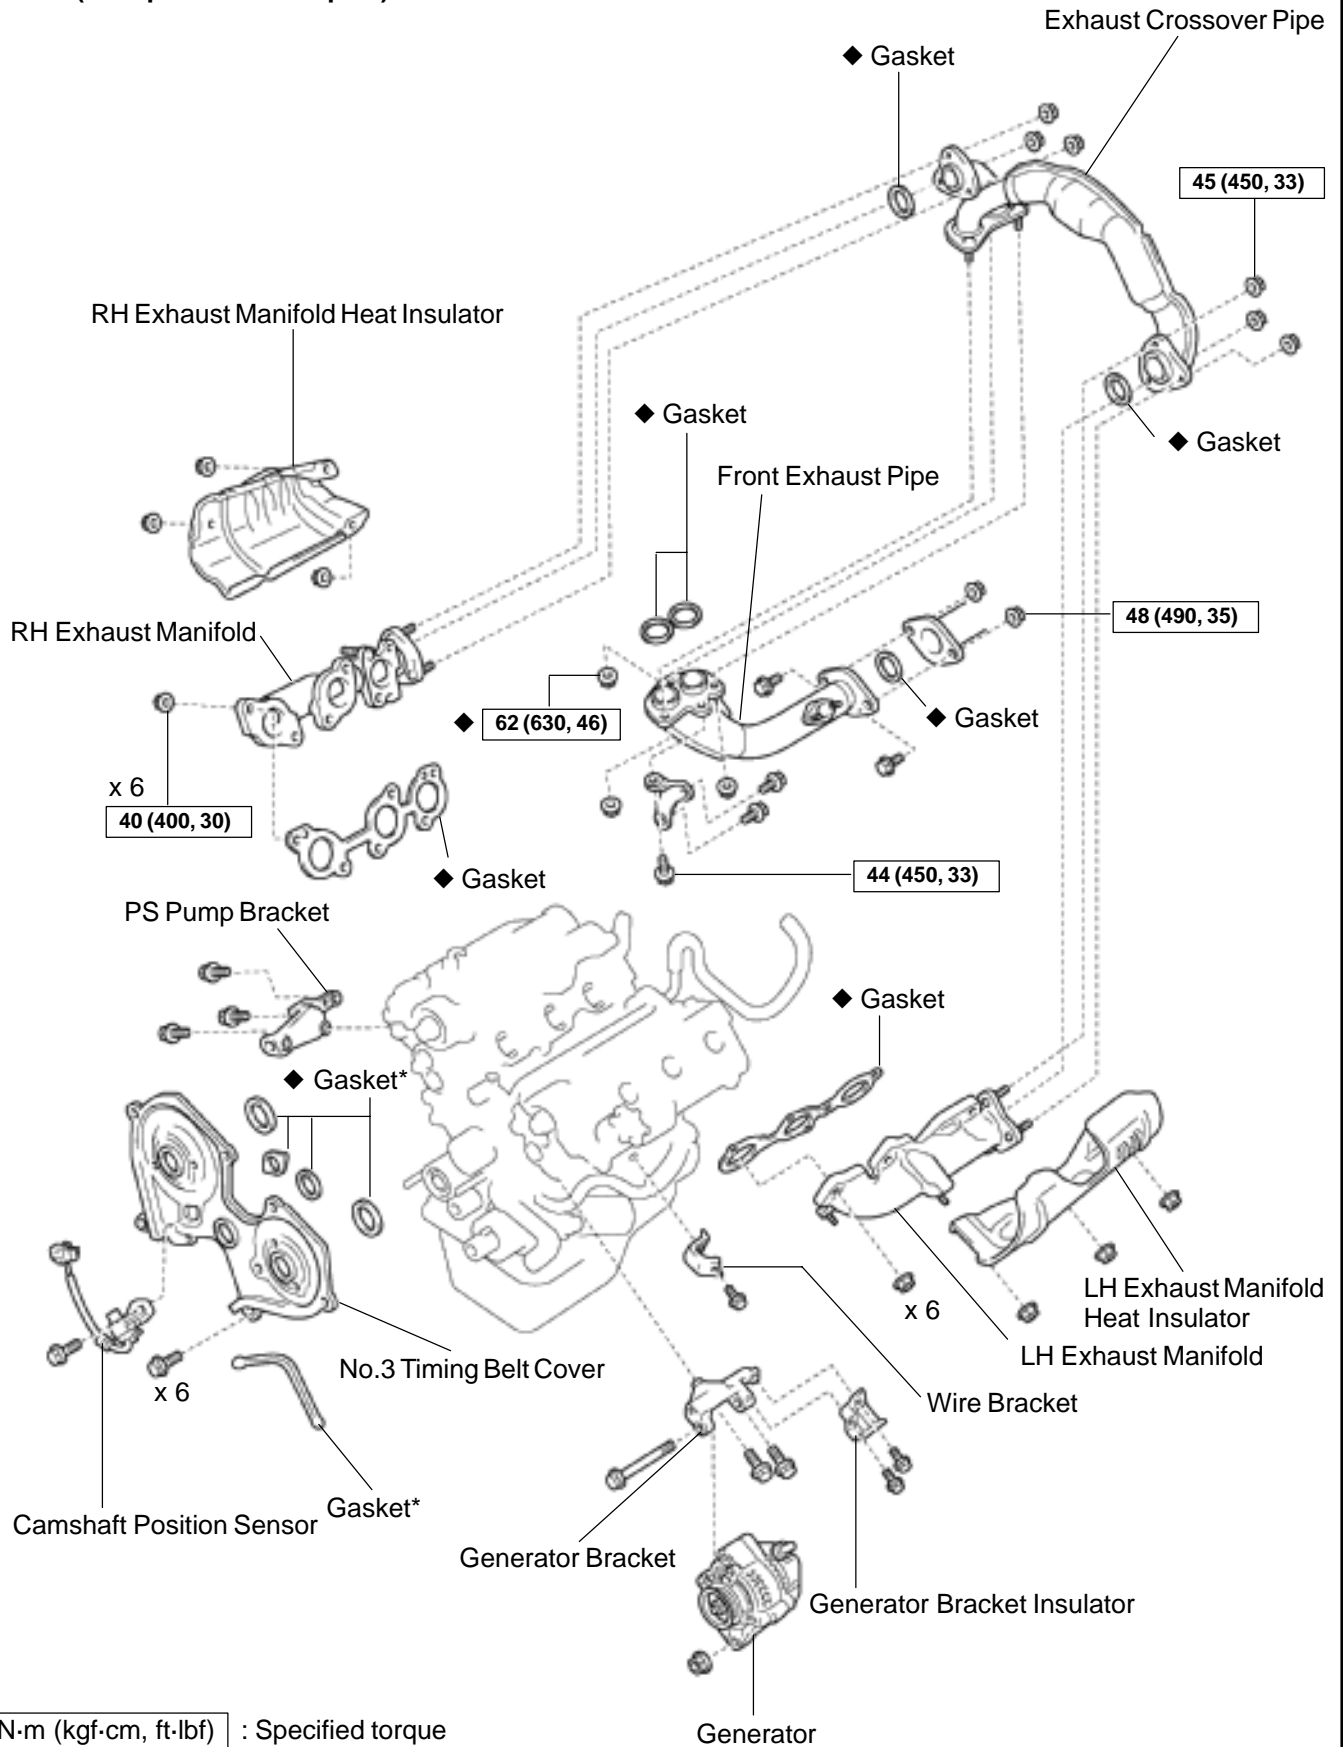


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

*Replace only if damaged

A06831


2WD, 4WD (California Spec.)

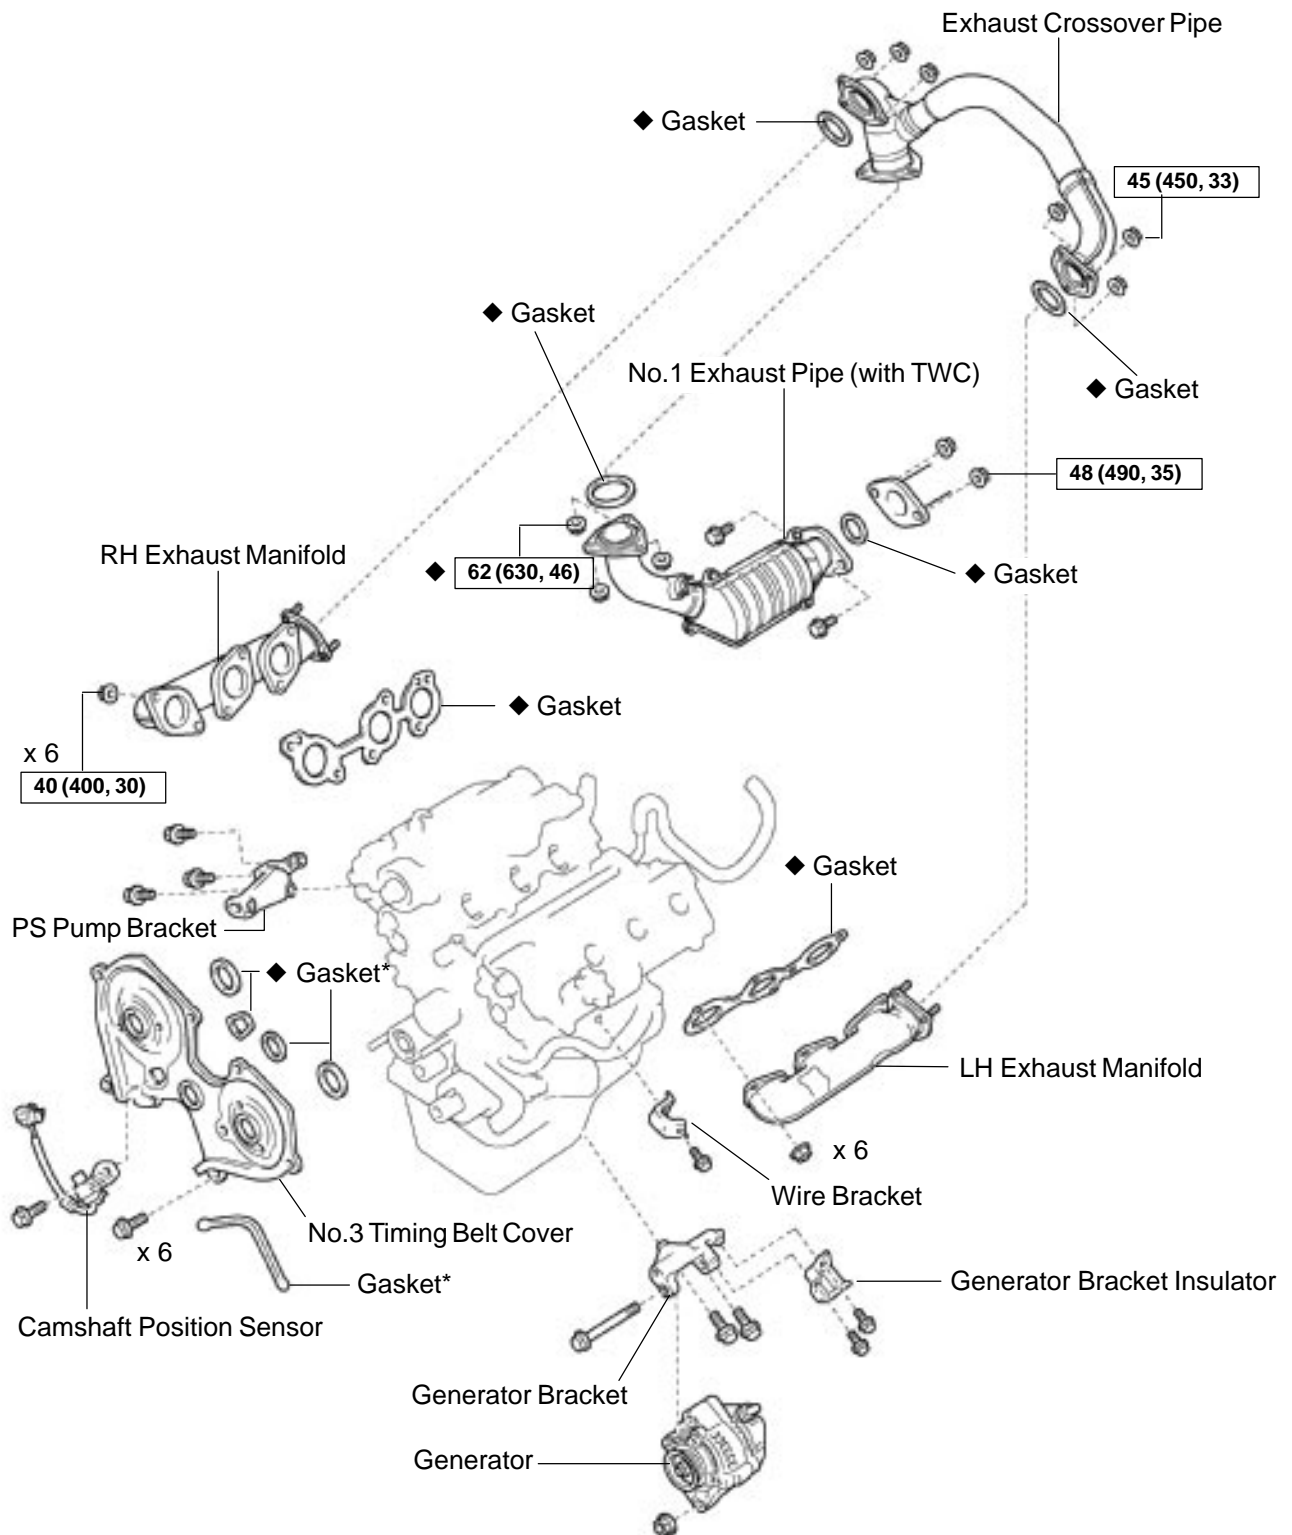

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

*Replace only if damaged

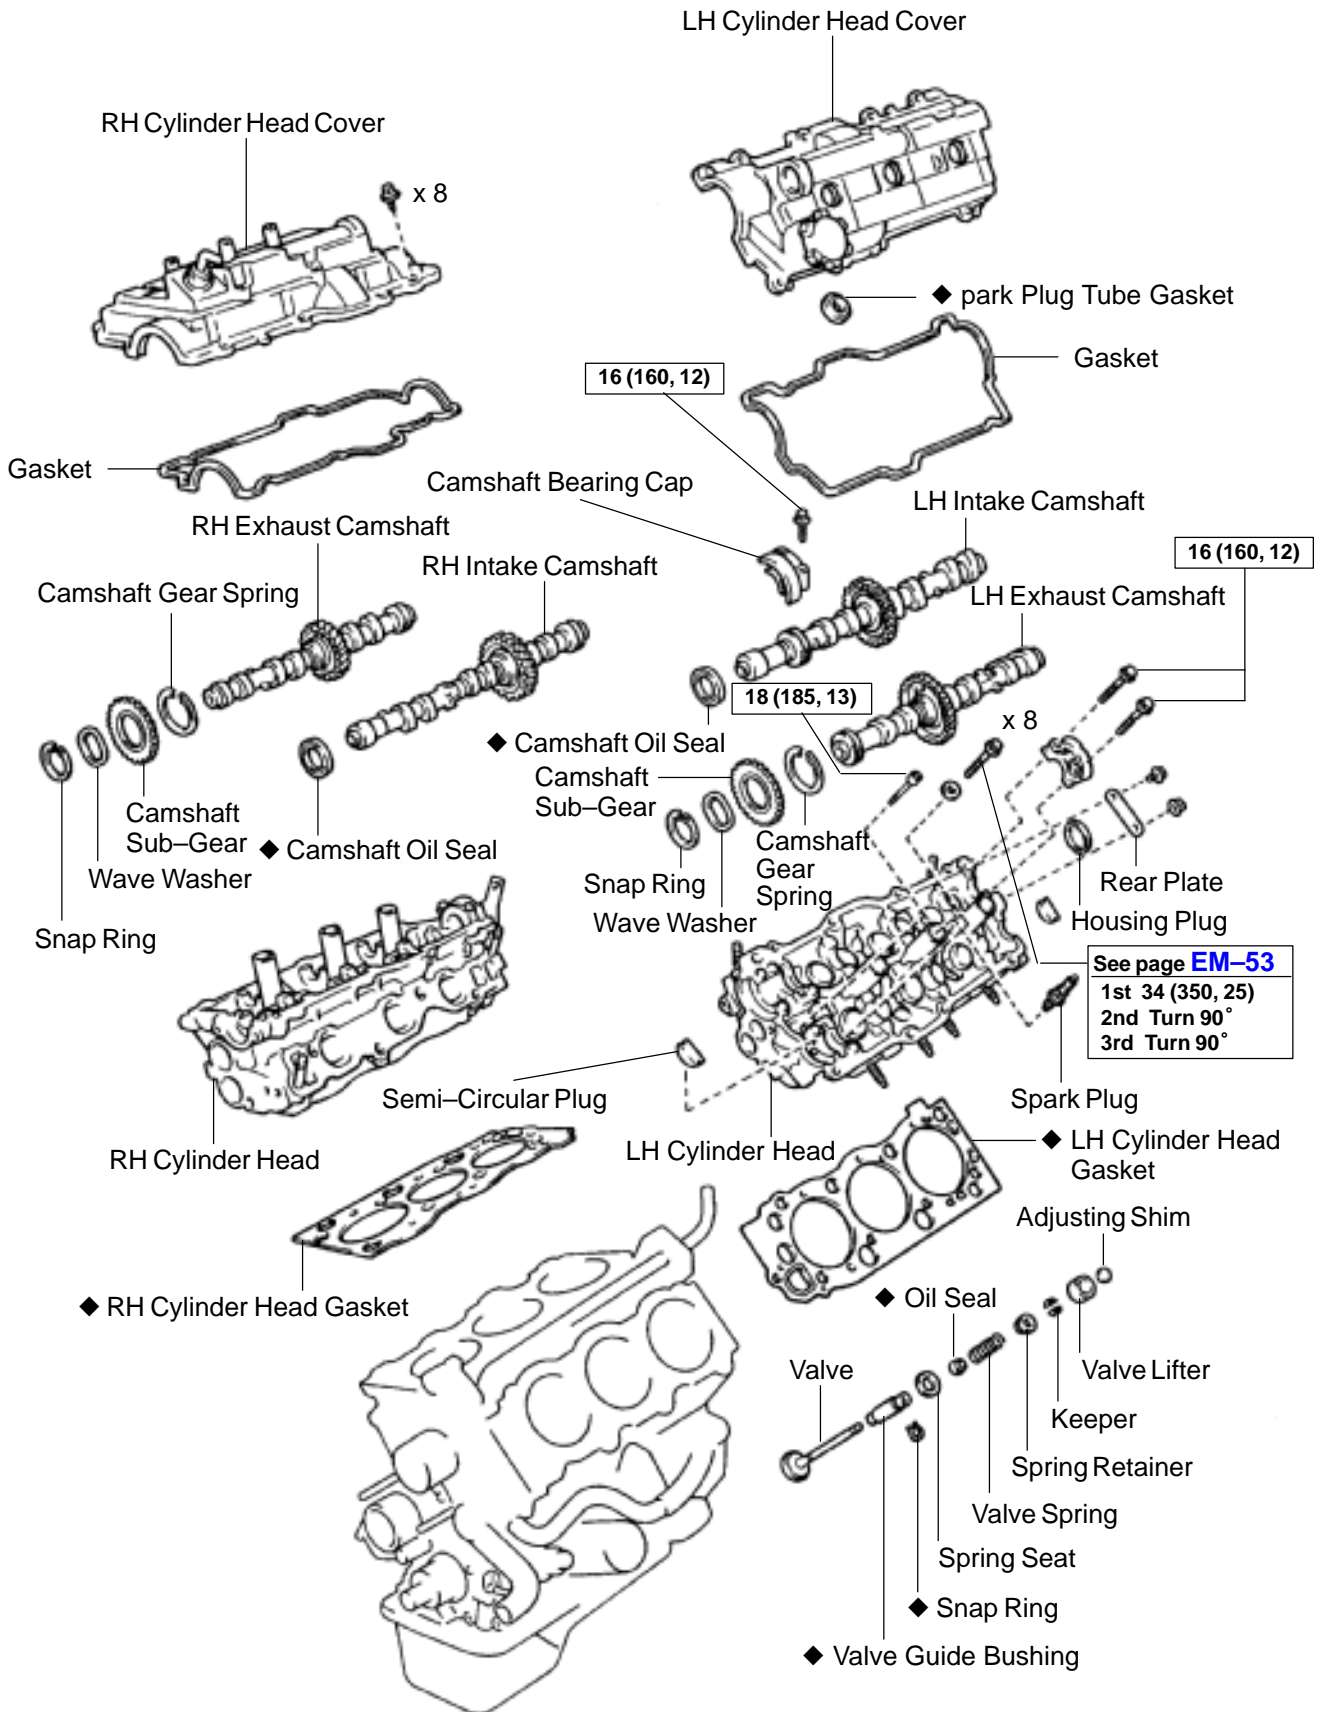

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

A06828