



SERVICE HINTS

C4 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with ignition SW at **ON** and **ACC** position

1-GROUND : Always continuity

C7 CLOCK

1-GROUND : Always approx. **12** volts (Power for clock)

4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position (Power for indication)

3-GROUND : Approx. **12** volts with light control SW at **TAIL** or **HEAD** position (Signal of indication)

2-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C4	32	C7	32		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	22	Cowl Wire and J/B No.1 (Lower Finish Panel)
1F	22	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
3C	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3F		
3G	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IE	40	Around the Right Edge of the Reinforcement
IG	40	Around the Left Edge of the Reinforcement

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	40	Cowl Wire			