



## Starting (Access/Standard Cab)

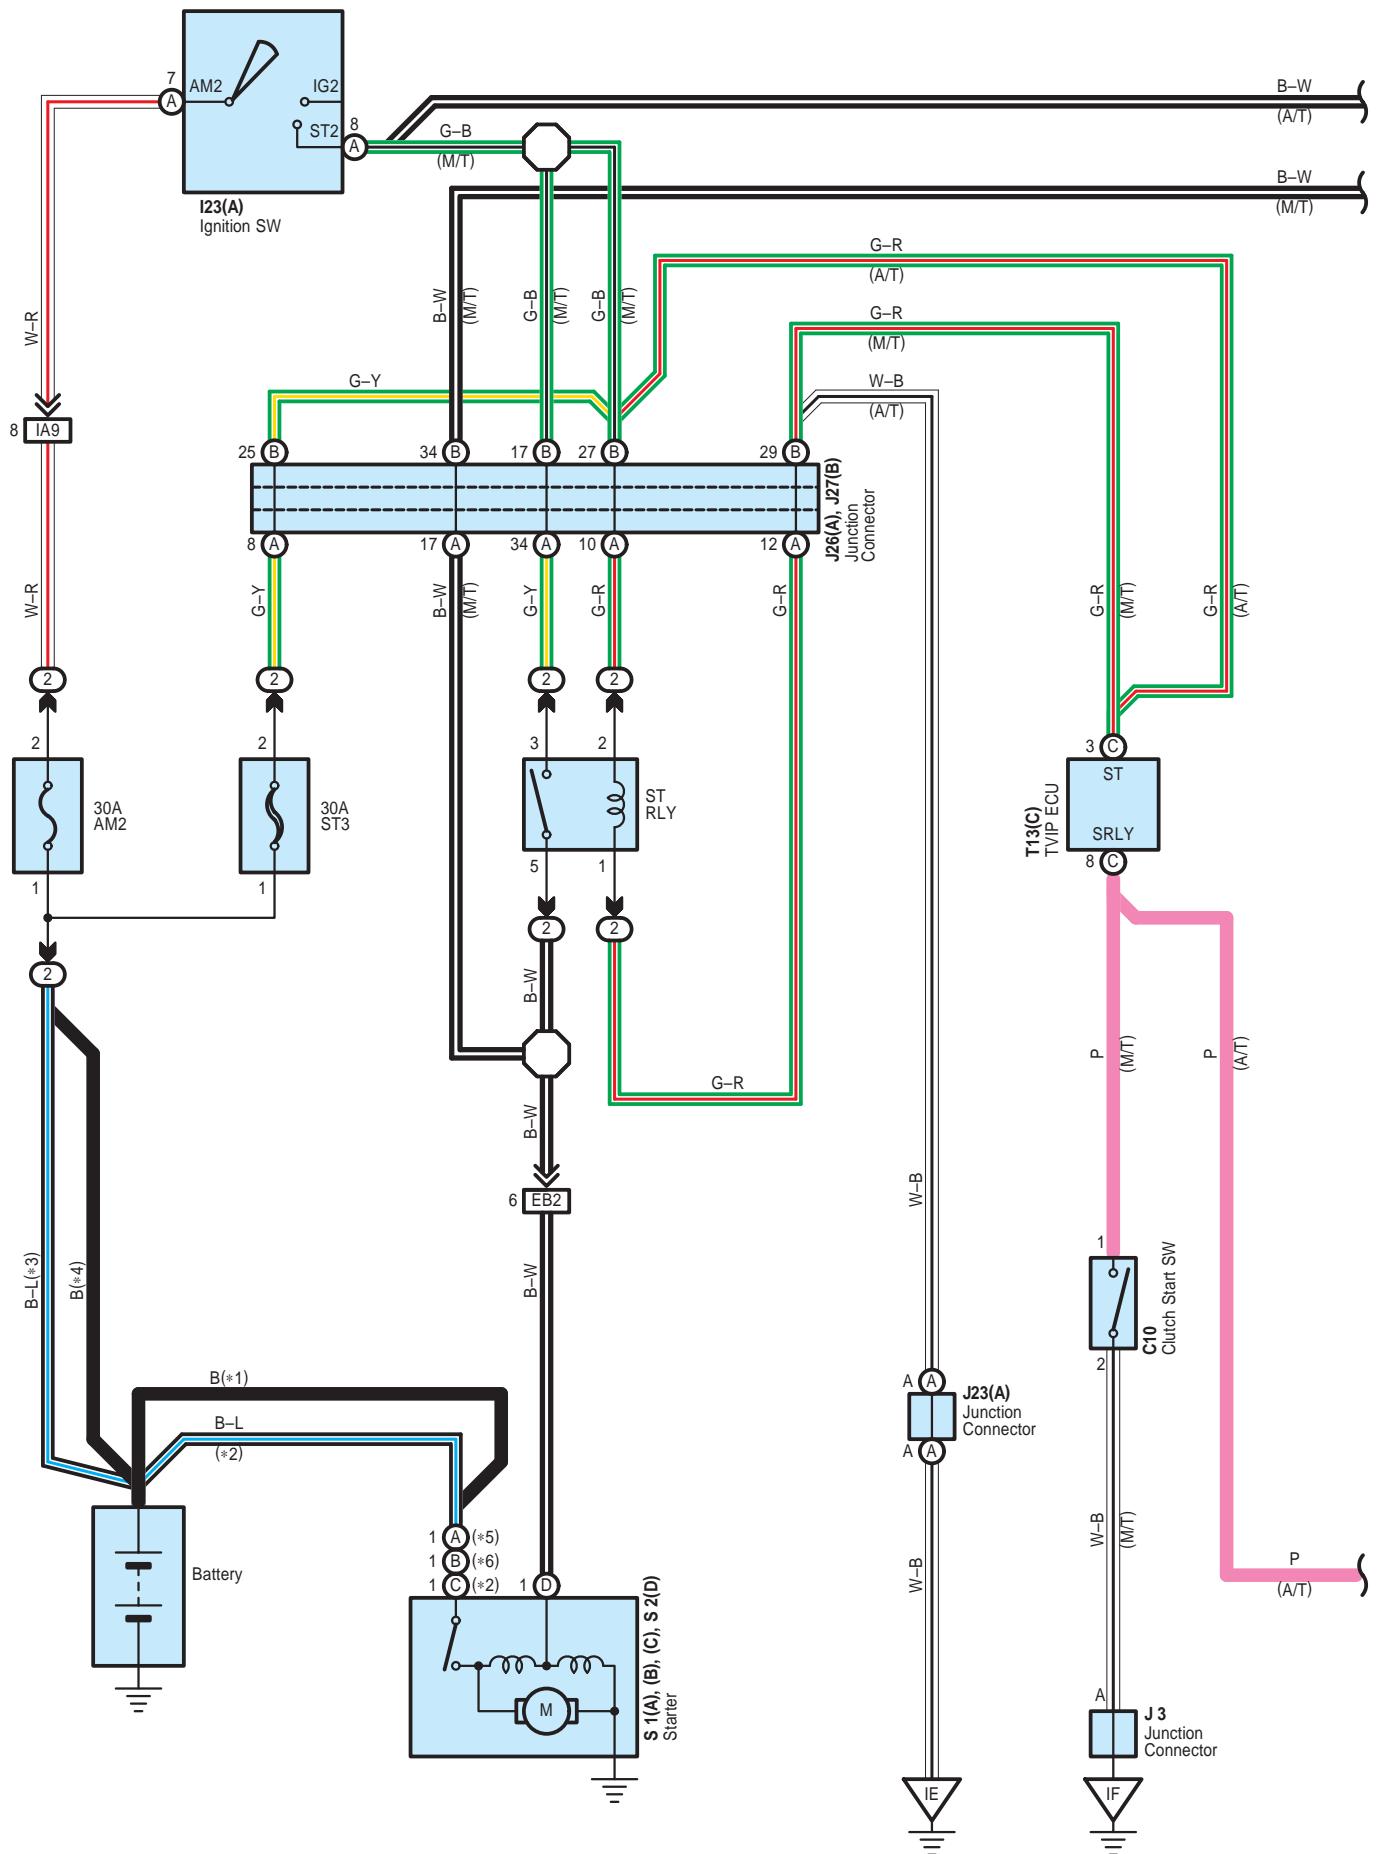

- \* 1 : 1GR-FE
- \* 2 : 2UZ-FE
- \* 3 : Towing Package
- \* 4 : Except Towing Package
- \* 5 : 1GR-FE Cold Area Spec.
- \* 6 : 1GR-FE Except Cold Area Spec.

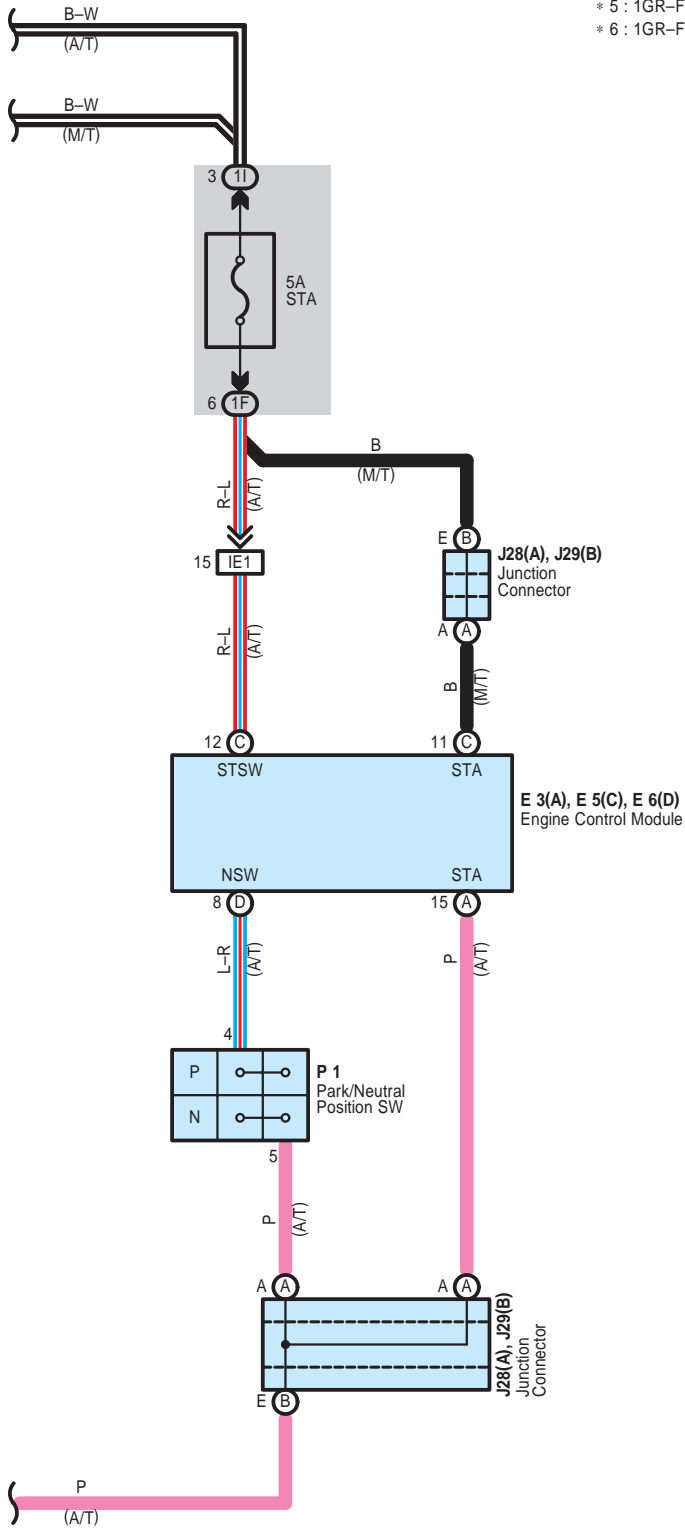

## Starting (Access/Standard Cab)

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	60	J26	A	62	
E3	A	J27	B	62	S1
E5	C	J28	A	62	
E6	D	J29	B	62	S2
I23	A	P1		57 (2UZ-FE)	T13
J3	62			59 (1GR-FE)	C
J23	A	S1	A	59 (1GR-FE)	

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1I	26 (*1)	
	30 (*2)	

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	80 (2UZ-FE)	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B)
	81 (1GR-FE)	
IA9	82	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

### : Ground Points

Code	See Page	Ground Points Location
IE	82	Left Kick Panel
IF		

\* 1 : w/o Daytime Running Light    \* 2 : w/ Daytime Running Light    \* 3 : Access Cab    \* 4 : Standard Cab    \* 5 : Access Cab Captain Seat  
 \* 6 : Access Cab Separate Seat    \* 7 : Standard Cab Bench Seat

