



Ignition (Double Cab)

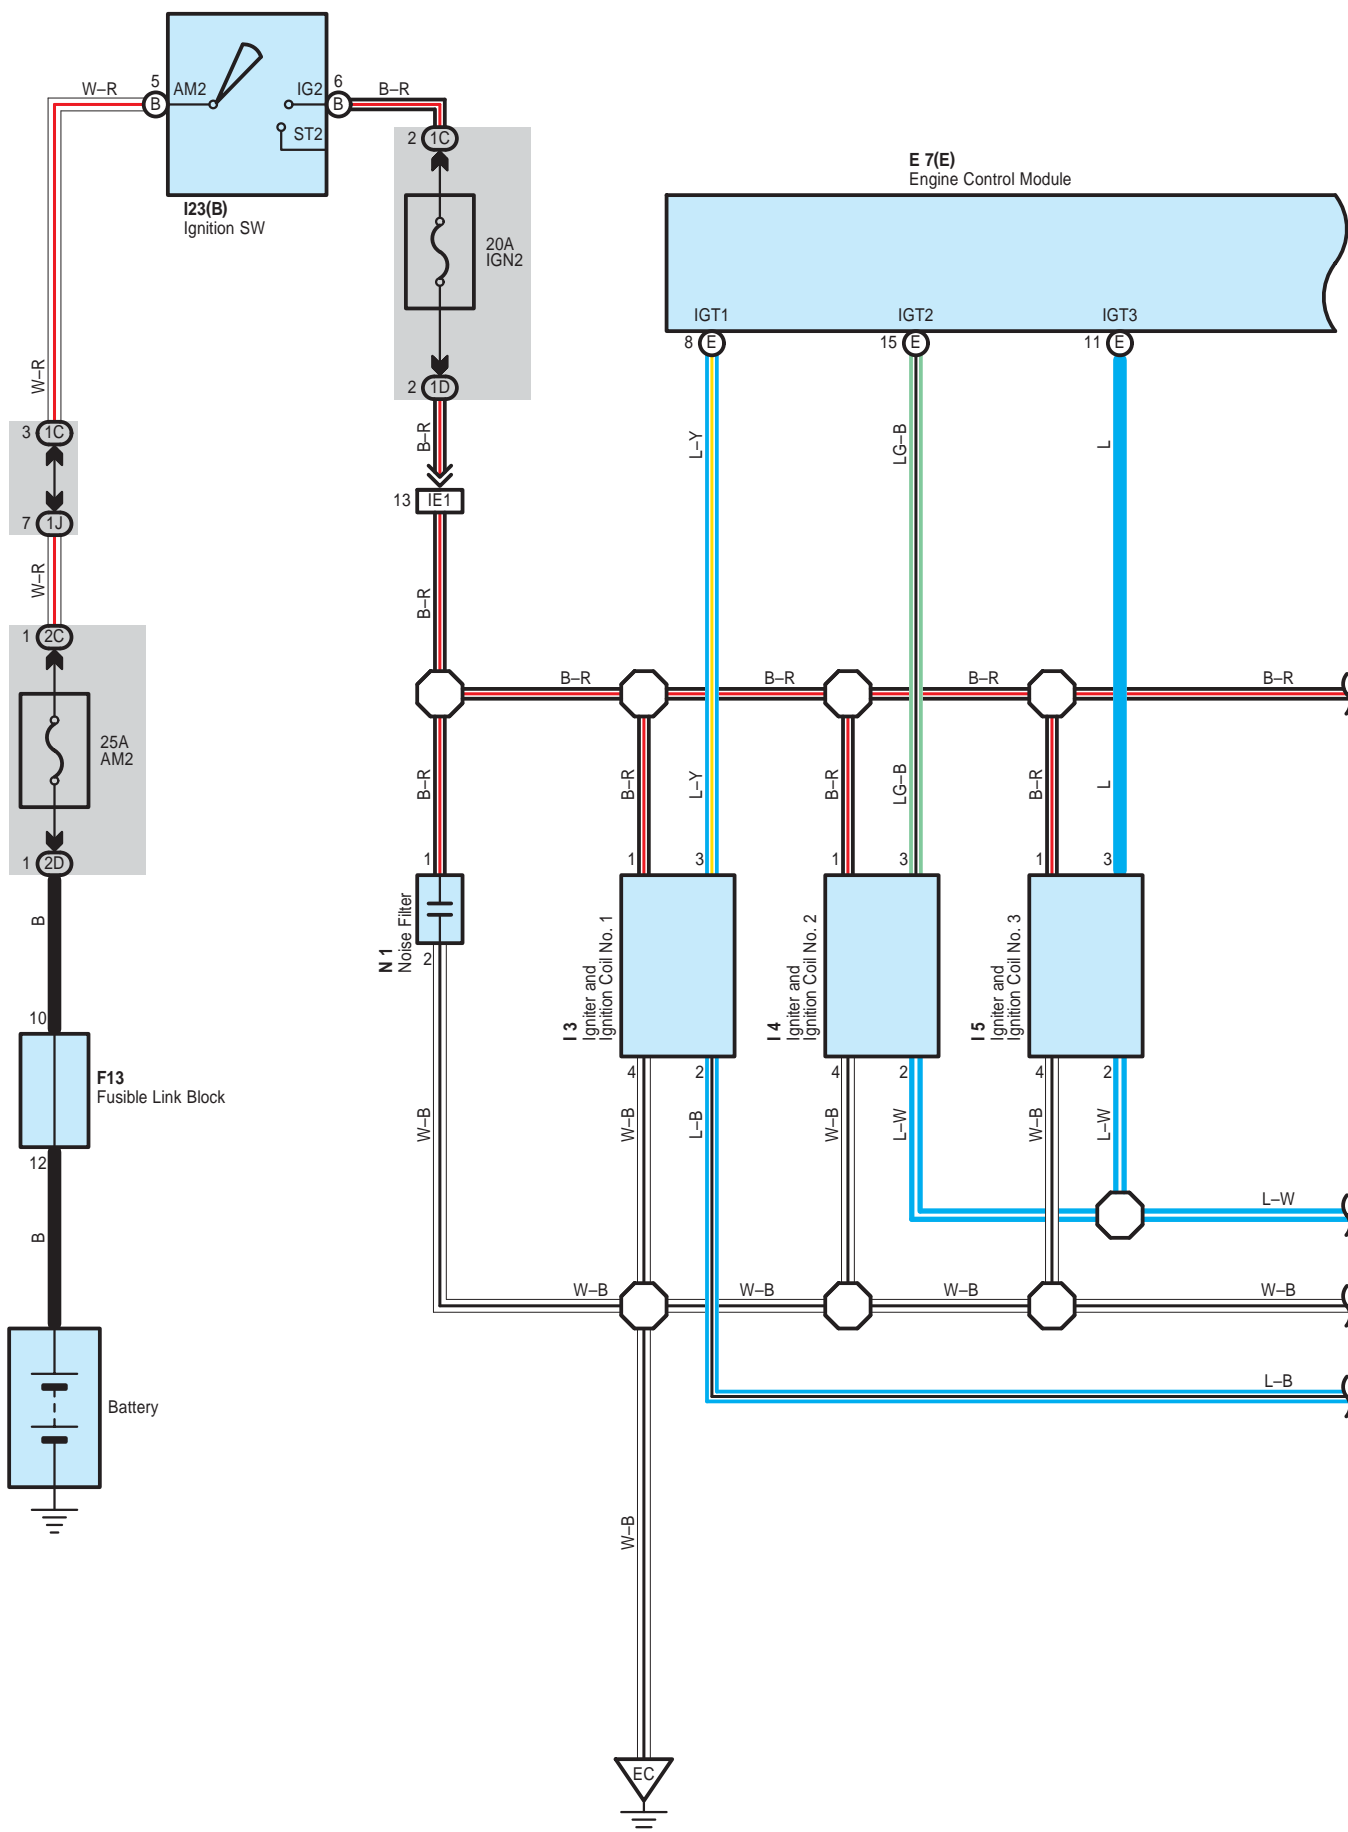

E 7(E)
Engine Control Module

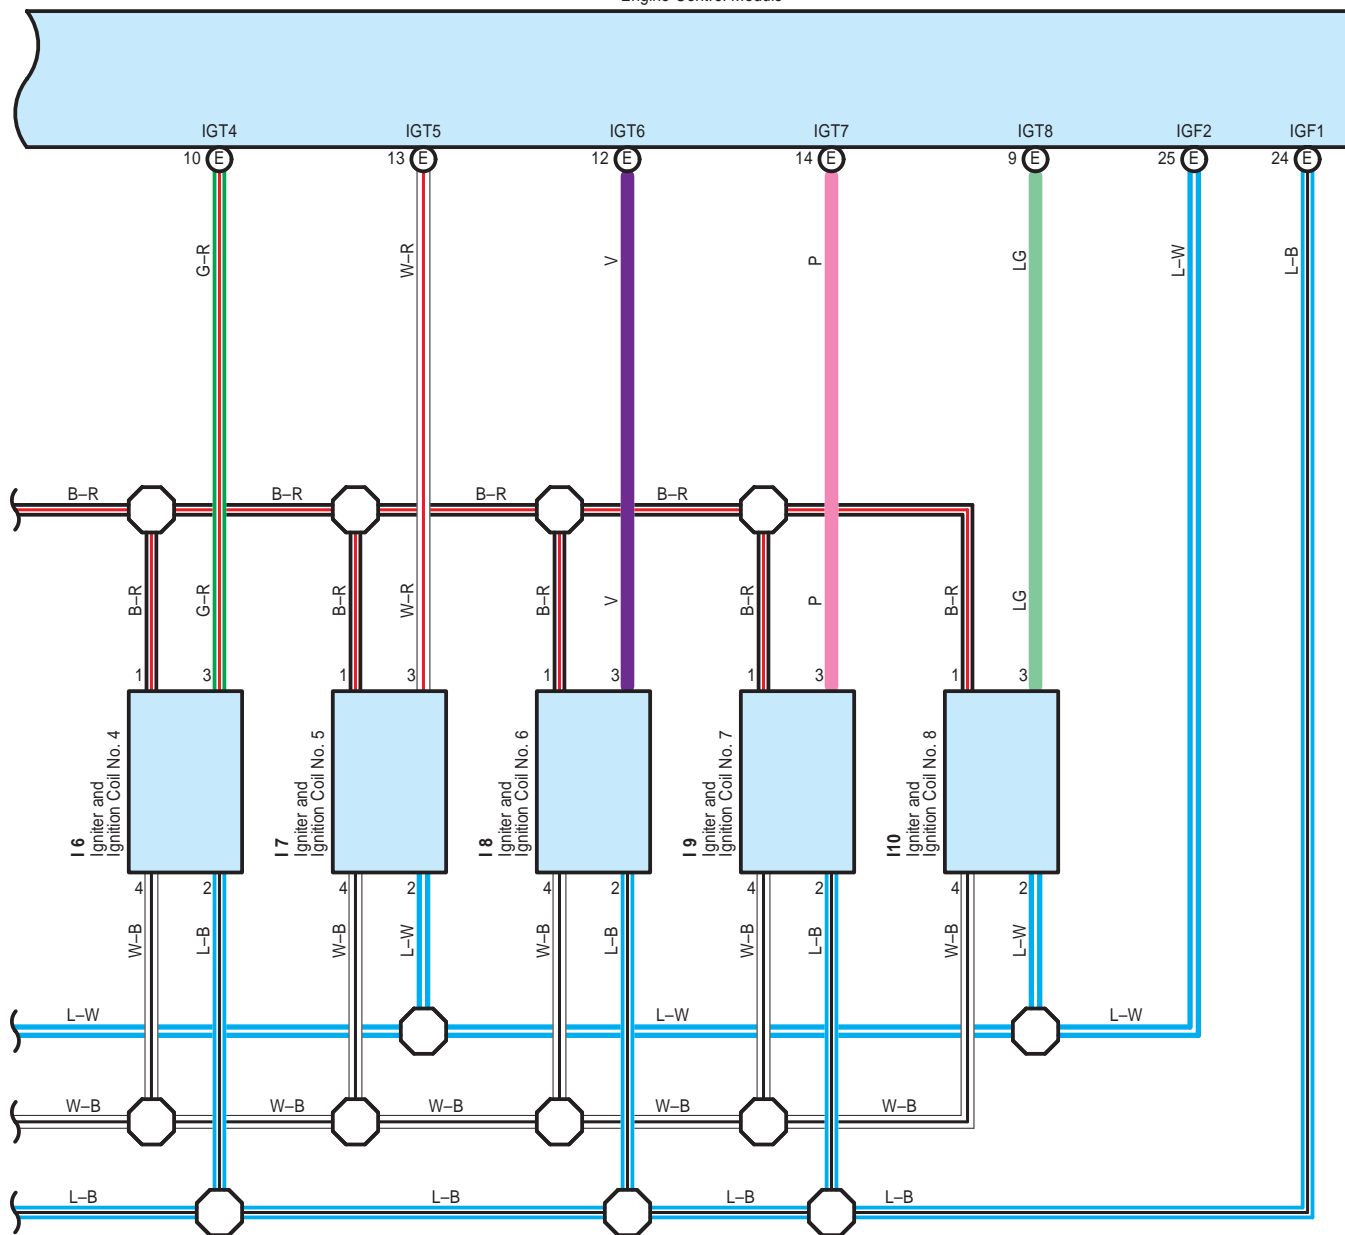

Ignition (Double Cab)

: Parts Location

Code		See Page	Code	See Page	Code	See Page	
E7	E	73	I5	71	I9	71	
F13		70	I6	71	I10	71	
I3		71	I7	71	I23	B	73
I4		71	I8	71	N1	71	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1D		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

: Ground Points

Code	See Page	Ground Points Location
EC	90	Rear Bank of Left Cylinder Head

