



Engine Immobiliser System (Double Cab)

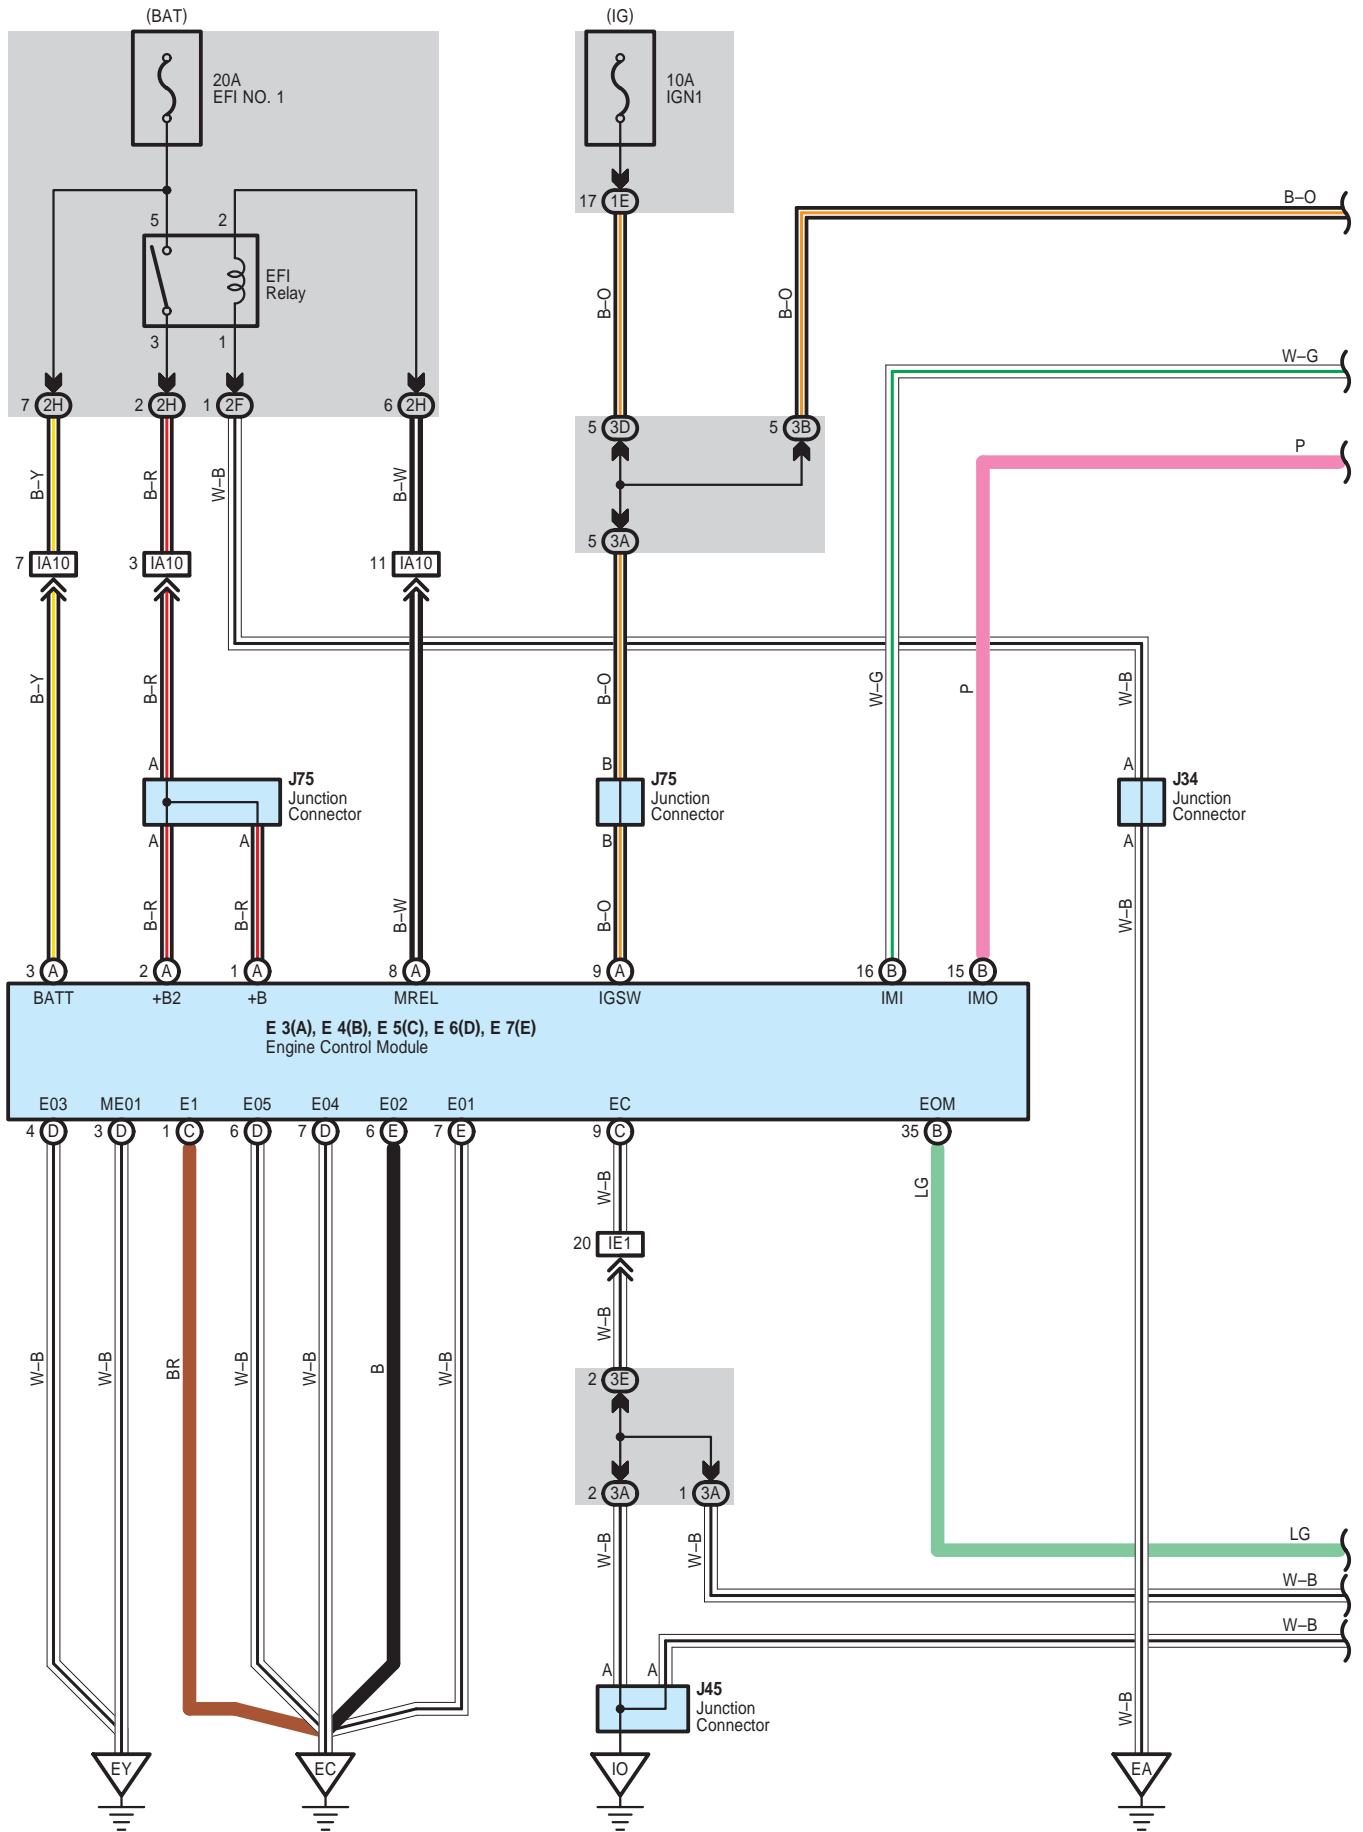

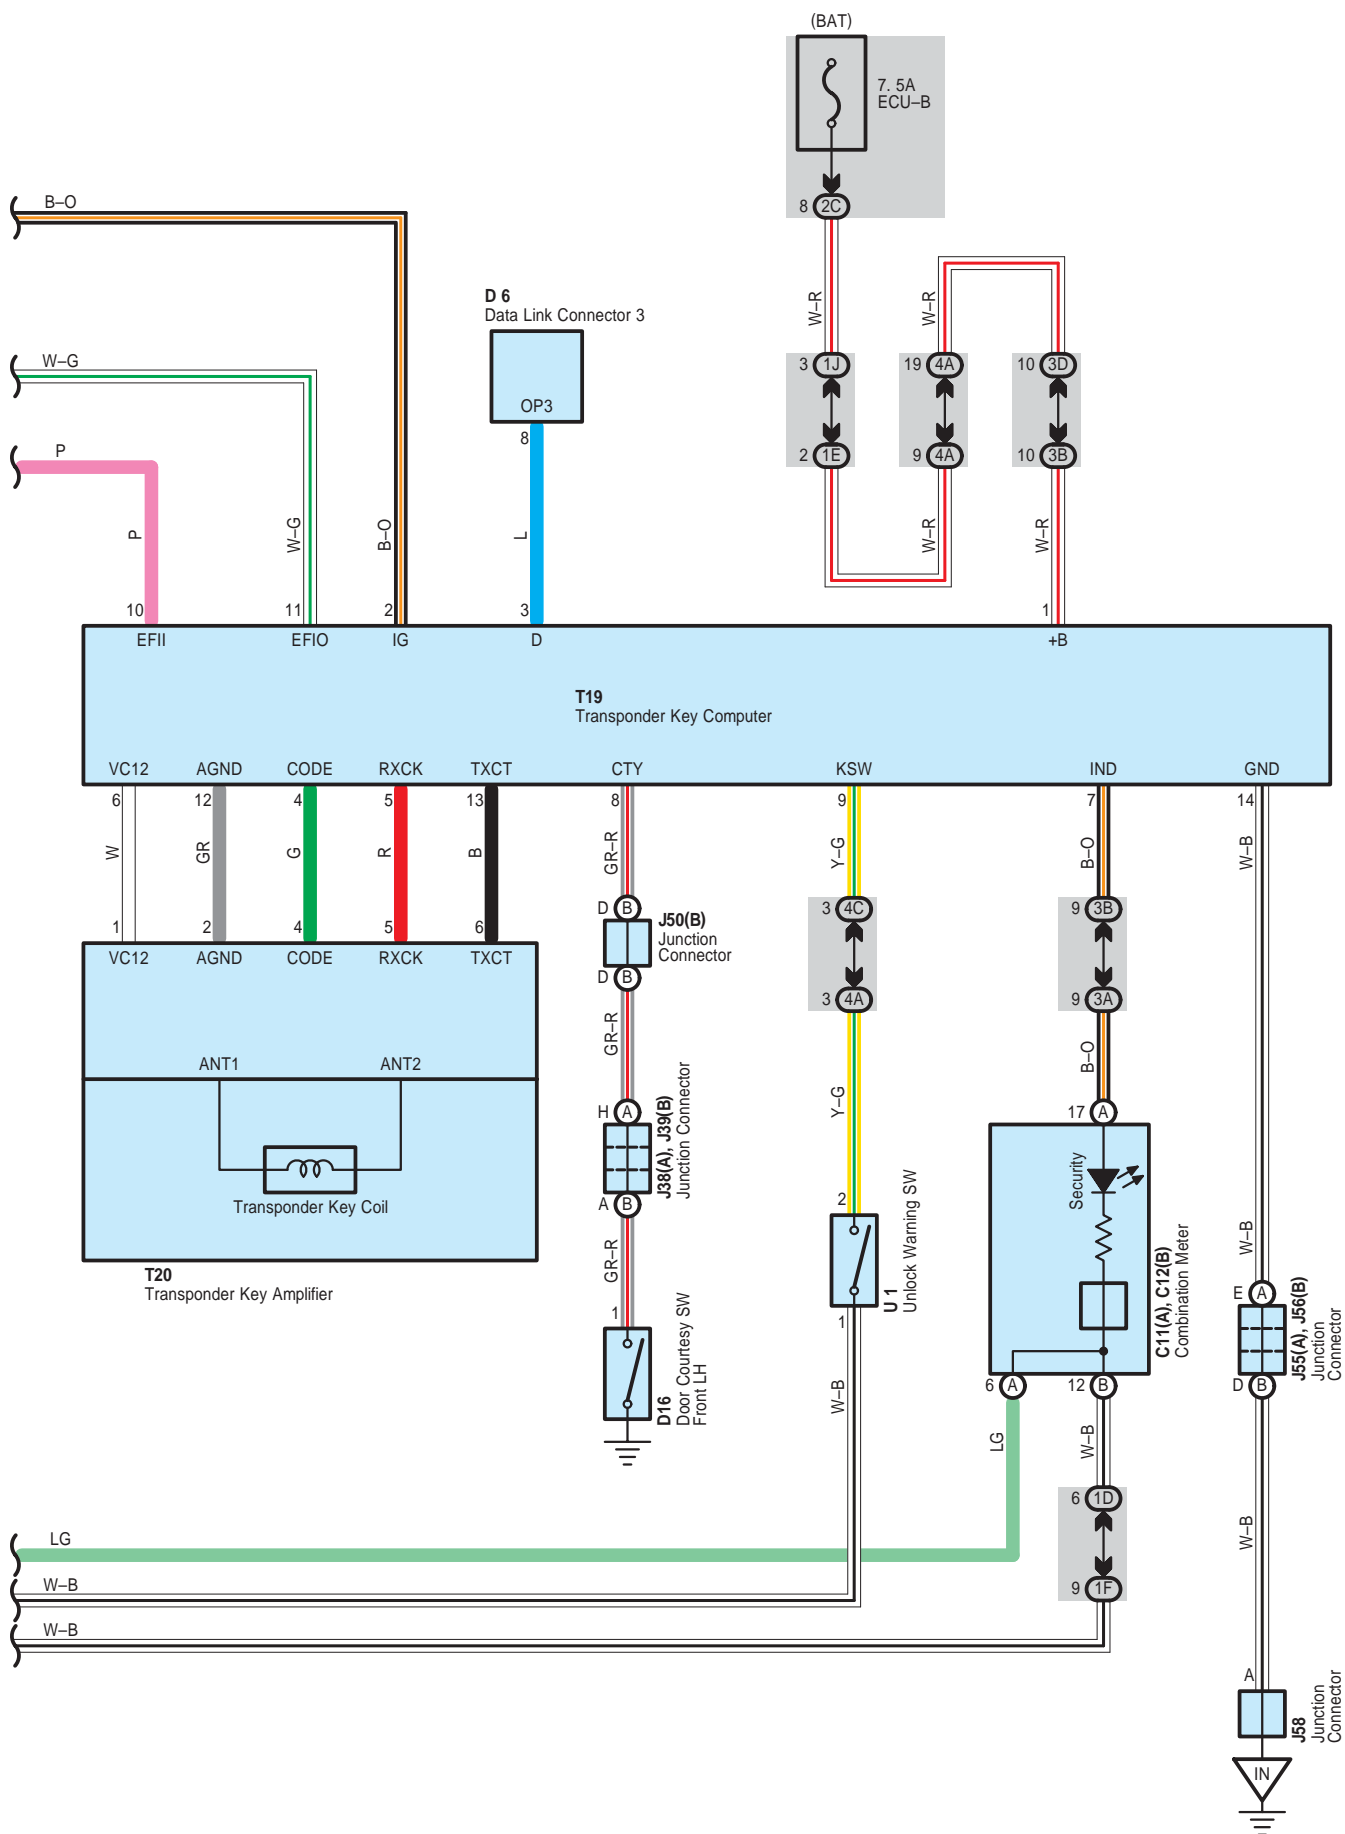

Engine Immobiliser System (Double Cab)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C11	A	72	E6	D	73	J55	A	74
C12	B	72	E7	E	73	J56	B	74
D6		73	J34		71	J58		74
D16		76	J38	A	74	J75		74
E3	A	73	J39	B	74	T19		75
E4	B	73	J45		74	T20		75
E5	C	73	J50	B	74	U1		75

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2H		
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
3D		
3E		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA10	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

: Ground Points

Code	See Page	Ground Points Location
EA	90	Front Left Fender Apron
EC	90	Rear Bank of Left Cylinder Head
EY	90	Front Left Side of Cylinder Head
IN	92	Right Kick Panel
IO	92	Left Kick Panel

