



Taillight (Double Cab)

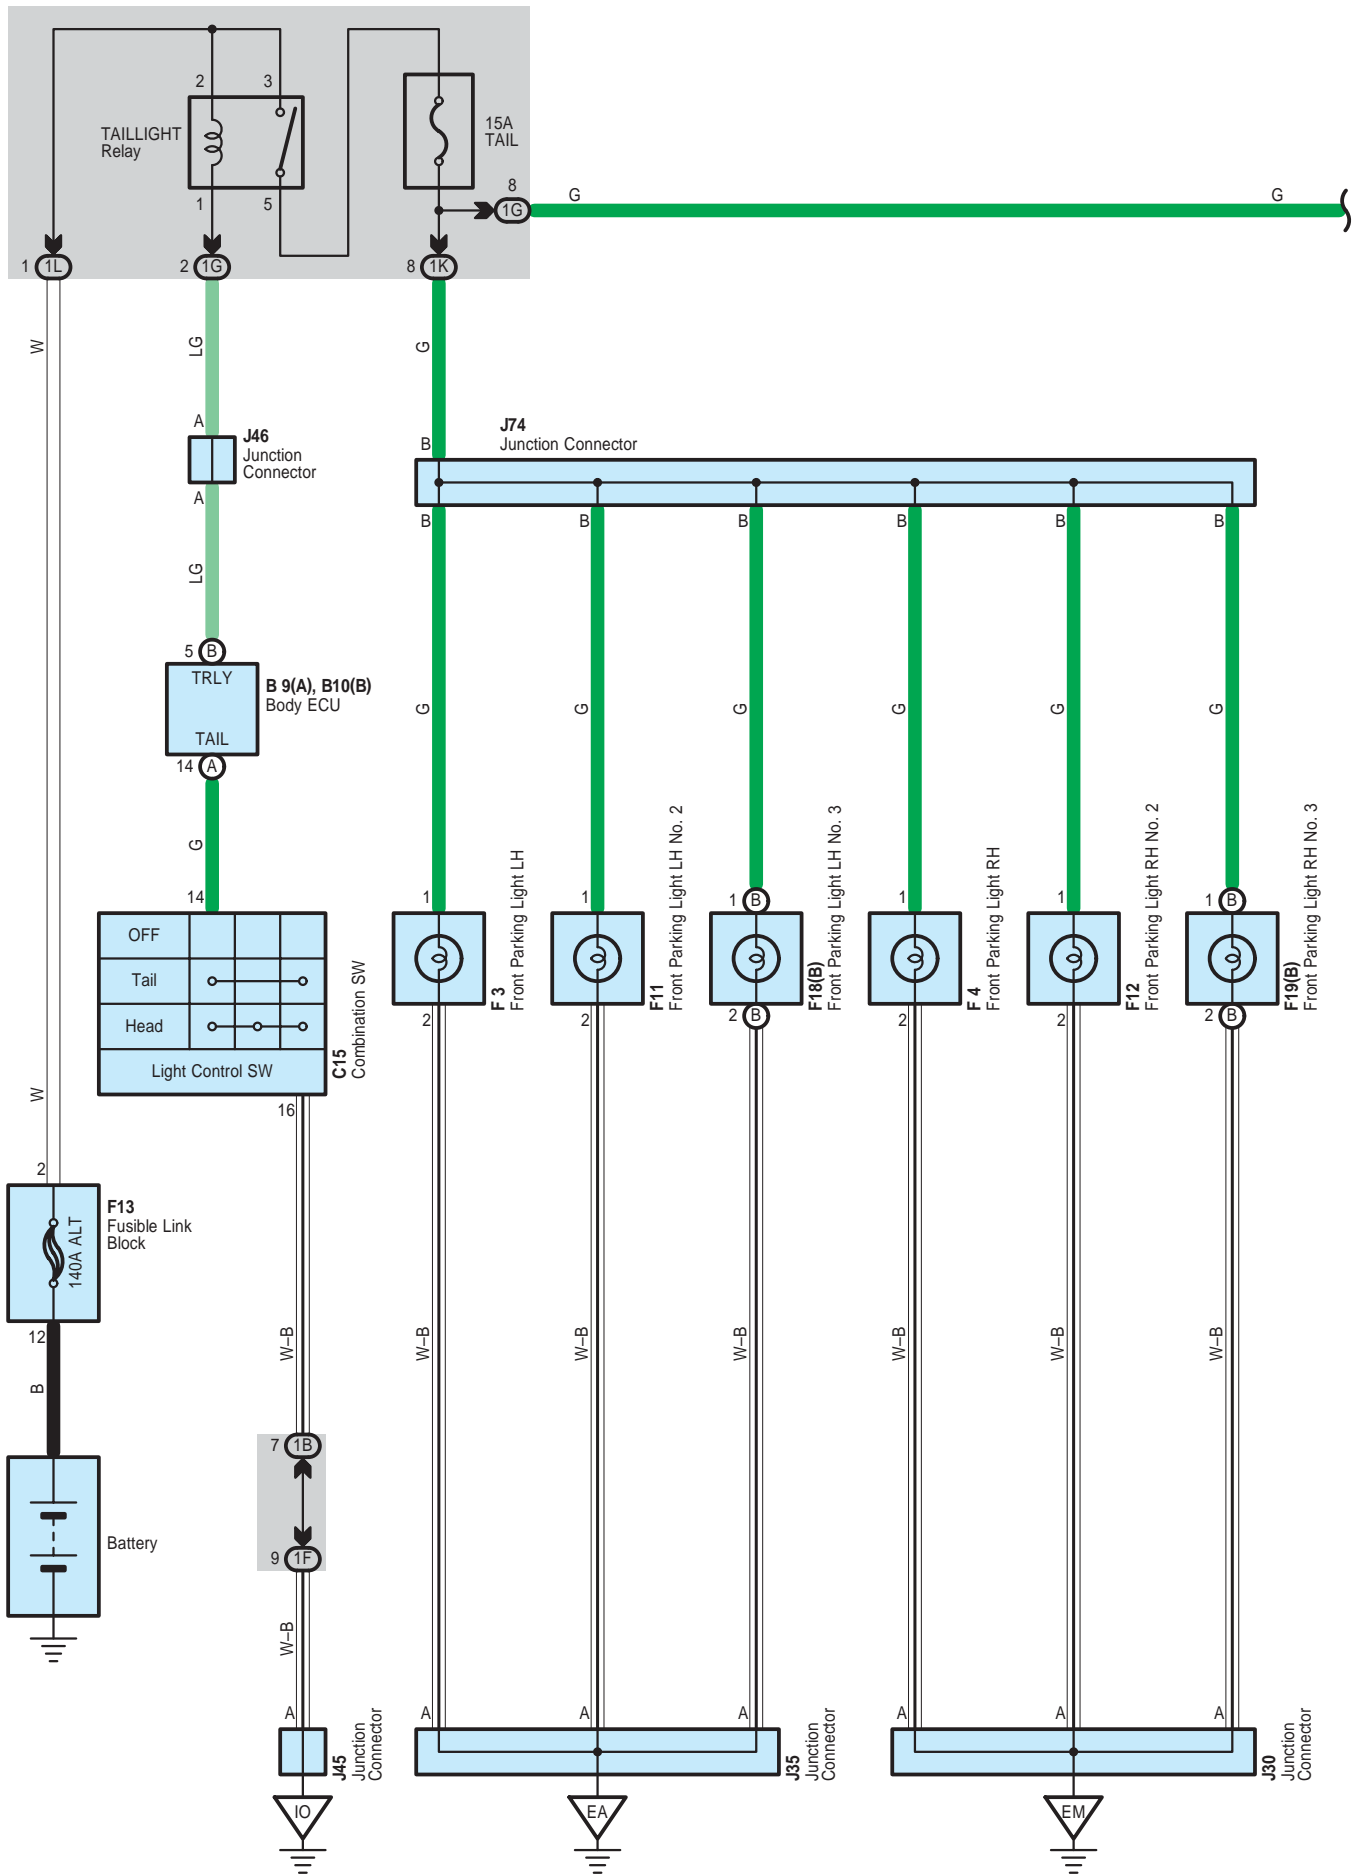

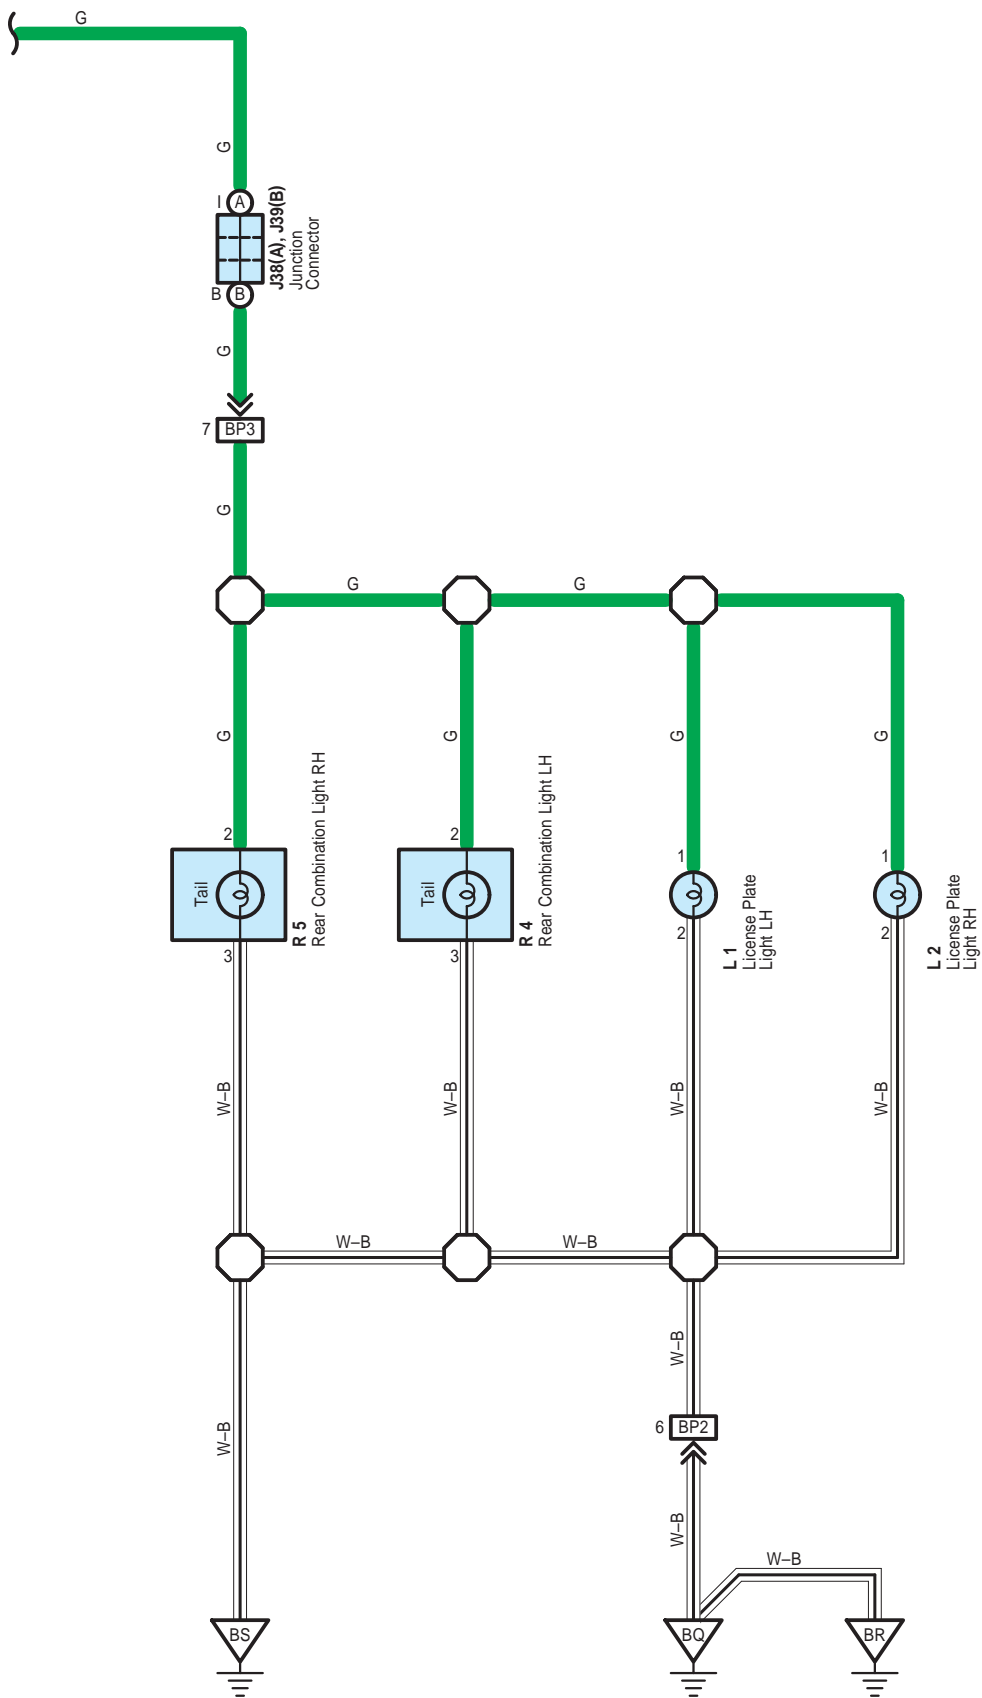

Taillight (Double Cab)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B9	A	72	F13		70	J45	74	
B10	B	72	F18	B	70	J46	74	
C15		72	F19	B	70	J74	71	
F3		70	J30		71	L1	76	
F4		70	J35		71	L2	76	
F11		70	J38	A	74	R4	77	
F12		70	J39	B	74	R5	77	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1K	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BP2	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)
BP3		

: Ground Points

Code	See Page	Ground Points Location
EA	90	Front Left Fender Apron
EM	90	Radiator Side Support RH
IO	92	Left Kick Panel
BQ	94	Left Side of Center Pillar
BR	94	Back Panel Left
BS	94	Surrounding of the Front of the Fuel Tank

