



Headlight with DRL (Access/Standard Cab)

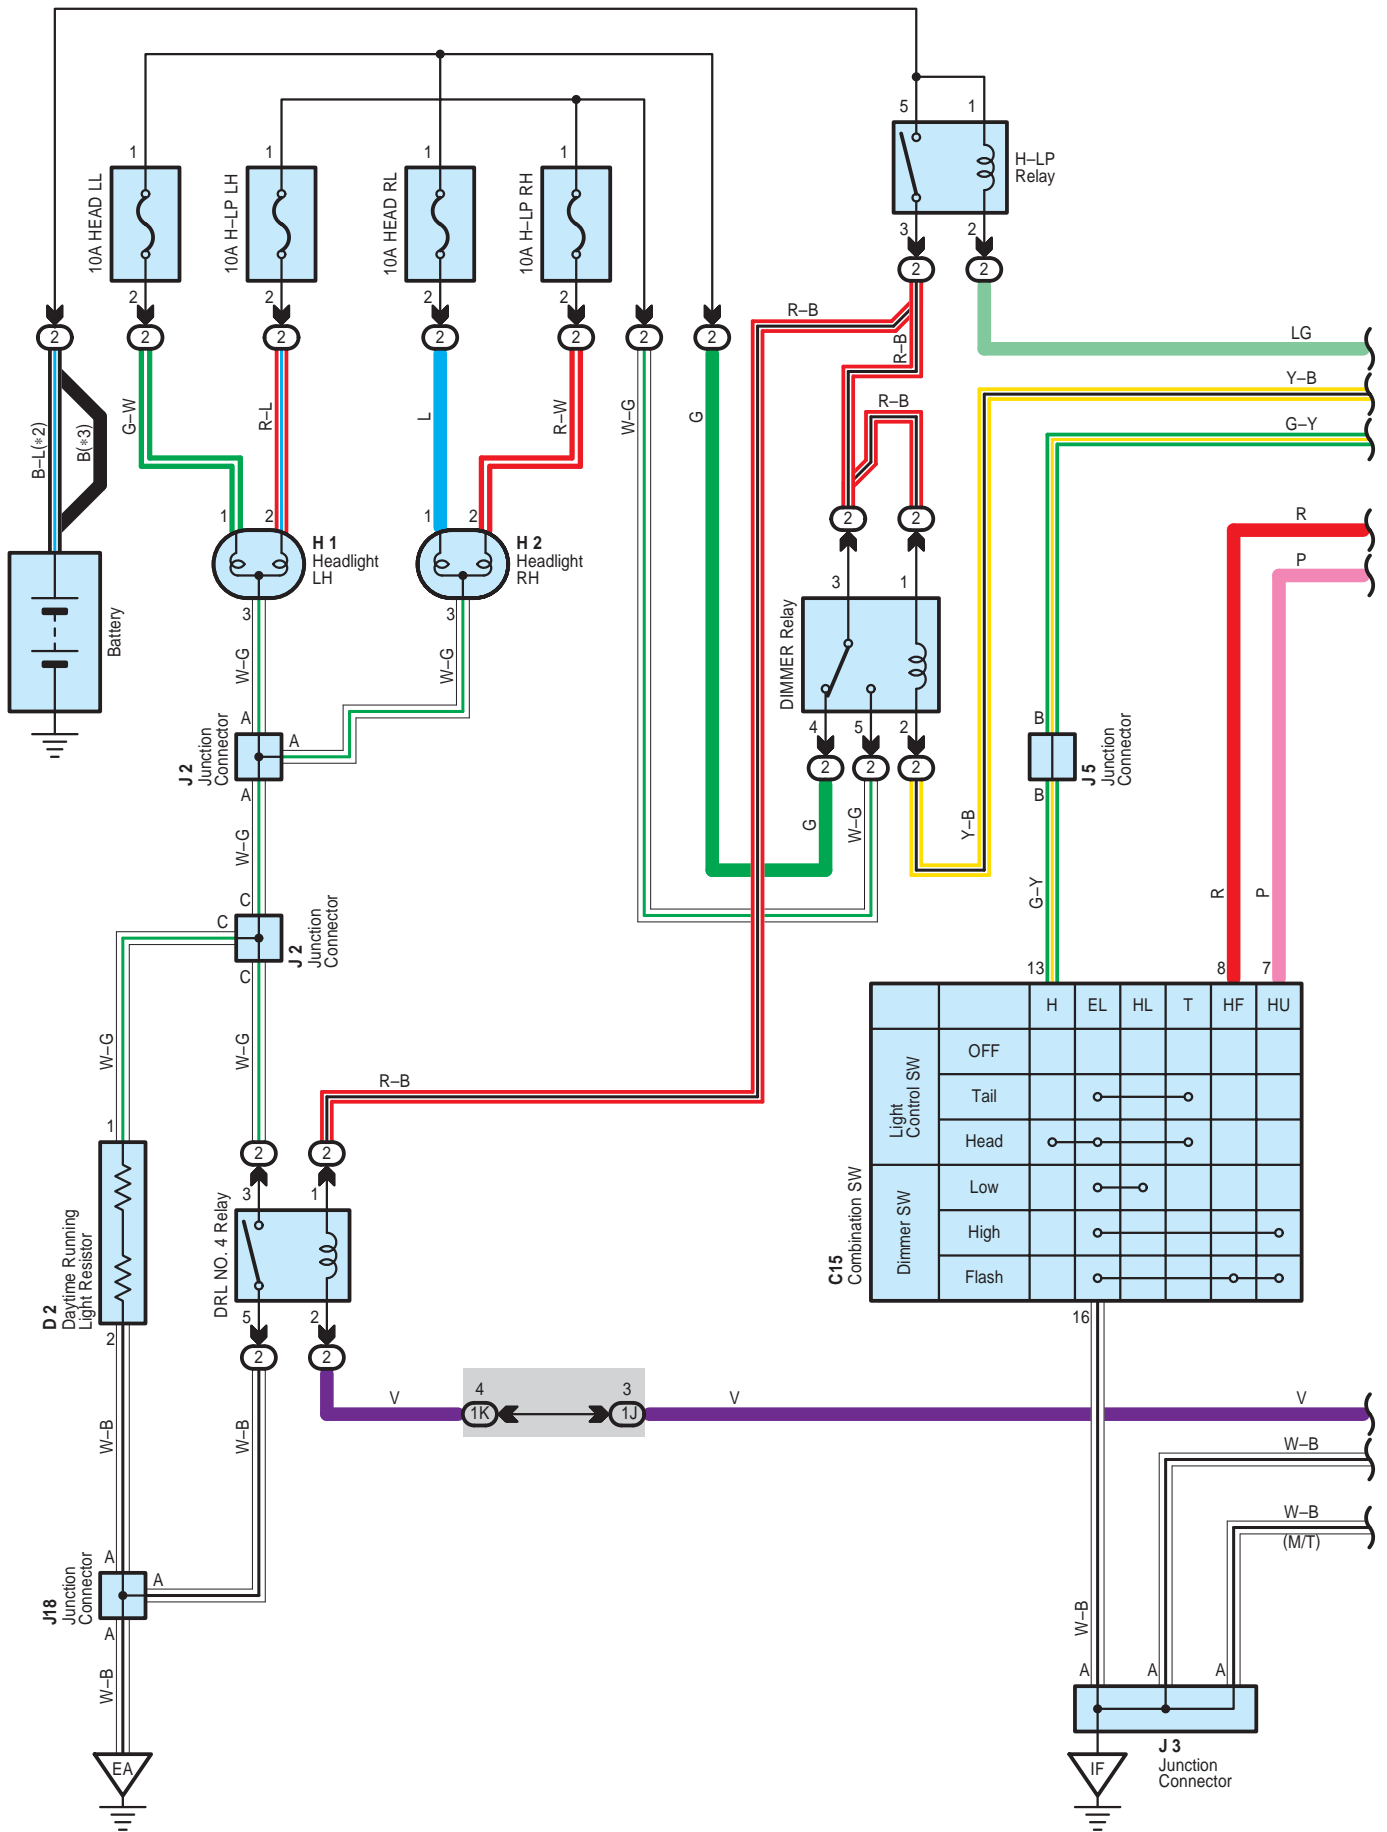

- * 1 : w/ VSC
- * 2 : Towing Package
- * 3 : Except Towing Package
- * 4 : 2UZ-FE
- * 5 : 1GR-FE

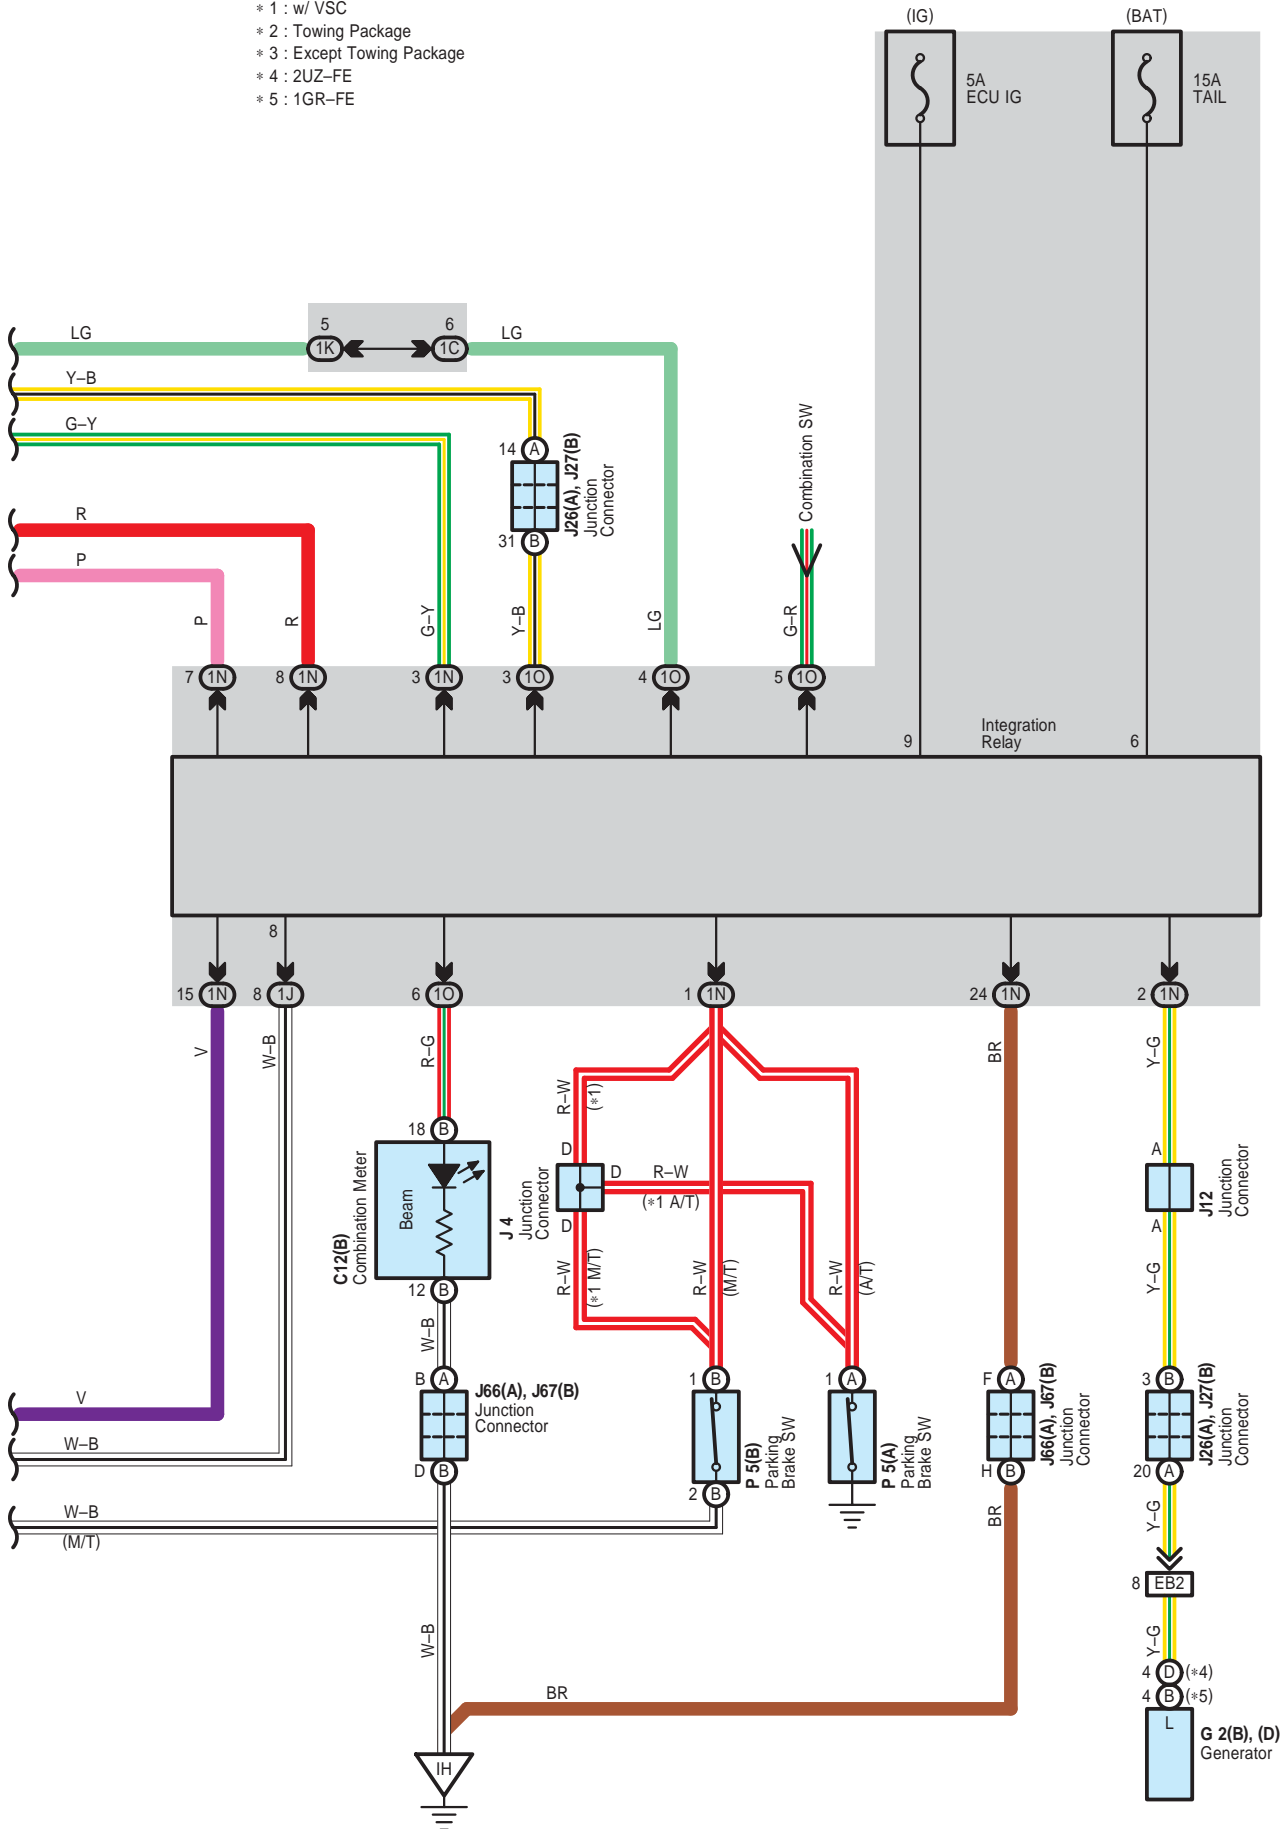

Headlight with DRL (Access/Standard Cab)

System Outline

When the following conditions are met while the ignition SW is ON, and if the light control SW is at OFF or TAIL position, the daytime running light is controlled.

* Parking brake lever is released (Parking brake SW is OFF)

* Input signal from the generator

If any of the following conditions are met, the daytime running light control is canceled.

* Ignition SW is turned OFF.

* Light control SW is at HEAD position.

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
C12	B	60	H2	56 (2UZ–FE)	J18		57 (2UZ–FE)
C15		60		58 (1GR–FE)			59 (1GR–FE)
D2		56 (2UZ–FE)	J2	57 (2UZ–FE)	J26	A	62
		58 (1GR–FE)		59 (1GR–FE)	J27	B	62
G2	B	58 (1GR–FE)	J3	62	J66	A	62
	D	56 (2UZ–FE)	J4	62	J67	B	62
H1		56 (2UZ–FE)	J5	62	P5	A	62
		58 (1GR–FE)	J12	62		B	62

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	30 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K	30 (*2)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1O		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	80 (2UZ-FE)	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B)
	81 (1GR-FE)	

▽ : Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ-FE)	Front Left Fender
	81 (1GR-FE)	
IF	82	Left Kick Panel
IH	82	Right Kick Panel

* 1 : w/o Daytime Running Light

* 2 : w/ Daytime Running Light

* 3 : Access Cab

* 4 : Standard Cab

* 5 : Access Cab Captain Seat

* 6 : Access Cab Separate Seat

* 7 : Standard Cab Bench Seat

