


# Interior Light (Double Cab)

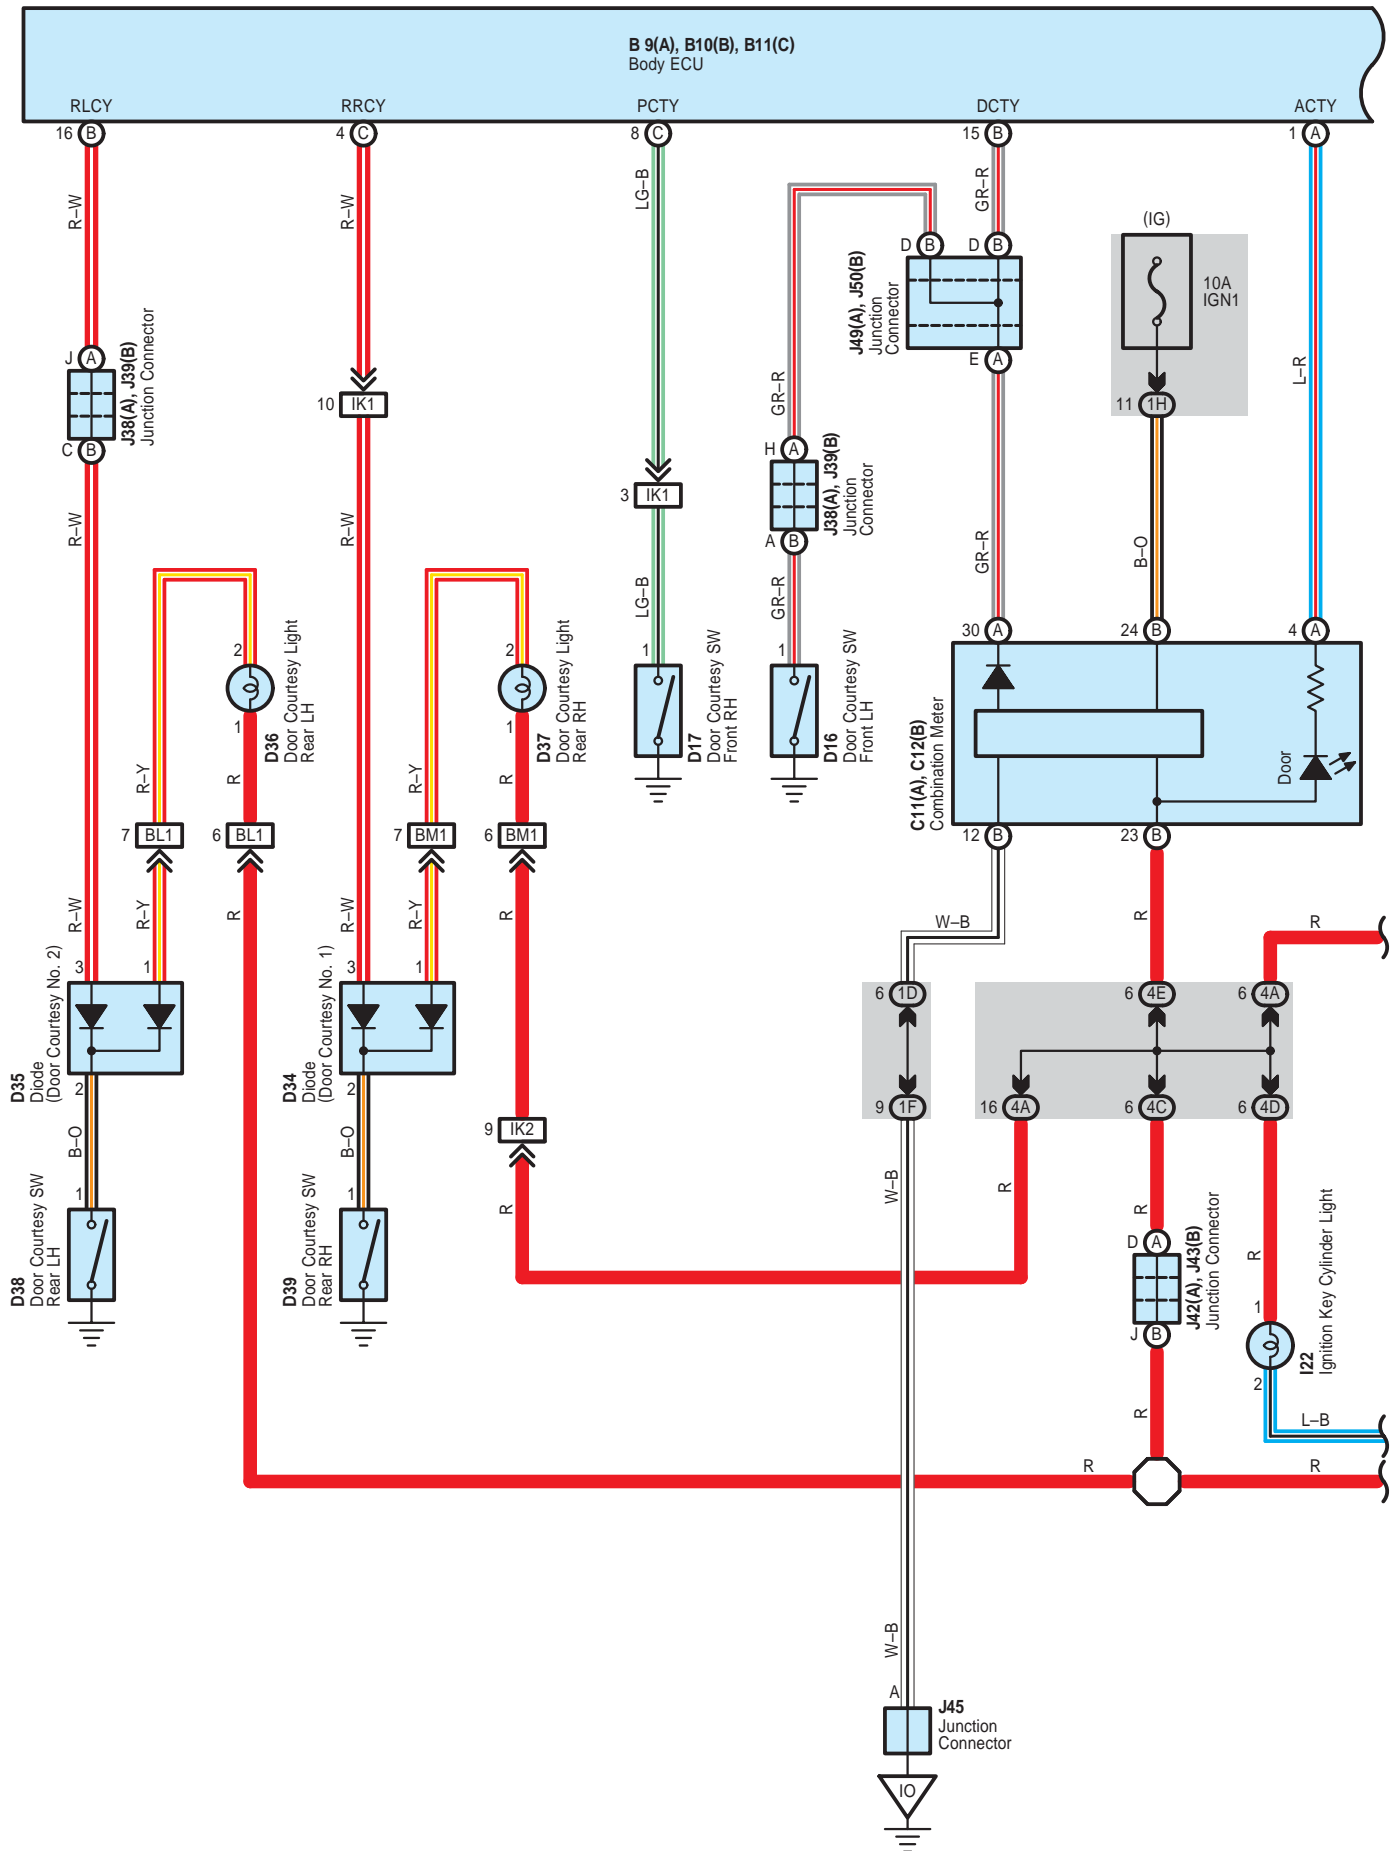


B 9(A), B10(B), B11(C)  
Body ECU


ILE  
8 B

L-B

\* 1 : 6 Speaker  
\* 2 : Except 6 Speaker

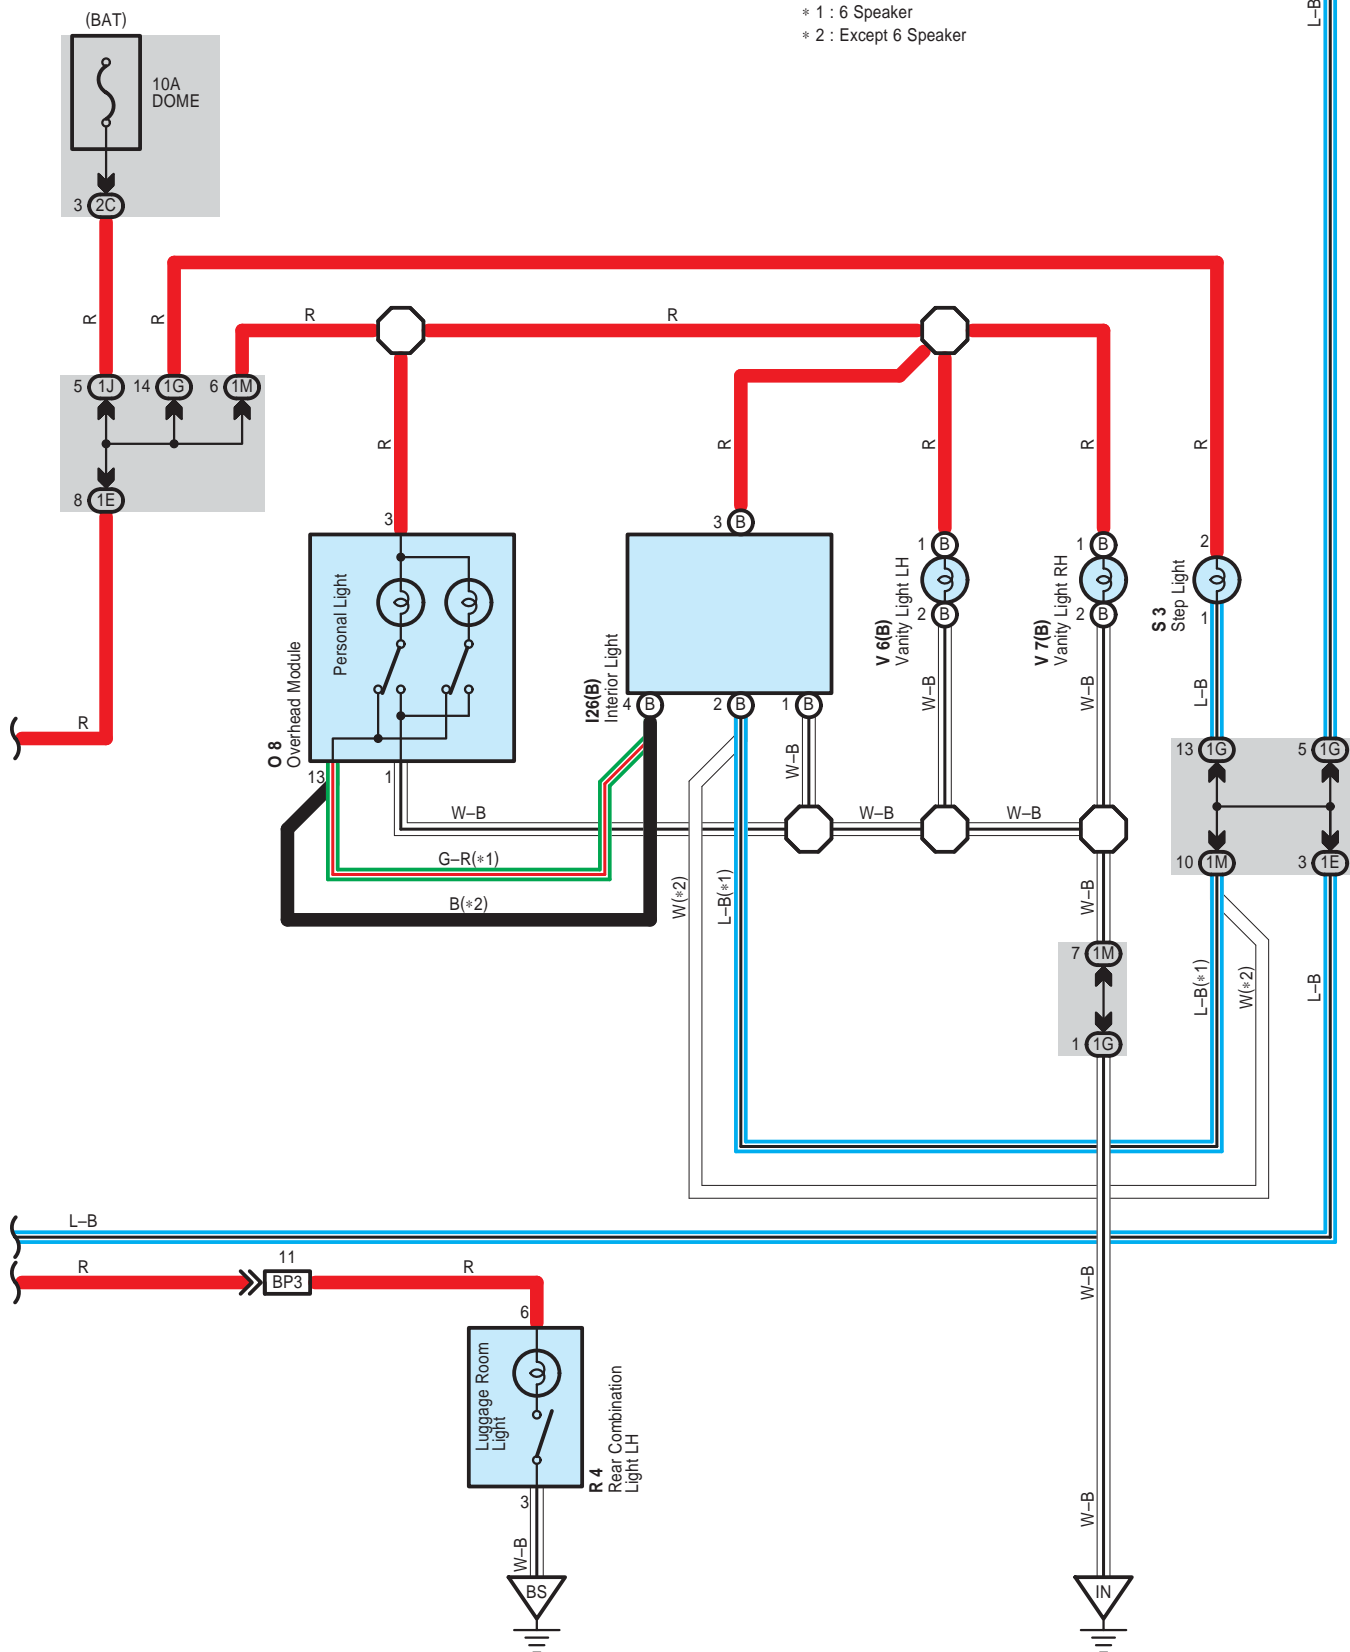



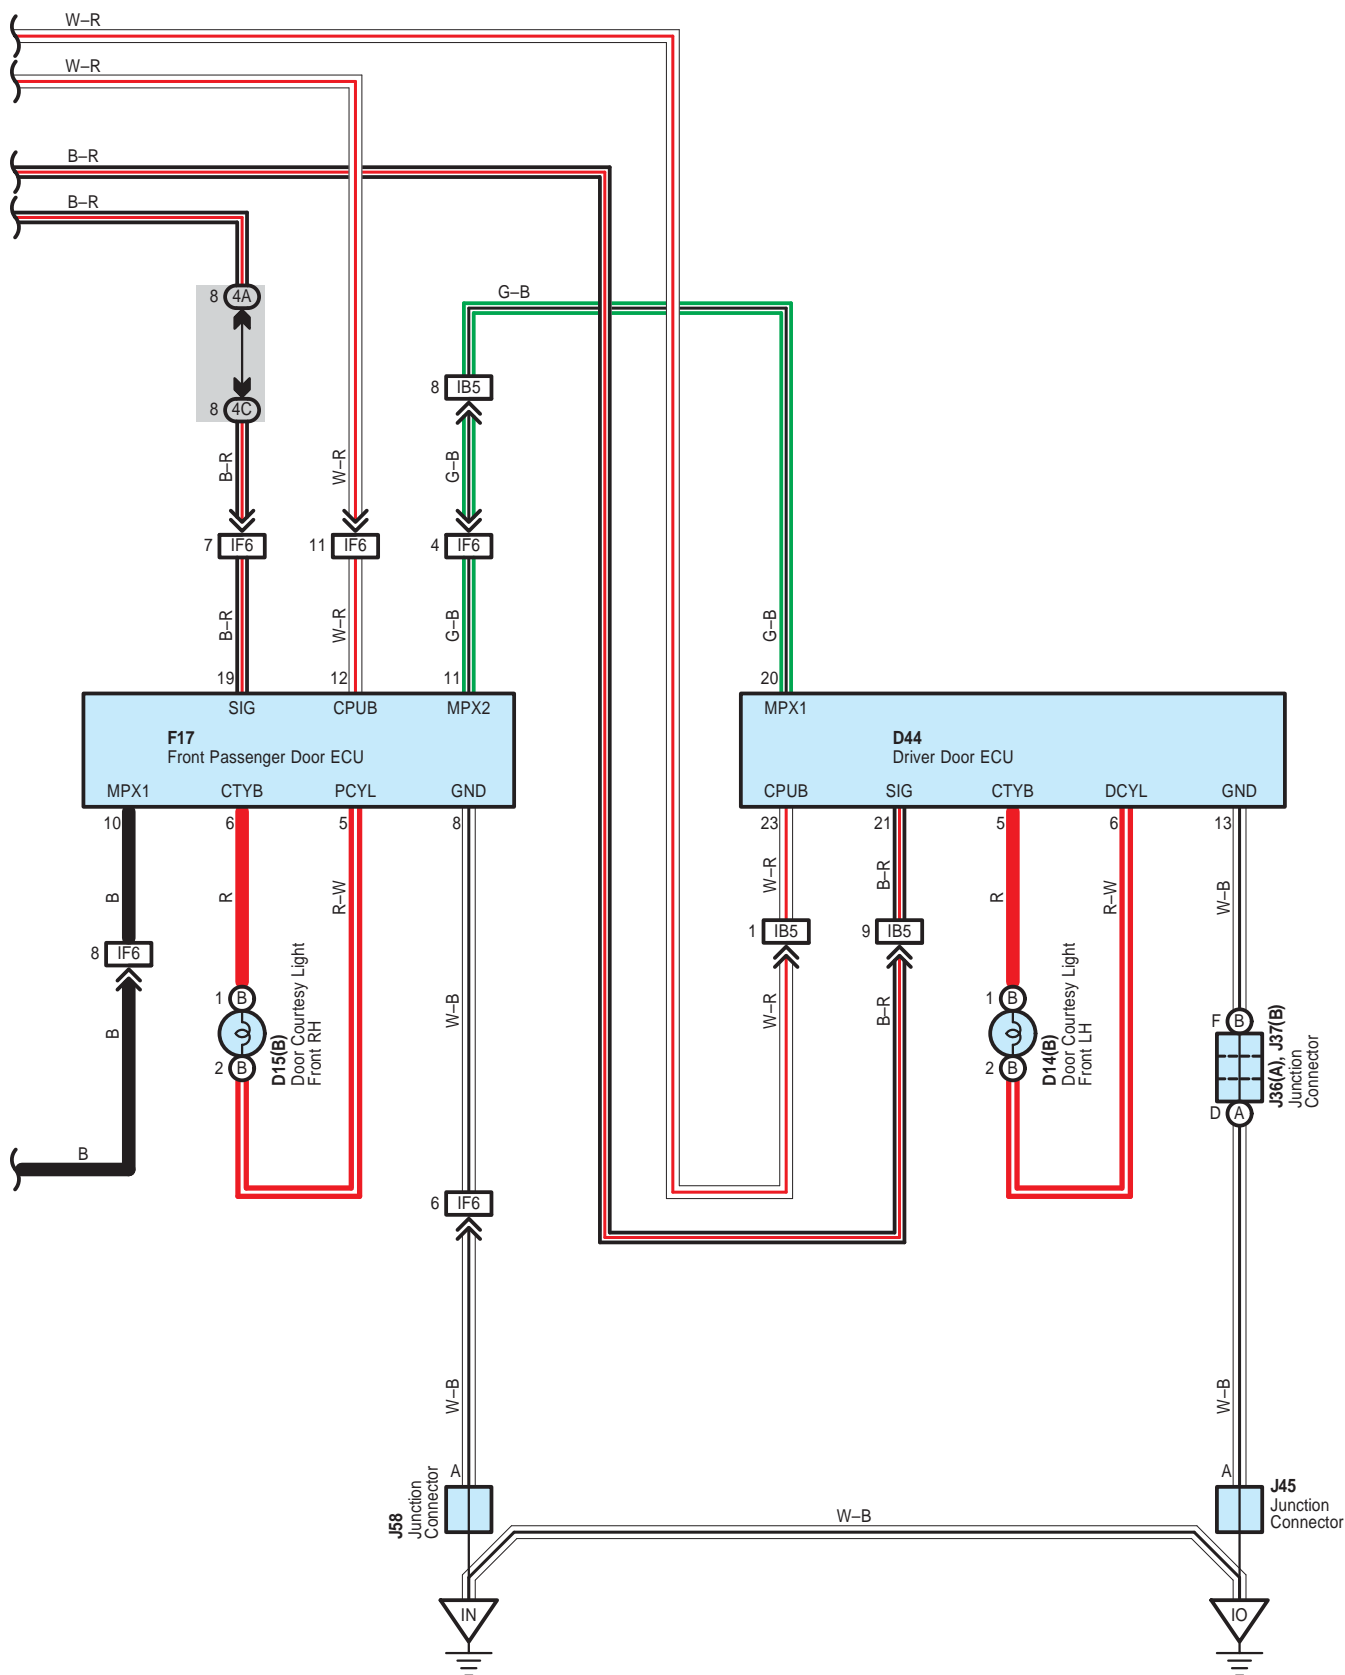

## Interior Light (Double Cab)

### : Parts Location

Code		See Page	Code		See Page	Code		See Page
B9	A	72	D37	76		J43	B	74
B10	B	72	D38	76		J45		74
B11	C	72	D39	76		J49	A	74
C11	A	72	D44	76		J50	B	74
C12	B	72	F17	76		J58		74
D14	B	76	I22	73		O8		76
D15	B	76	I26	B	76	R4		77
D16		76	J36	A	74	S3		75
D17		76	J37	B	74	V6	B	77
D34		76	J38	A	74	V7	B	77
D35		76	J39	B	74			
D36		76	J42	A	74			

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		
1G		
1H		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1M	49	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		
4D		
4E		

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB5	92	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF6	93	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IK1	93	Floor Wire and Cowl Wire (Right Kick Panel)
IK2		
BL1	94	Rear Door No.1 Wire LH and Floor No.2 Wire (Left Side of Center Pillar)
BM1	94	Rear Door No.1 Wire RH and Floor Wire (Right Side of Center Pillar)
BP3	94	Frame Wire and Floor No.2 Wire (Under the Driver's Seat)

### : Ground Points

Code	See Page	Ground Points Location
IN	92	Right Kick Panel
IO	92	Left Kick Panel
BS	94	Surrounding of the Front of the Fuel Tank

