





Audio System with RSES (Double Cab)

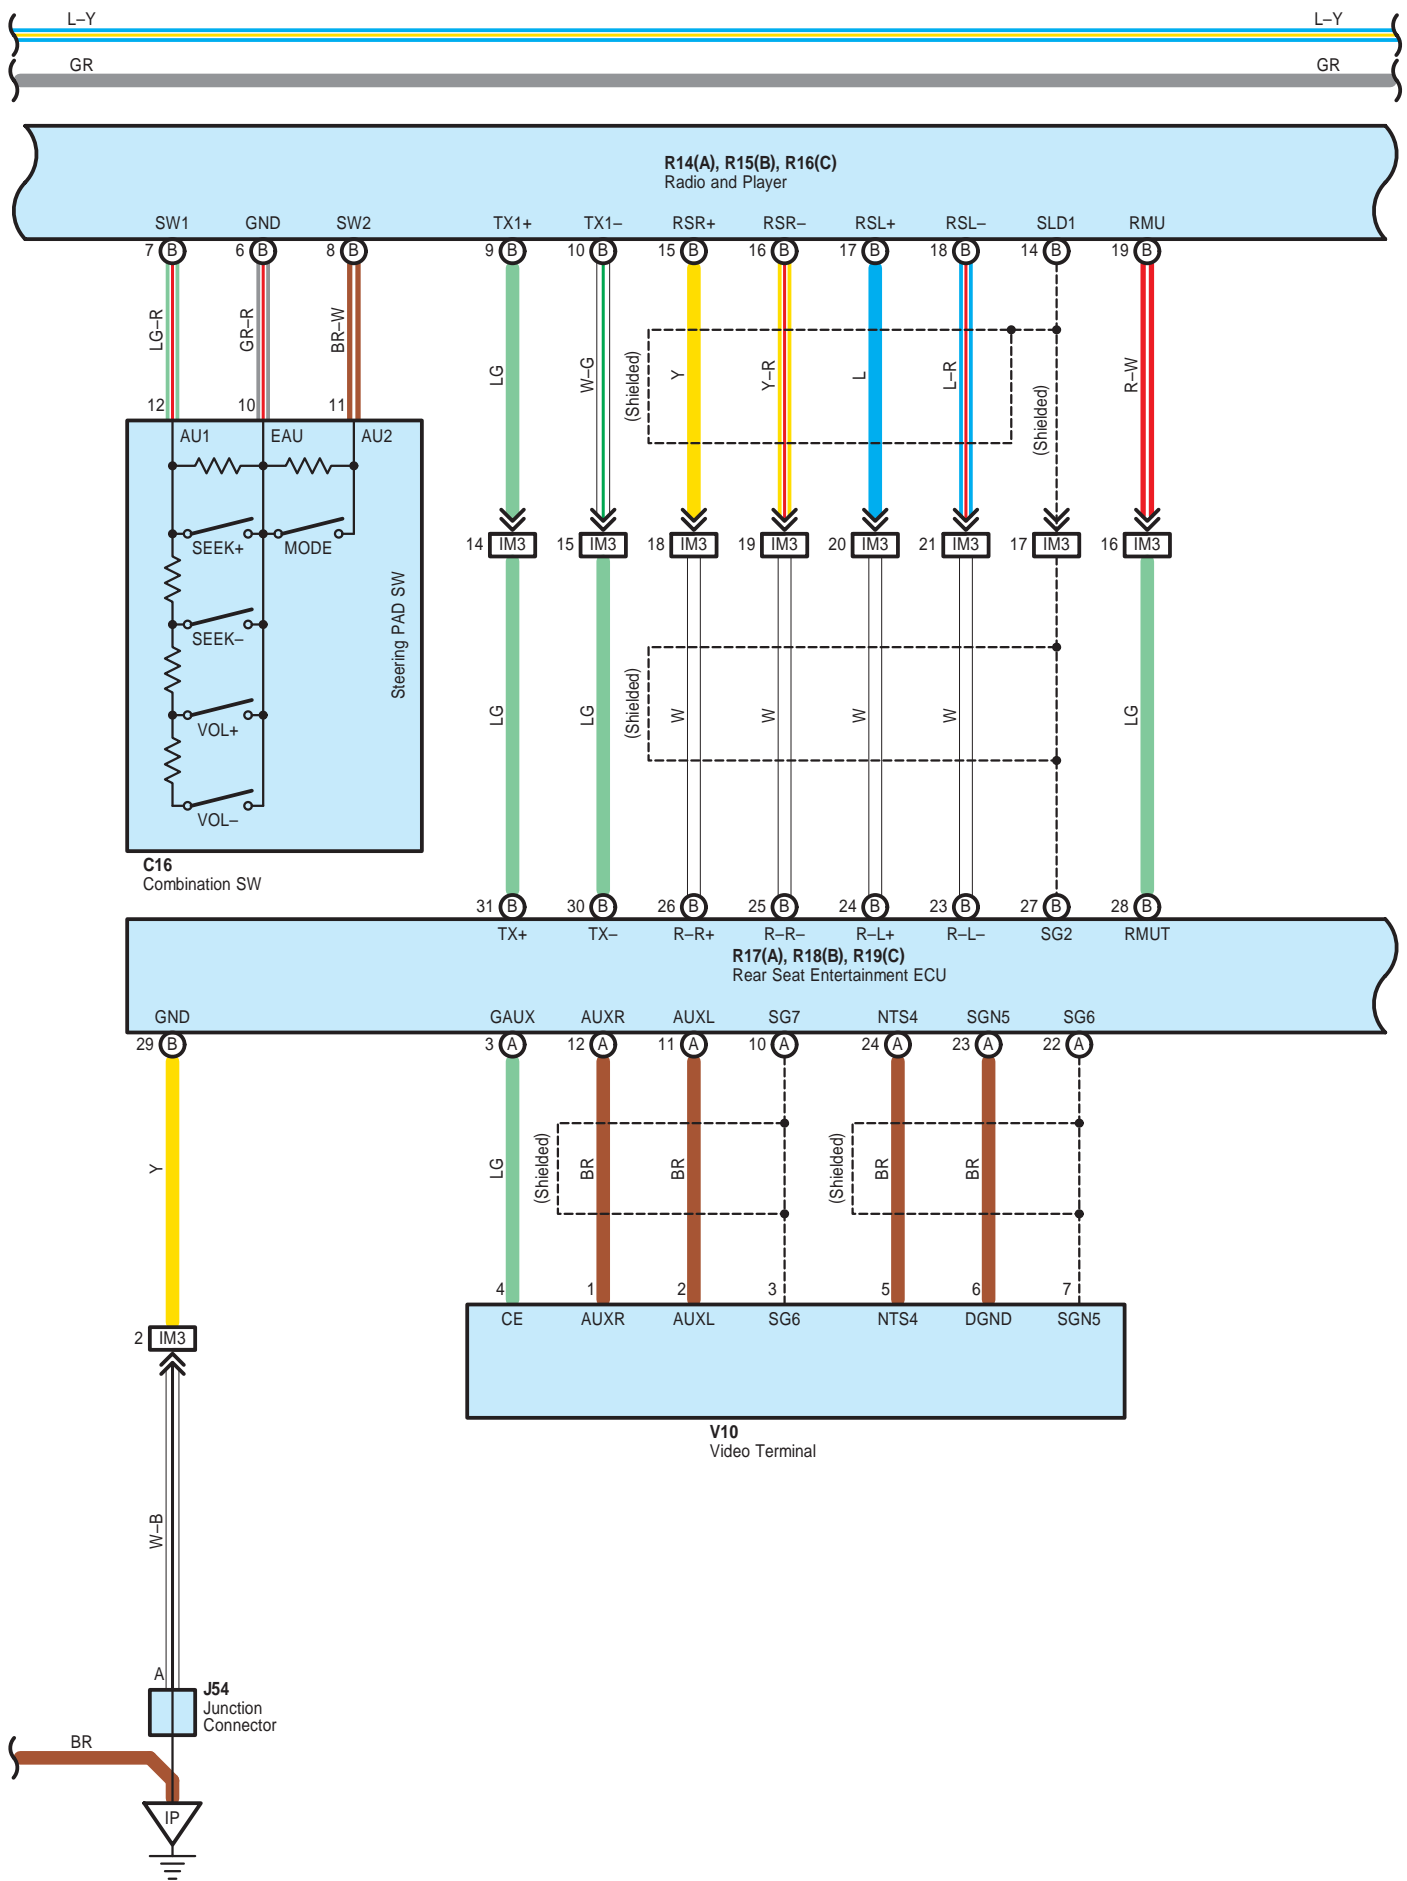

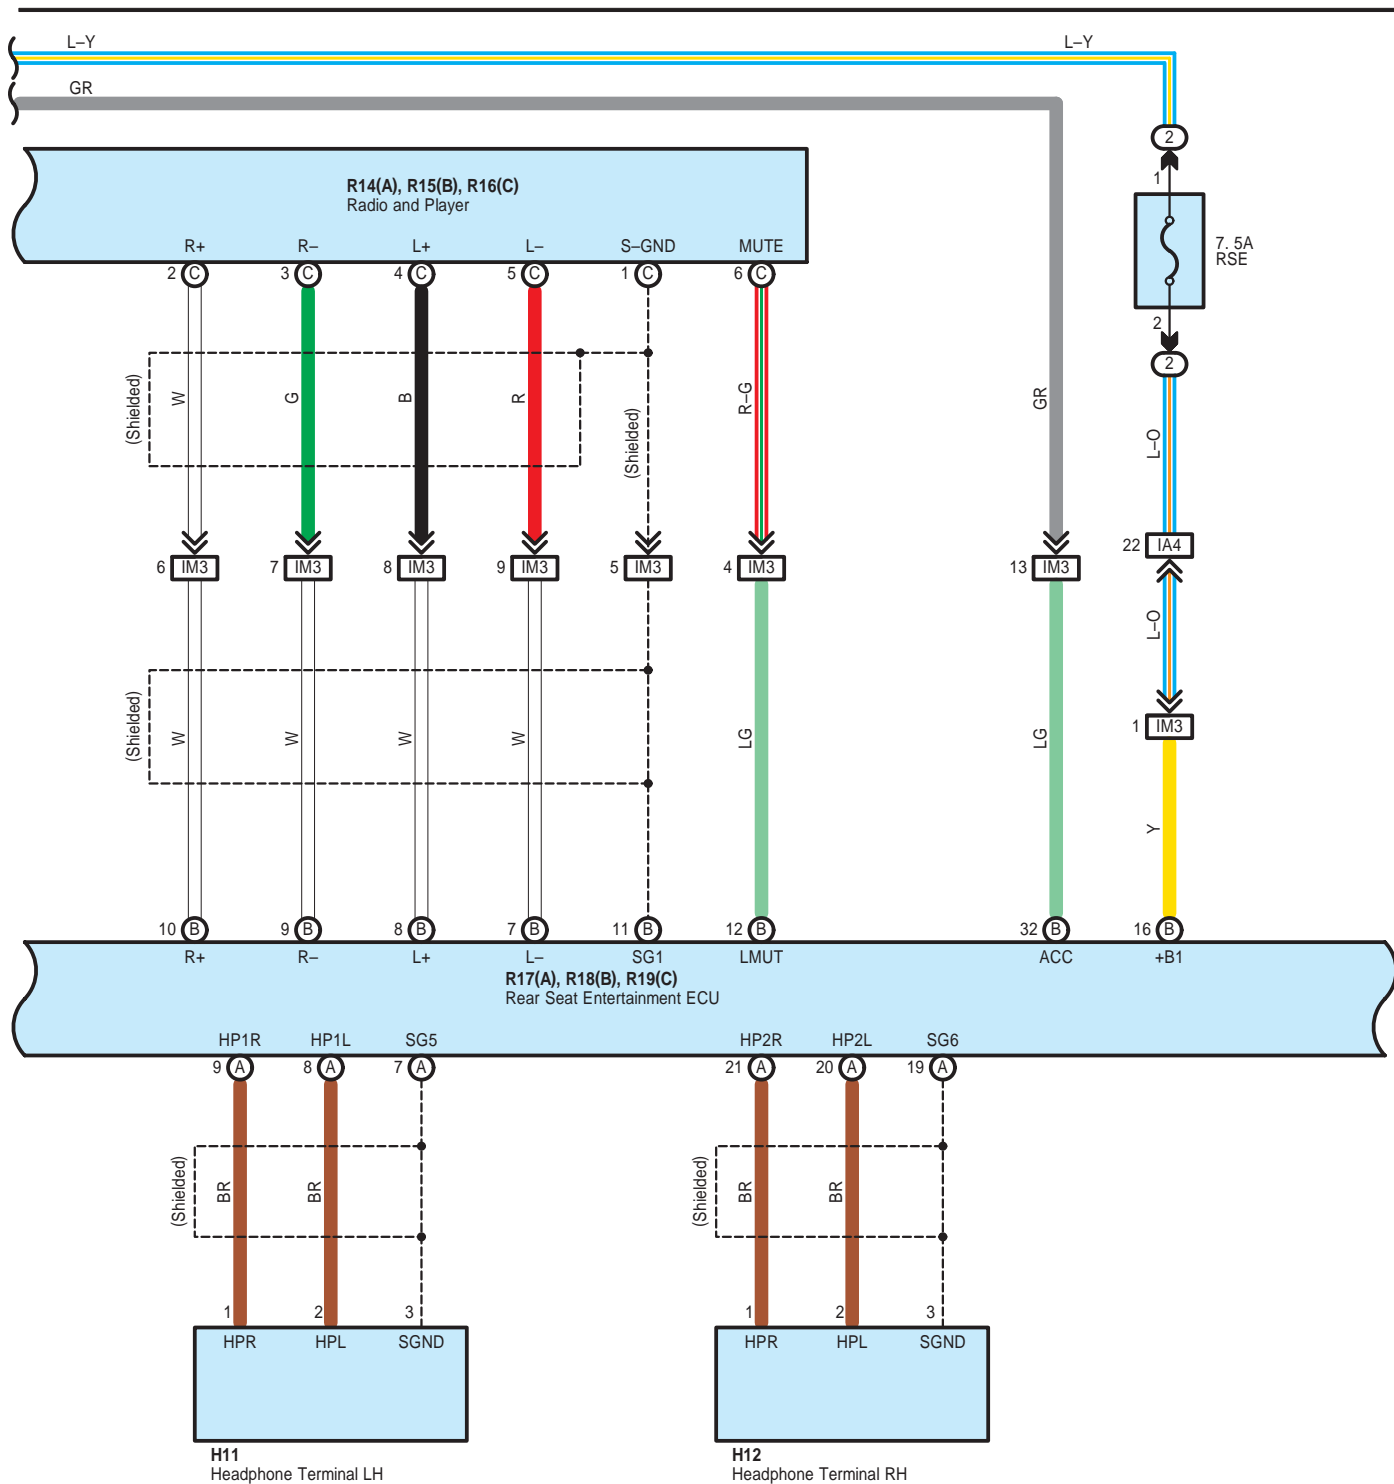

Audio System with RSES (Double Cab)

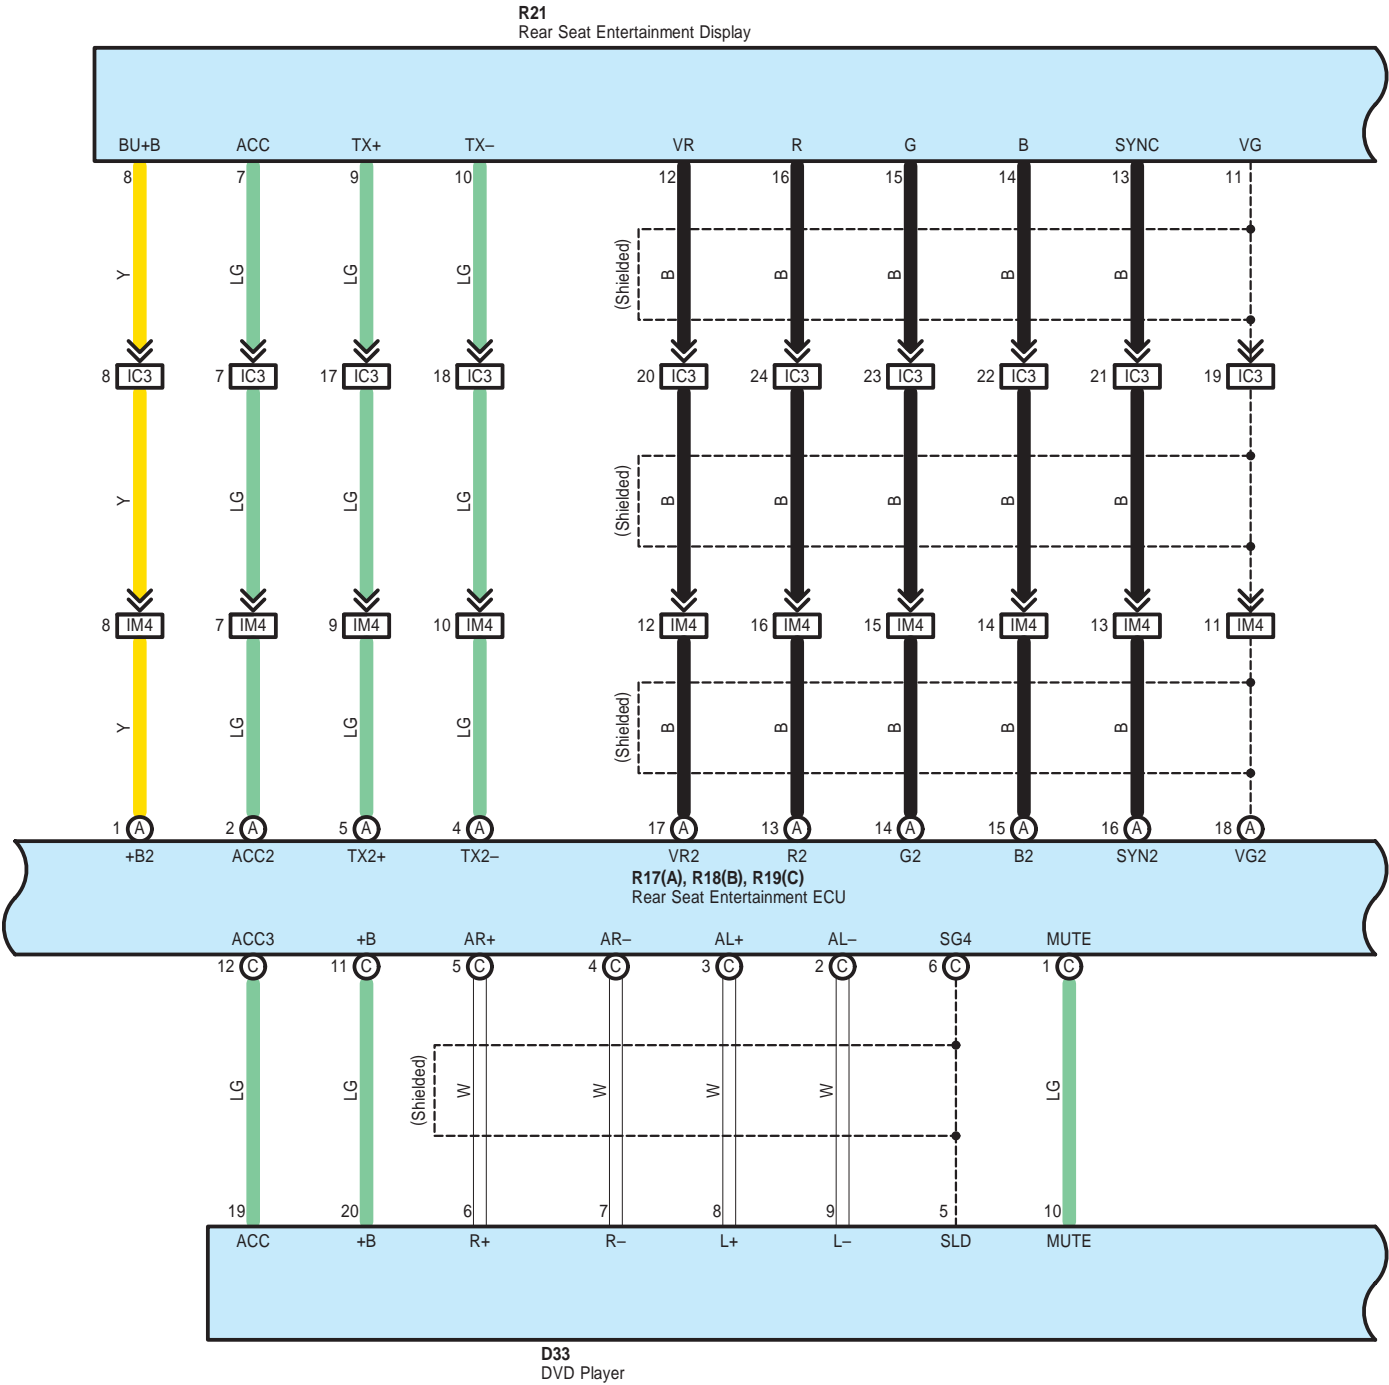

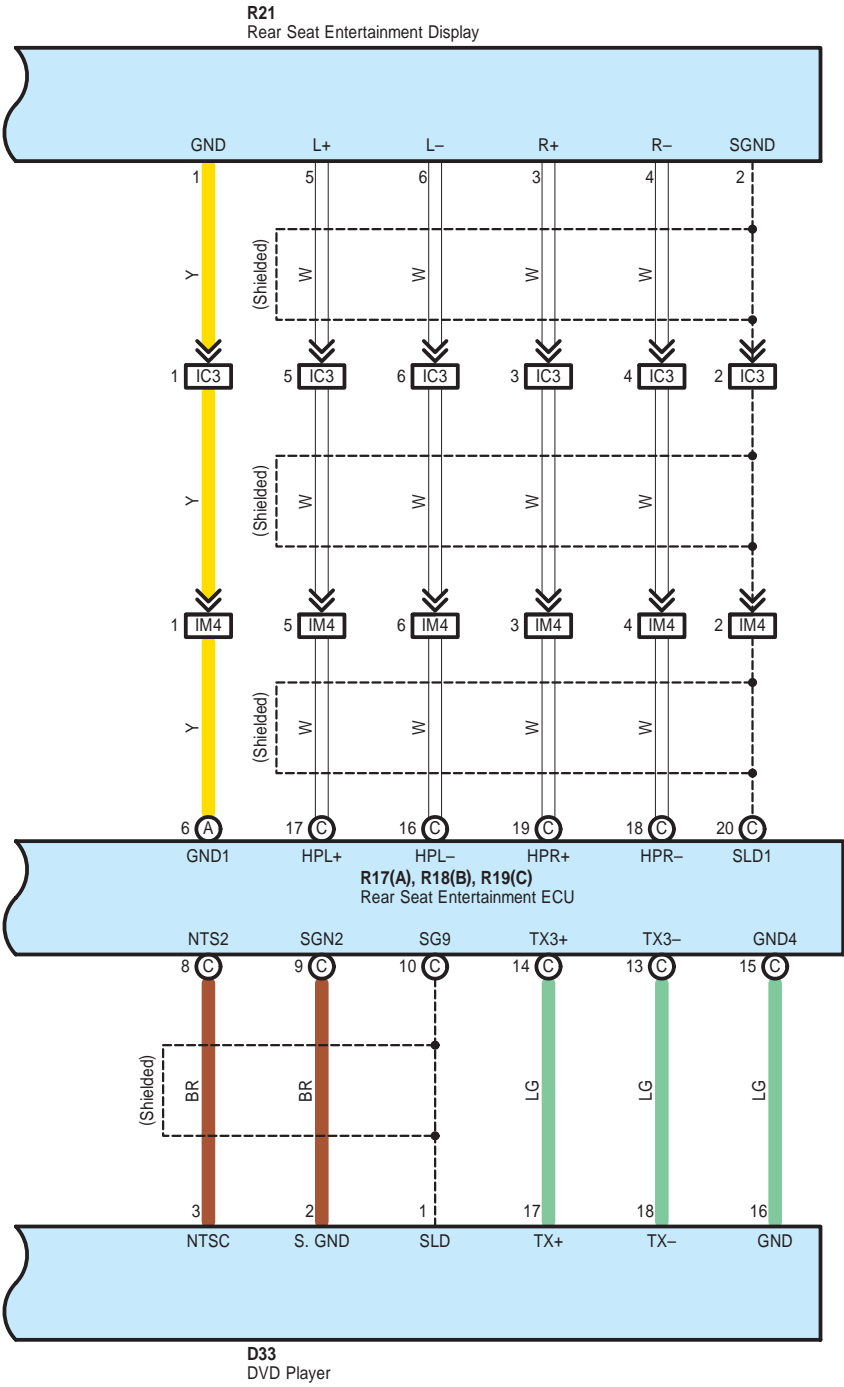

Audio System with RSES (Double Cab)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C16		72	J43	B	74	R18	B	75
D33		73	J54		74	R19	C	75
F15		76	J60		76	R21		77
F16		76	R6	B	77	S23	A	77
H11		73	R7	B	77	S24	B	77
H12		73	R14	A	75	T7	B	77
J40	A	74	R15	B	75	T8	B	77
J41	B	74	R16	C	75	V10		75
J42	A	74	R17	A	75			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	42	Engine Room R/B No.2 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
2A	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4C		
4D		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IB5	92	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	92	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IF6	93	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IK1	93	Floor Wire and Cowl Wire (Right Kick Panel)
IL1	93	Floor No.2 Wire and Cowl Wire (Instrument Panel Brace RH)
IL2	92	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
IM3	92	Console Box Wire and Cowl Wire (Rear Console)
IM4		
BL1	94	Rear Door No.1 Wire LH and Floor No.2 Wire (Left Side of Center Pillar)
BM1	94	Rear Door No.1 Wire RH and Floor Wire (Right Side of Center Pillar)

: Ground Points

Code	See Page	Ground Points Location
IP	92	Instrument Panel Brace LH
BR	94	Back Panel Left

