



REMOVAL

REMOVE CENTER CLUSTER INTEGRATION PANEL

- Remove the 3 heater control knobs.
- Remove the 5 screws.
- Remove the integration control panel by pulling the portions indicated by arrows in the illustration.
- Disconnect the connector.