


INSPECTION

INSPECT AIR INLET SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 2.
- (b) Check the motor arm rotates counterclockwise and stops in the "FRESH" position.

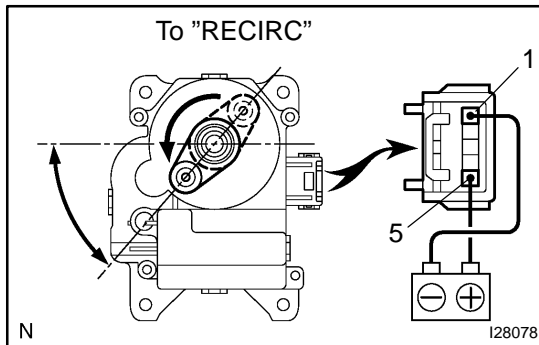

- (c) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
- (d) Check the motor arm rotates counterclockwise and stops in the "RECIRC" position.