



## DISASSEMBLY

### 1. REMOVE PRESSURE PLATE


- (a) Using SST and a socket wrench, remove the shaft bolt.  
SST 07112-76060  
**Torque: 13.2 N·m (135 kgf·cm, 9 ft·lbf)**

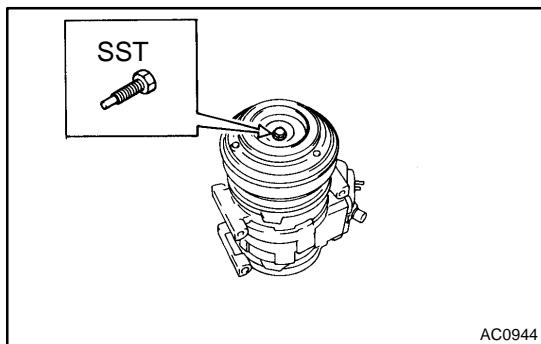


- (b) Install SST on the pressure plate.  
SST 07112-66040

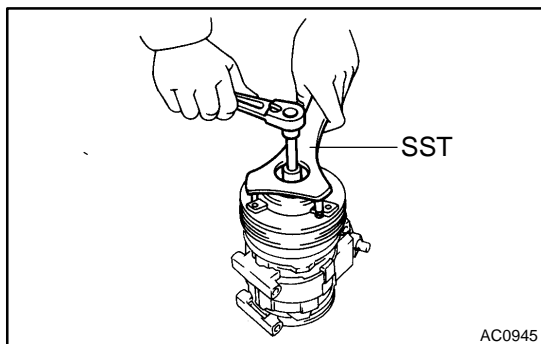

- (c) Using SST and a socket wrench, remove the pressure plate.  
SST 07112-66040, 07112-76060,

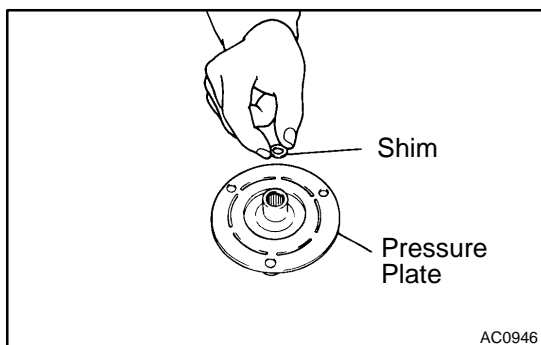


- (d) Remove the shims from the pressure plate.

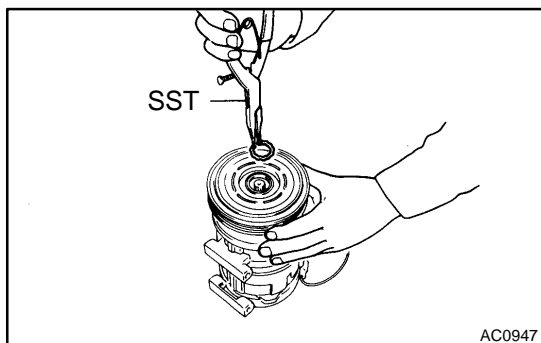


### 2. REMOVE ROTOR

- (a) Using SST, remove the snap ring.  
SST 95994-10020

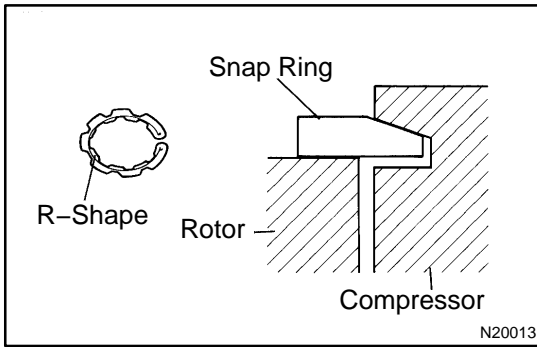

**NOTICE:**


The snap ring should be installed so that its beveled side faces up.

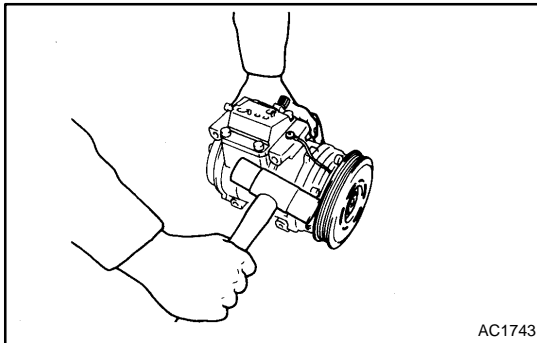

(b) Using a plastic hammer, remove the rotor from the shaft.


**NOTICE:**

Be careful not to damage the pulley when tapping on the rotor.

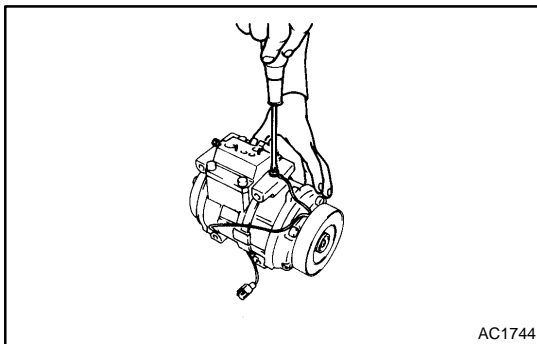


**3. REMOVE STATOR**

(a) Disconnect the stator lead wire from the compressor housing.

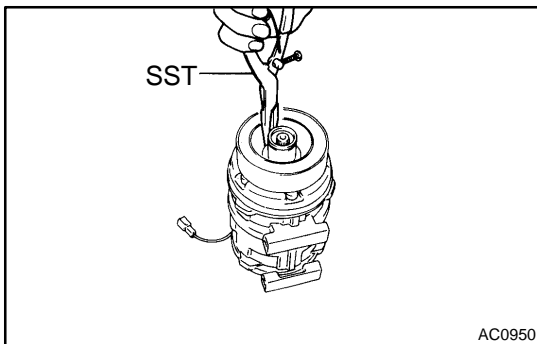


(b) Using SST, remove the snap ring.

SST 95994-10020

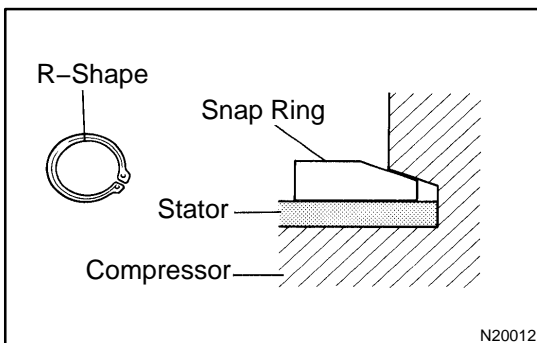

**NOTICE:**

The snap ring should be installed so that its beveled side faces up.

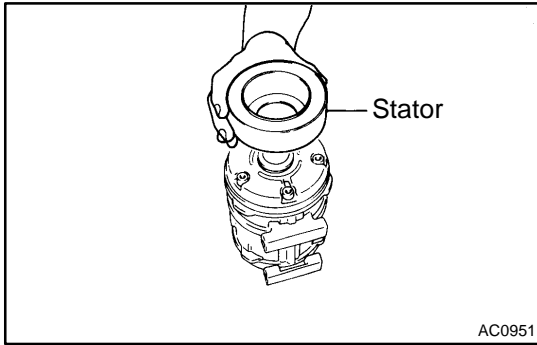

(c) Remove the stator.