


## INSPECTION

### 1. INSPECT BLOWER SPEED CONTROL SWITCH CONTINUITY

Switch position/ Circuit	Tester connection	Specified condition
OFF	–	No continuity
LO	1 – 3	Continuity
M1	1 – 3 – 4	Continuity
M2	1 – 3 – 8	Continuity
HI	1 – 3 – 5	Continuity
Illumination circuit	6 – 7	Continuity


If continuity is not as specified, replace the switch and check the bulb.

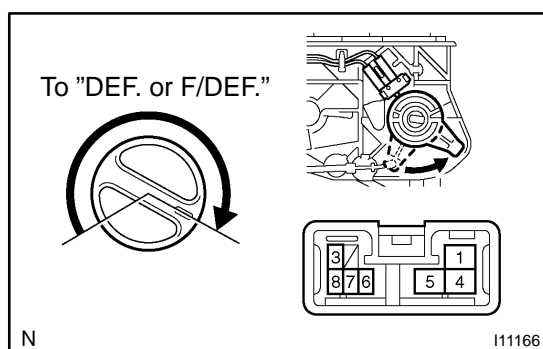

### 2. INSPECT DEF. MODE SWITCH

- (a) Check the continuity exists between terminals 1 and 3 of the blower switch connector when turning the mode selector to the DEF. position and F/DEF. position.

If no continuity exists, proceed to the next step.

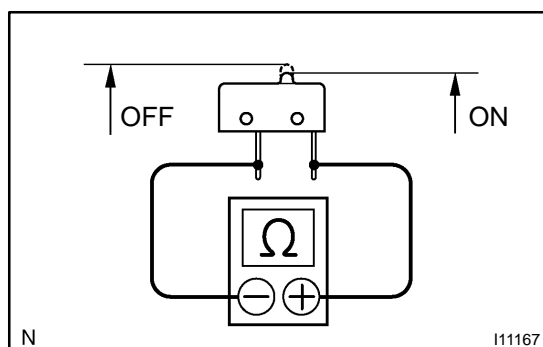

- (b) Check the continuity exists between the terminals of the A/C mode switch.

If no continuity exists, replace the A/C mode switch.

If continuity exists, check or replace the heater control housing base.