
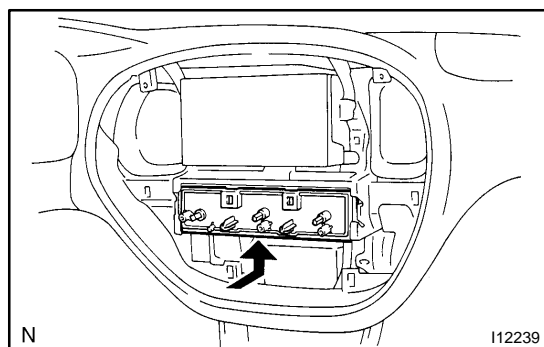



## INSTALLATION

### 1. INSTALL HEATER CONTROL ASSEMBLY

- (a) Connect the connectors.
- (b) Pass the heater control as shown in the illustration.

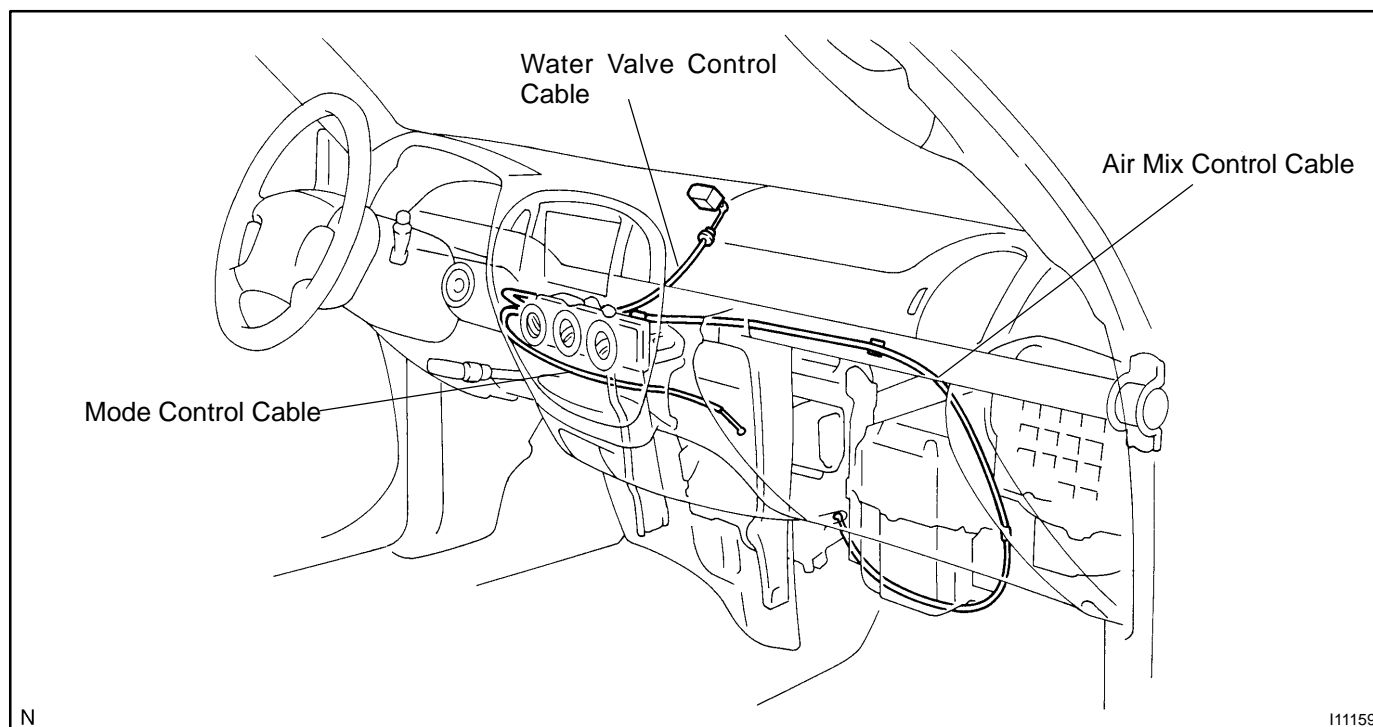


- (c) When using the removed one:  
Install the heater control assembly.

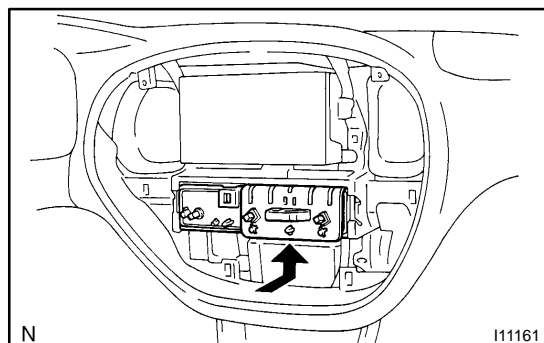

- (d) When using a new one:  
Install the heater control assembly.

**2. ADJUST HEATER CONTROL CABLES**


- (a) Set the mode control dial at the "FACE" position.
- (b) Set the temperature control dial at the "MAX. COOL" position.

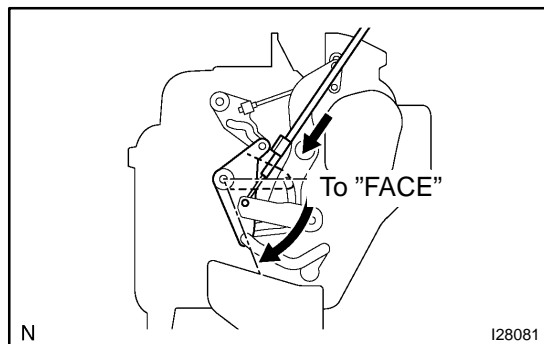

- (c) Adjust the mode control cable.  
Pull the air inlet control link to the "FACE" position, connect the control cable and lock the clamp.

**HINT:**


Lock the clamp while lightly pushing the outer cable in the direction shown by the arrow in the illustration.

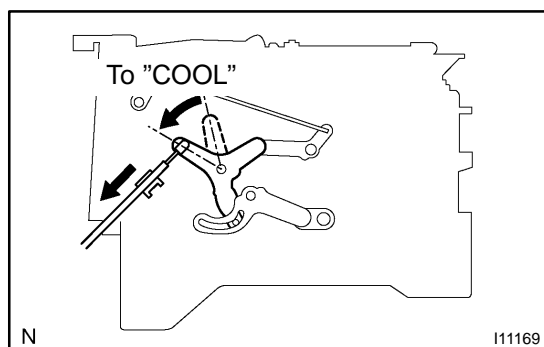

- (d) Adjust the air mix control cable.  
Pull the air inlet control link to the "COOL" position, connect the control cable and lock the clamp.

**HINT:**

Lock the clamp while lightly pulling the outer cable in the direction shown by the arrow in the illustration.

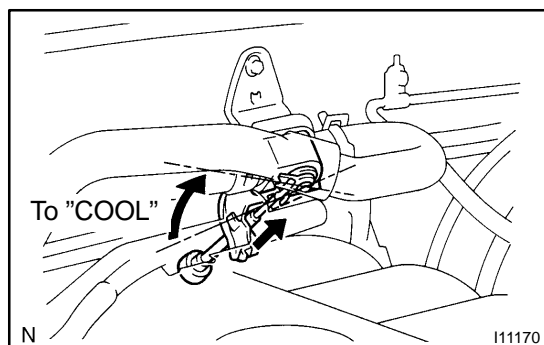


- (e) Adjust the water valve control cable.  
Pull the air inlet control link to the "COOL" position, connect the control cable and lock the clamp.

**HINT:**

Lock the clamp while lightly pulling the outer cable in the direction, shown by the arrow in the illustration.

3. **INSTALL HEATER TO REGISTER DUCT NO. 4**
4. **INSTALL LOWER NO. 2 FINISH PANEL**
5. **INSTALL GLOVE COMPARTMENT PANEL**
6. **INSTALL HEATER TO REGISTER DUCT NO. 2**
7. **INSTALL LOWER LH FINISH PANEL**  
(See page [BO-120](#))

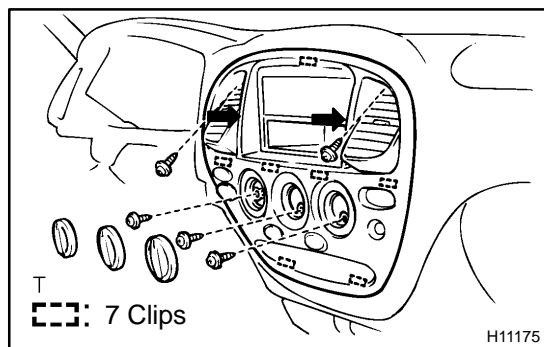**8. INSTALL CENTER CLUSTER INTEGRATION PANEL**

- (a) When replacing the heater control assembly:  
Pull off the cover.
- (b) Install the center cluster integration panel, then connect the 2 connectors.
- (c) Install the 5 screws.
- (d) Install the 3 heater control knobs.