


REMOVAL

1. REMOVE COOLING UNIT (See page [AC-31](#))
2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

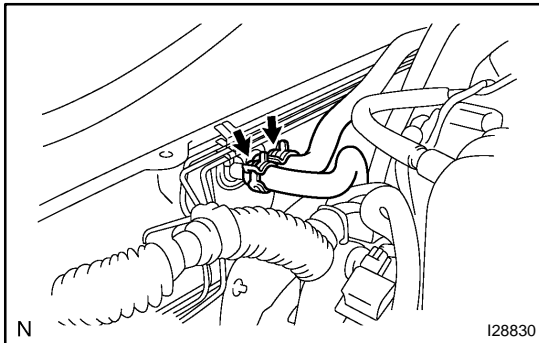

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claws of clips and slide the clips along the hoses.
- (b) Disconnect the water hoses.

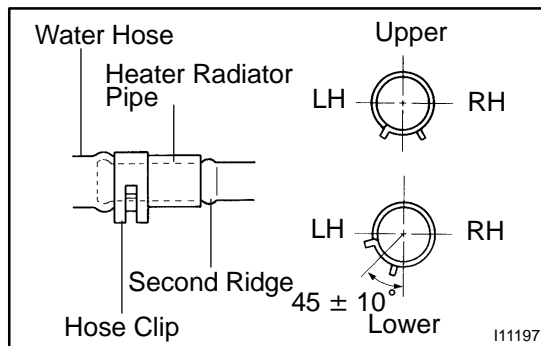

HINT:

At the time of installation, refer to the following:

- Push the water hose onto the heater radiator pipe up to the second ridge on the pipe.
- Install the hose clip to the position shown in the illustration.

4. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-111](#))
5. REMOVE DEFROSTER NOZZLE AND HEATER TO REGISTER DUCT

6. REMOVE HEATER UNIT

Remove the 3 nuts and heater unit.

