



HEATER MAIN RELAY INSPECTION

AC3RZ-02

1. Access cab, Standard cab:
REMOVE HEATER MAIN RELAY FROM ENGINE ROOM RELAY BLOCK

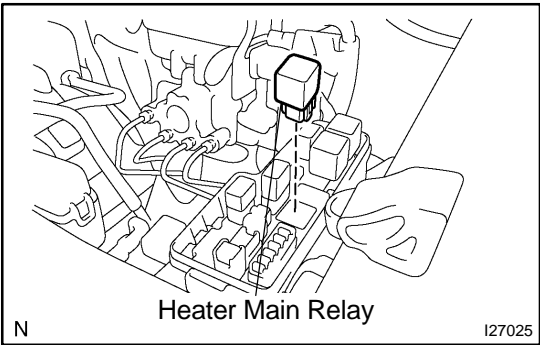

2. Double cab:
REMOVE HEATER MAIN RELAY FROM ENGINE ROOM RELAY BLOCK NO. 2

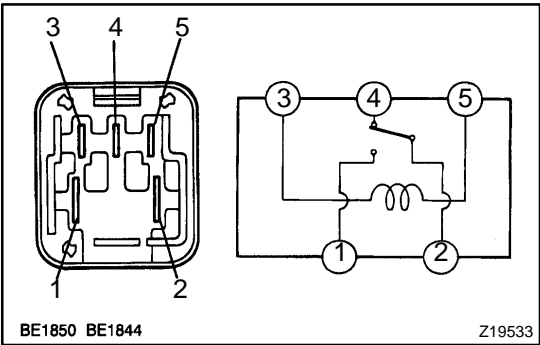

3. INSPECT HEATER MAIN RELAY (Marking: HEATER) CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 – 4 3 – 5	Continuity
Apply B+ between terminals 3 and 5	1 – 2	Continuity

If continuity is not as specified, replace the relay.