



PRESSURE SWITCH ON-VEHICLE INSPECTION

AC0E7-05

1. SET MANIFOLD GAUGE SET (See page [AC-20](#))
2. DISCONNECT CONNECTOR
3. RUN ENGINE AT APPROX. 2,000 rpm
4. SET BLOWER SPEED CONTROL SWITCH TO "HI" POSITION
5. SET TEMPERATURE CONTROL LEVER TO "MAX. COOL" POSITION
6. A/C SWITCH ON
7. INSPECT PRESSURE SWITCH OPERATION

- (a) Connect the positive (+) lead from the ohmmeter to terminal 1 and the negative (-) lead to terminal 2.
- (b) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.

If operation is not as specified, replace the pressure switch.

