

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, refer to the following:


- Evacuate air from the refrigeration system.
- Charge the system with refrigerant and inspect for leakage of refrigerant.

**Specified amount:**

**Access cab, Standard cab:**

**600 ± 50 g (21.16 ± 1.76 oz.)**

**Double cab: 530 ± 50 g (18.69 ± 1.76 oz.)**

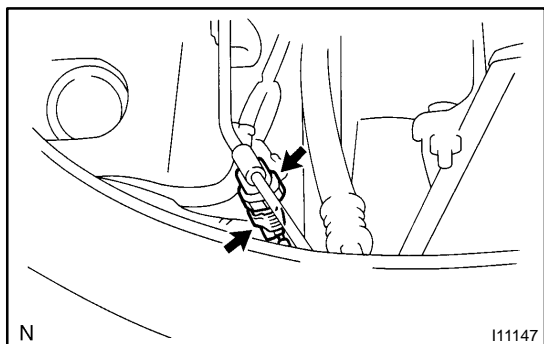

### 2. REMOVE PRESSURE SWITCH FROM LIQUID TUBE

Disconnect the connector and remove the pressure switch.

**Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)**

HINT:

- Being careful not to deform the tube, lock the switch mounted on the tube with an open end wrench, and remove the switch.
- At the time of installation, refer to the following:  
Lubricate a new O-ring with the compressor oil and install it to the switch.