


## REMOVAL

### 1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

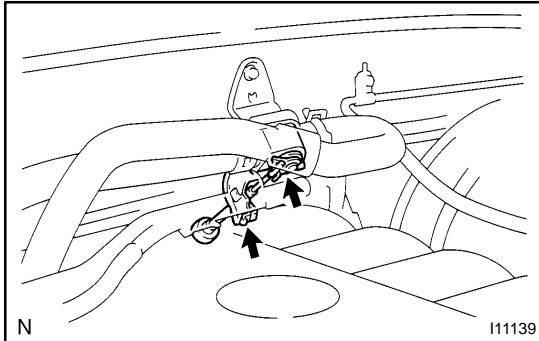


### 2. DISCONNECT WATER VALVE CONTROL CABLE FROM WATER VALVE

HINT:


At the time of installation, refer to the following:

After connection, adjust the control cable (See page [AC-105](#)).

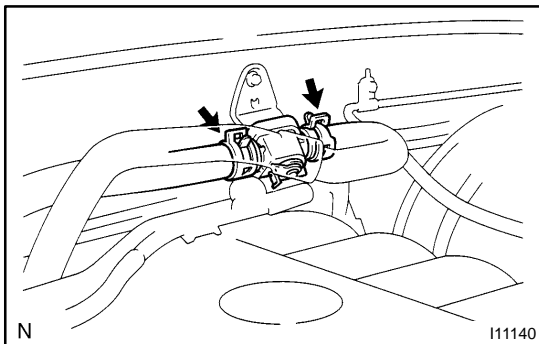

### 3. DISCONNECT WATER HOSES


- Using pliers, grip the claws of the hose clips and slide the hose clips along the hoses.
- Disconnect the water hoses.

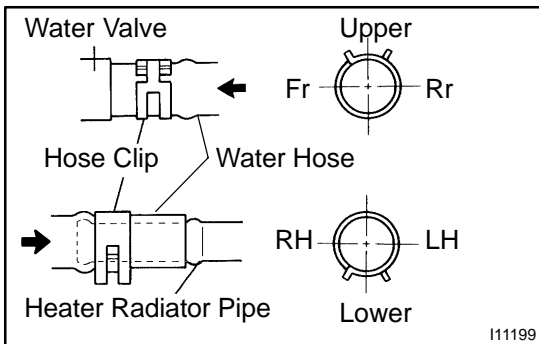

HINT:

At the time of installation, refer to the following:

- Heater radiator pipe:  
Push the water hose onto the heater radiator pipe up to the second ridge on the pipe.
- Water valve:  
Push the water hose onto the water valve pipe up to the water valve.
- Install the hose clip in the position shown in the illustration.

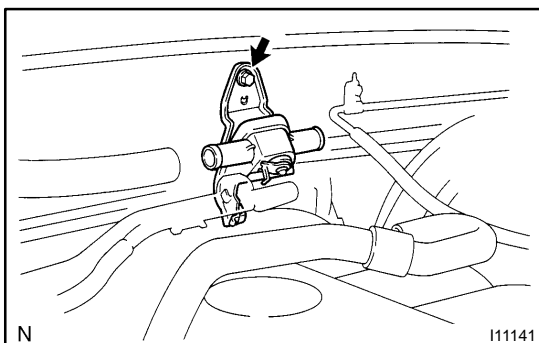

### 4. REMOVE WATER VALVE

Remove the bolt and water valve.