


REMOVAL

1. REMOVE STEERING COLUMN ASSEMBLY

(See page [SR-18](#) or [SR-33](#))

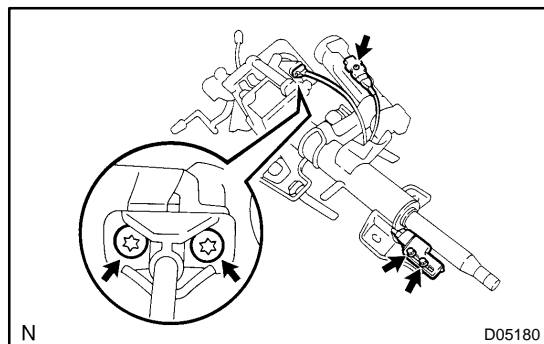

2. REMOVE PARKING LOCK CABLE ASSEMBLY

- Remove the screw and cable No. 2.
- Using a torx® socket wrench, remove the 2 screws and cable No. 1.
- Remove the spring.
- Remove the 2 bolts and parking lock cable housing.

3. REMOVE SHIFT LEVER

- Disconnect the connector.
- Using a torx® socket wrench, remove the torx® screw and shift lever.

4. REMOVE SHIFT LEVER HOUSING

Using a torx® socket wrench, remove the 3 torx® screws and shift lever housing.