


# PARKING LOCK PAWL ON-VEHICLE REPAIR


AT13Q-01

## 1. REMOVE VALVE BODY (See page [AT-12](#))

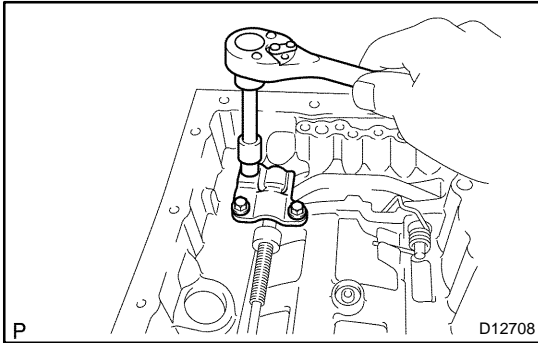


## 2. REMOVE PARKING LOCK PAWL BRACKET

Remove the 3 bolts and parking lock pawl bracket.

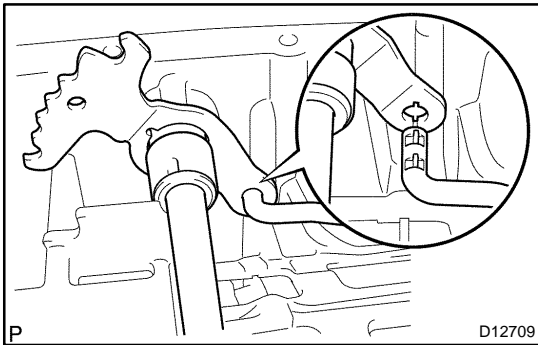

## 3. REMOVE PARKING LOCK ROD

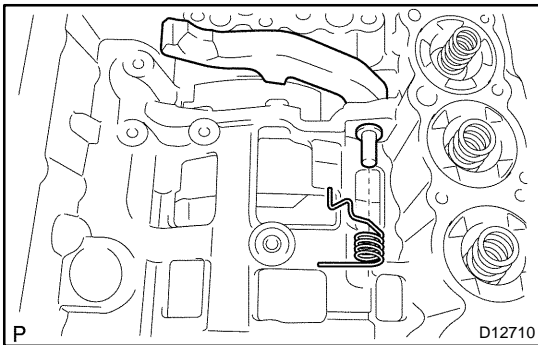


## 4. REMOVE SPRING FROM PARKING LOCK PAWL SHAFT

## 5. REMOVE PARKING LOCK PAWL AND SHAFT

## 6. INSTALL PARKING LOCK PAWL AND SHAFT

## 7. INSTALL SPRING TO PARKING LOCK PAWL SHAFT

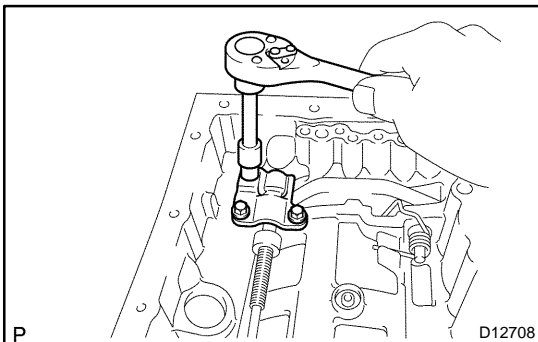

## 8. INSTALL PARKING LOCK PAWL BRACKET

Install the parking lock pawl bracket with the 3 bolts.

HINT:

- Push the lock rod fully forward.
- Check that the parking lock pawl operates smoothly.

**Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)**

## 9. INSTALL VALVE BODY (See page [AT-12](#))